

# MiCollab Advanced Messaging Dialogic DMG1008LS SIP for Analog Line Integration Technical Note

For version 6.1 and above

## Notice

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Networks™ Corporation (MITEL®). Mitel makes no warranty of any kind with regards to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes.

No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

## Trademarks

The trademarks, service marks, logos and graphics (collectively "Trademarks") appearing on Mitel's Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively "Mitel") or others. Use of the Trademarks is prohibited without the express consent from Mitel. Please contact our legal department at [legal@mitel.com](mailto:legal@mitel.com) for additional information. For a list of the worldwide Mitel Networks Corporation registered trademarks, please refer to the website: <http://www.mitel.com/trademarks>.

© Copyright 2016, Mitel Networks Corporation

All rights reserved

# Contents

<b>Preface</b>	<b>4</b>
References	4
Documentation	5
Documentation Updates	5
Help	6
Document Conventions	6
Features Supported by This Integration	7
<b>Critical Application Considerations</b>	<b>9</b>
DMG/MiCollab AM Related Critical Application Considerations	9
Telephone System/DMG Related Critical Application Considerations	10
<b>Installation Requirements</b>	<b>11</b>
Telephone System Requirements	11
Dialogic DMG1008LS Analog Inband Media Gateway Requirements	11
MiCollab AM Requirements	12
<b>Programming the Telephone System</b>	<b>13</b>
<b>Programming the Dialogic DMG1008LS Inband Analog Media Gateway</b>	<b>14</b>
Configuring the TCP/IP Address	14
<b>Configuring MiCollab AM</b>	<b>17</b>
Configuring MiCollab AM for the Integration During Initial Installation	17
Configuring Existing MiCollab AM for the Integration	20
<b>Testing the TCP/IP Connection</b>	<b>24</b>
<b>Changing the Network Binding Order on the MiCollab AM Platform</b>	<b>25</b>
Windows Server 2008 R2 with Service Pack 1	25
Windows Server 2012 R2	26
<b>Configuring Quality of Service (QoS)</b>	<b>27</b>

# Preface

This Integration Technical Note (ITN) is written for dealers who are experienced with MiCollab Advanced Messaging (MiCollab AM) and are familiar with its procedures and terminology. This document assumes that you are familiar with the features and programming of the telephone system and the Dialogic DMG1008LS Inband Analog Media Gateway.

This document describes how to integrate MiCollab AM with a telephone system through the Dialogic DMG1008LS Inband Analog, using the Session Initiation Protocol (SIP) integration.

This integration operates exclusively over a TCP/IP-based network; it uses no analog or digital voice telephony ports between the Dialogic DMG1008LS Inband Analog Media Gateway and MiCollab AM, but passes voice communication and signaling information over the network. MiCollab AM can thus be located anywhere within the LAN or WAN.

Critical application considerations are documented, as well as installation and programming procedures necessary to integrate MiCollab AM with the Dialogic DMG1008LS Inband Analog Media Gateway, referred to throughout this document as DMG.

Each Dialogic DMG1008LS Inband Analog Media Gateway supports 8 lines of the telephone system and provides a network connection to MiCollab AM. These lines are programmed in the telephone system as analog station ports to provide an inband DTMF integration to the DMG.

Calls are sent to MiCollab AM through the DMG; the DMG receives calling-party and called-party DTMF digits from the PBX, converts the digits and audio stream into the SIP/RTP protocol, and delivers it to MiCollab AM via the network interface.

The data is matched with the ringing extension, and MiCollab AM answers with the appropriate dialog. Message waiting indicator (MWI) operation is performed through the DMG.

The DMG integration is a SIP trunk integration. The MiCollab AM ports are configured as SIP trunks and uses static SIP endpoints to communicate with the corresponding gateway endpoints of the DMG. The DMG routes all outgoing calls from MiCollab AM to the telephone system.

This ITN documents the procedure for setting up the integration. The process consists of programming the telephone system, programming the DMG and configuring MiCollab AM.

Use this document in conjunction with *System Installation Guide*, *System Administration Guide*, and the MiCollab AM online help system.

## References

A catalog of technical documentation is included on the MiCollab AM Installation Media. If you are installing any advanced applications, such as Networking and Fax Server applications, you should refer to the appropriate technical documentation for application and installation information.

## Documentation

The technical documentation is produced in the PDF format and requires the PDF reader to view it. The documentation set for this MiCollab AM includes the following documents and resources:

- **Developer Resources.** Contains programming guides and API references for developers for integrating the server clients and web applications with MiCollab AM.
- **Integration Technical Notes (ITN).** Contains a set of guides that describe the integration methods and instructions for a variety of phone systems to work with MiCollab AM. The ITNs are generally used by resellers or administrators who are experienced with MiCollab AM and familiar with the integration procedures and terminology.
- **Quick Reference Card (QRC).** Contains shortcuts and quick instructions telling subscribers how to access and use the messaging system.
- **Server Documentation.** Available as a PDF only. Contains administrative guides for administrators about installing, configuring, and administering the messaging system, and user guides for subscribers about accessing the messaging system and checking and sending messages.
- **Spare Parts Documentation.** Contains a set of guides that describe the instructions for installing and configuring hardware parts to work with MiCollab AM. These documents are written for Mitel certified MiCollab AM technicians who are experienced with MiCollab AM and familiar with the procedures and terminology.
- **Software Release Notice (SRN).** This notice introduces the new features, capabilities, and hardware/software requirements for the corresponding MiCollab AM version.

For more detailed documents, refer to the following list of references:

Table 1. References

Document Type	Document Title
Spare Parts Documentation	Dialogic DMG1008 Digital Media Gateway Installation and Replacement
Spare Parts Documentation	Dialogic DMG2000 Series Media Gateway Installation and Replacement
External Resource at <a href="http://www.dialogic.com">www.dialogic.com</a>	Dialogic® 1000 and 2000 Media Gateway Series Getting Started Guide
External Resource at <a href="http://www.dialogic.com">www.dialogic.com</a>	Dialogic® Media Gateway Installation and Configuration Integration Notes

## Documentation Updates

Documentation updates may be available from the following sources:

- Mitel certified technicians can view or download the latest/updated documents and program files from our partner web site: [connect.mitel.com/connect](http://connect.mitel.com/connect)

## Help

The primary source of information about MiCollab AM is the online help available within any of its administrative utilities. You can access **Help** as follows:

- Click the **Help** button in the dialog box or window in which you are working
- Press the **F1** key at any time.

## Document Conventions

The following conventions are used in this document:

- **Key Names.** Names of keys on the keyboard are shown in a box.

Example: **Enter**

When two keys must be pressed simultaneously, they are joined by a + sign.

Example: **Alt** + **Tab**

- **Reference to Document.** *Italics* fonts can also signify the titles of other documents.

Example: Refer to *System Installation Guide*.

- **UI Element Names.** Names of UI elements such as dialog windows, screens, menu items, tabs, buttons, icons, etc. are shown in bold.

Example: On the **Startup** screen, click the **Start** icon.

- **User Input.** Information required to be typed is shown in italics.

Example: Type the password *voicemail*.

- **Warning, Caution, Important, and Notes.** Text for the contents that require attention are shown as follows:

**WARNING** A warning paragraph advises you of circumstances that can result in the loss of data, harm to the system server platform, or personal harm.

**CAUTION** Failure to follow these recommendations can result in unauthorized access to the system and consequent loss of data.

**IMPORTANT** An important paragraph gives decision-making information or informs you of the order in which tasks need to be completed.

**NOTE** A note gives additional information, provides an explanation, or indicates an exception to the information in the preceding text.

## Features Supported by This Integration

The features supported with the Dialogic DMG1008LS Inband Analog integration are inherent to the features supported by the telephone system you are connecting to it via analog ports and inband integration. In general, if the telephone system supports the feature the DMG supports the feature. The following tables list the features supported using the Dialogic DMG1008LS Inband Analog Media Gateway integration.

Table 2. Call forward to personal greeting support for these common call types

Divert to MiCollab AM on	Supported
No Answer	Yes
Busy	Yes
Forward All	Yes
Do Not Disturb	Yes

Table 3. Integration Features Supported for Dialogic DMG1008LS Inband Analog

Feature	Supported	Notes
Automatic subscriber logon	Yes	
ANI/CLI	Yes	
Announce Busy greeting on forwarded calls	Yes	
Call screening	Yes	Note 1
Caller queuing	Yes	Note 2
DNIS	Yes	
End-to-end DTMF, attendant console	Yes	
End-to-end DTMF, proprietary telephones	Yes	
End-to-end DTMF, joined calls	No	
Fax Tone Detection	Yes	
Internal calling party ID for reply	Yes	
Live record, integrated	No	Note 3
Live reply to sender	Yes	
Message notification callouts	Yes	

MWI, set/clear	Yes	
MWI, inband/outband	Outband	
Networking, analog	Yes	
Overflow from MiCollab AM to attendant	Yes	
Overflow to MiCollab AM from attendant	Yes	
PBX-provided disconnect signaling	Yes	
Revert to operator	Yes	
SRTP	No	Note 4
TLS	No	Note 4
Transfers, blind	Yes	
Transfers, confirmed	Yes	
Transfers, fully supervised	Yes	
Transfers, monitored	Yes	
Trunk ID for call routing	Yes	
Multiple Integrations	Yes	Note 5

## NOTES

1. Only available when using supervised transfers
2. Caller Queuing is specific to each local Call Server. Call Servers within the system are unaware of queued calls to the same subscriber on other Call Servers. For more information, refer to [Critical Application Considerations](#).
3. Live Record is not supported with this SIP integration.
4. MiCollab AM supports negotiation for SRTP media streams using the Secure RTP profile defined in RFC 3711 with the offer/answer model defined in RFC 3264. To enable SRTP, RTP, or both, see integration configuration options documentation for the switch. The default setting is RTP. Please note that MiCollab AM doesn't support RFC 5939 which is an extension of RFC 3264. Also, please note that SRTP has not been qualified for this integration, and no switch programming is available for setting up SRTP on the switch side. However SRTP may be enabled as described above, and technical support will be available on a best effort basis.
5. See [Critical Application Considerations](#).



# Critical Application Considerations

Known limitations or conditions within the telephone system and MiCollab AM that affect the integration performance are listed here. General recommendations are provided when ways to avoid these limitations exist.

## DMG/MiCollab AM Related Critical Application Considerations

- The primary (public) network interface card (NIC) must be the first network connection in the network binding order. On a MiCollab AM server with two or more NICs, the NIC that supports this integration must not occupy first place in the operating system's binding order. MiCollab AM binds and communicates to other servers and subscribers on this network connection. For more information, refer to the section, [Changing the Network Binding Order on the MiCollab AM Platform](#).
- If you make changes to the parameters on the Integrations Options dialog box of the Call Server, you must restart the Call Server to update the DMG configuration. The DMG is configured remotely, during startup of MiCollab AM.
- The network interface card (NIC) supporting the DMG integration must be a 100MB full duplex link or greater. The G.711 PCM codec requires approximately 80kbps for one-way conversation, or 160kbs per MiCollab AM port.
- Use the G.711 protocol is used to communicate with the DMG. MiCollab AM does not support the G.729AB protocol.
- Dialogic software assigns any Dialogic linecards in the system to the first ports in the system. If MiCollab AM is configured for both Dialogic cards and a TCP/IP integration, the Dialogic cards are automatically assigned to the first ports. If this configuration is unacceptable, you can manually re-assign ports using the Boards tab of the MiCollab AM Configuration utility.
- The Dialogic DMG1008LS Inband Analog Media Gateway supports eight ports. Assign each 8-port DMG to a separate integration in MiCollab AM. MiCollab AM must have a unique integration configured for each Dialogic DMG1008LS Inband Analog Media Gateway.
- A unique name must be entered in the SIP Parser Qualifier String field for each integration supporting a DMG device. This is a required parameter in the MiCollab AM Integrations Options dialog box. If you configure the DMG with a FQDN (Fully Qualified Domain Name), enter the FQDN of the DMG device in the SIP Parser Qualifier String field. Otherwise, enter a unique name, such as DMG\_1, that distinguishes SIP messages generated by one DMG device from any other DMG device in the system. This allows MiCollab AM to handle incoming calls associated with each DMG device correctly.
- Each DMG must be running version firmware version 6.0 SU7 or later. Previous versions of firmware are not supported.

- Match the hunt mode in the Switch Section Options dialog box with the type of hunting provided by the PBX. This helps to alleviate any glare conditions between the PBX and the Call Server. The default mode is Terminal.
- The Call Queuing feature does not transcend the Call Server. Calls may be queued on multiple Call Servers for the same subscriber but Call Servers do not have knowledge of calls in the queue on other Call Servers within the system. Callers may be prompted with specific information about their place in the queue; however, the information pertains to the specific Call Server on which their call is queued.
- MiCollab AM 6.1 supports up to 10 integration types (i.e. licensed integrations) in total per system. However, the following limitations apply to each Call Server:
  - Limited to 3 integration types per Call Server
  - The 3 integration types can be any mix of TDM and SIP (e.g. 1 TDM and 2 SIP)
  - Limited to 1 Mitel MiTAI or 1 Cisco UCM SCCP IP integration. Can be mixed with TDM, but not with SIP
  - Connect up to 10 telephone systems total per Call Server (e.g. 2 Avaya Communication Manager systems using SIP + 5 Avaya IP Office systems using SIP + 3 Siemens HiPath 4000 systems using Station Set Emulation)
  - SIP timers for Aastra EETS integrations are incompatible with other SIP integrations. Thus, it is not possible to have an EETS integration with any other SIP integration on the Call Server

## Telephone System/DMG Related Critical Application Considerations

- Non-numeric DTMF tones cannot be used as any character in the station number, nor can zero be used as a leading number of the extension. The maximum length of a station number is 10 digits.
- If you plan to use supervised transfers (T-type), we recommend installing the Music on Hold (MOH) feature to assure callers of proper call handling and system operation. Otherwise, callers being transferred to a station by MiCollab AM experience a period of silence and might misunderstand what is happening to their calls.
- PBX stations that support the Dialogic DMG cannot be configured as automatic call distribution (ACD) stations. DMG ports must be assigned to a hunt group.

# Installation Requirements

Review the following information before performing any of the procedures in this document. To install this integration successfully, you must meet the installation requirements for both the telephone system and MiCollab AM.

## Telephone System Requirements

- One single line analog port (2500 type) for each line connected to the Dialogic DMG1008LS Inband Analog Media Gateway configured as an inband voice mail port

## Dialogic DMG1008LS Analog Inband Media Gateway Requirements

- One analog 2500 type single line station for each DMG port
- Each Dialogic Digital Media Gateway DMG1008LS model DMG1008LSW supports eight 2-wire analog stations
- The Dialogic Digital Media Gateway DMG1008LS model DMG1008LSW must be running DMG firmware version 6.0 SU7 or later. To upgrade the DMG, visit the Mitel Connect website: [connect.mitel.com/connect](https://connect.mitel.com/connect)

**NOTE** You can upload DMG firmware version 6.0 SU7 from the MiCollab AM Installation Media version 6.1. The firmware update is located in the Utilities folder of the installation media. The path on the media is: \Utilities\Dialogic\_DMG\DMG1008LSW\6.0\SU7. For more information on installing or upgrading the DMG, refer to the *Dialogic 1008 Digital Media Gateway Installation and Replacement* spare parts document.

**IMPORTANT** Verify that the DMG1008LSW you are installing is compatible with the upgrade to version 6.0 SU7 before you upgrade it. The serial number of the DMG must be IP006578 or greater. If it is not, contact Mitel Technical Support.

- Consult the Mitel Connect web site for current Dialogic DMG software upgrades and parser file updates

## MiCollab AM Requirements

- MiCollab AM version 6.1
- A MiCollab AM software key diskette or feature file with the Dialogic Media Gateway integration enabled and one RADVISION® SIP and RTP license enabled for each port involved in the integration.
- One or two 100 MB, or 1000 MB (gigabit) network interface cards (NIC) with cables. The NIC used to communicate with the DMG must be a 100MB full duplex card or greater and must be separate and distinct from other network cards in the system.

# Programming the Telephone System

The installing technician should be technically familiar with the telephone system before attempting to program it. If your organization is not responsible for the telephone system, arrange for the telephone system vendor's representative to program it for you. Text files with information on programming inband integrations for particular telephone systems can be found in the D:\CX\Bin\Pbxinfo directory of MiCollab AM. The name of the file is \*.txt, where \* represents the name of the telephone system.

The installing technician should be familiar with programming the telephone system. For detailed information on programming and installing the telephone system, refer to the documentation provided with telephone system, consult the vendor supporting the telephone system.

# Programming the Dialogic DMG1008LS Inband Analog Media Gateway

Follow the recommendations and programming examples in this section to program the Dialogic DMG1008LS Inband Analog Media Gateway via the DMG Web interface for integration with MiCollab AM. Consult the documentation that shipped with the DMG or go online to download the *Dialogic® 1000 and 2000 Media Gateway Series Getting Started Guide* and the *Dialogic® Media Gateway Installation and Configuration Integration Notes* for more information on programming the DMG.

The DMG ships with a default TCP/IP address and requires initial setup to communicate over the same LAN as MiCollab AM. This section assumes you will use the MiCollab AM Admin console of the Call Server to initialize the DMG for service with MiCollab AM.

**IMPORTANT** The Dialogic DMG1008LS Media Gateway must have a TCP/IP address that MiCollab AM can communicate with over the network. If you do not know this information, consult your network administrator for the correct address information required for installing both the DMG and MiCollab AM.

## Configuring the TCP/IP Address

The initial programming mode of the DMG can be accessed in either of two ways—through the serial port on the rear panel of the DMG or through the DMG Web interface. Choose one of the following procedures to configure the TCP/IP address.

### To configure the TCP/IP address through the serial port:

- 1 Connect the serial port of the DMG to a serial COM port of the MiCollab AM server with a DB9 serial cable.
- 2 Select **Start > Programs > Accessories > Communications > HyperTerminal**.
- 3 Enter a value such as DMG in the New Connection dialog box, and then click **OK**.
- 4 In the Connect To dialog box select the COM port to communicate to the DMG, and then click **OK**.
- 5 In the COM port dialog box configure the COM port to the following settings:
  - Baud Rate = 38400
  - Parity = None
  - Data Bits = 8
  - Stop Bits = 1
  - Hardware Flow Control = Off
- 6 Press the **Enter** key until the prompt PIMG> appears.

- 7 At the PIMG> prompt type **pwd**.
- 8 Type the default password, *lpodAdmin*, and then press Enter.
- 9 At the PIMG> prompt type **quickcfg**, and then press **Enter**. You are prompted to enter the following information:
- 10 Enter a new TCP/IP address in the Client TCP/IP address box.
- 11 Enter a new subnet mask in the Client Subnet Mask box.
- 12 Enter the TCP/IP address of the default network gateway router in the Default Network Gateway Address box.

**NOTE** The DMG **must** be restarted for the changes to take effect.

- 13 At the PIMG prompt>, type **restart**. You should now be able to connect using the Web interface of the DMG through the LAN connection.
- 14 Proceed to the section, *Configuring MiCollab AM*.

## To configure the TCP/IP address through the Web Interface:

**NOTE** All DMG have the same default TCP/IP address at initial startup. If you are installing more than one Dialogic DMG1008LS Media Gateway you **must** connect them to the network one at a time to avoid TCP/IP address conflicts.

- 1 Connect the DMG to the LAN MiCollab AM is currently operating on.
- 2 You must temporarily change the TCP/IP address of the Call Server to access the DMG. The default TCP/IP address of the DMG is 10.12.13.74. Change the Call Server TCP/IP address so it communicates on the same subnet as the DMG. For example, 10.12.13.75.
- 3 Start the web browser on the Call Server, and then enter the following address: <http://10.12.13.74>.
- 4 When the System Login dialog box appears, enter the default user name, *admin*, and then enter the default password, *lpodAdmin*.
- 5 Click **OK**.
- 6 Select the **Configuration > IP** web page from the main menu. Change the unit's TCP/IP address from the default address by entering the new TCP/IP address in the Client TCP/IP address box.
- 7 Enter a new subnet mask in the Client Subnet Mask box.
- 8 Enter the TCP/IP address of the default network gateway router in the Default Network Gateway Address box.
- 9 Click the **Apply Changes** button to save the configuration in the database.
- 10 Click Restart, or select **System > Restart** from the main menu. When the Restart Web page appears, click **Restart Unit Now**.

**NOTE** The DMG **must** be restarted for the changes to take effect.

- 11 Change the temporary Call Server TCP/IP address back to the previous working TCP/IP address. You should now be able to connect to the DMG Web interface using the new TCP/IP address.

**12** Proceed to the section, *Configuring MiCollab AM*.



# Configuring MiCollab AM

Once the telephone system is programmed, you must configure MiCollab AM for the integration. There are two ways you can configure MiCollab AM: (1) Configuring MiCollab AM for the telephone system integration when you are installing MiCollab AM for the first time, or (2) Configuring the existing MiCollab AM with the new telephone system integration.

Click the appropriate steps that your system requires from below and follow the steps:

- [Configuring MiCollab AM for the Integration During Initial Installation](#): Integrate the telephone system while you install MiCollab AM for the first time.
- [Configuring Existing MiCollab AM for the Integration](#): Integrate a new telephone system on your existing MiCollab AM system.

**NOTE** For general information on integrations, refer to the **Integrating MiCollab AM with the Telephone System** chapter in *System Installation Guide*, and the topic, **Integrate the Telephony Server with the Telephone System**, in the online help.

## Configuring MiCollab AM for the Integration During Initial Installation

To configure MiCollab AM for the integration during the initial installation:

- 1 In the **Database Initialization Parameters** dialog box, configure the following options:
  - a In the **Mailbox Length** box, enter the mailbox length in digits.
  - b In the **First Extension** box, enter first extension number for the first line. You can also leave the **First Extension** box empty.
  - c From the **Manufacturer** dropdown list, select the manufacturer of your telephone system.
  - d From the **Model** dropdown list, select the switch model type you are integrating with.
  - e From the **Integration Type** dropdown list, select **DMG SIP**.
- 2 Click **Next**. The **Board Options** dialog box displays.
  - a From the **Manufacturer** dropdown list, select **RadVision**.
  - b From the **Model** dropdown list, select **SIP STACK**.
  - c In the **Name** field, the name for this board is automatically generated. Enter a new name if necessary.
  - d From the **Protocol** dropdown list, select **SIP IP RTP**.
  - e In the **Number of Lines** field, enter the number of lines this board uses. The total number of lines is limited by the capacity of the board and the number of **Available Line Licenses**.

- 3 Click **OK**. The **Switch Options** dialog box displays.
- 4 If necessary, make any changes to the default settings your site requires in the **Switch Options** dialog box.

**NOTE** The settings related to the telephone system in the **Switch Options** dialog box are filled in automatically when you select the correct telephone system during setup.

If you need to customize settings on the **Switch Options** dialog box to meet requirements specific to your site, refer to the documentation accompanying the telephone system, the online help, and the guide, *System Installation Guide*.

- 5 Click **OK**. The **Integration Options** dialog box displays.
- 6 In the **Integration Options** dialog box, configure the options as follows:
  - a In the **Local Integration Settings** section, select the **Required Parameters** view and configure the following parameters:

Table 4. Required Parameters for Integration Options

Field	Value
SIP Server Address	Enter the TCP/IP address or FQDN of the DMG device.
SIP Server Port	Enter the SIP port on which the DMG device is listening for SIP messages. The default value is <b>5060</b> .
SIP Domain Name	Enter the TCP/IP address of the Call Server's network connection serving this integration.
Transport for outgoing SIP messages	Enter the transport protocol for sending SIP messages to the DMG device. Enter <b>UDP</b> or <b>TCP</b> . The default value is <b>UDP</b> .
SIP Device Name	Enter the hunt group number for the integration. This must match the hunt group number set in the switch section associated with this integration. <div><b>NOTE</b> This field is used when MiCollab AM makes outgoing calls. The hunt group number is displayed on the caller's phone (instead of the MiCollab AM port number) during outgoing calls.</div>
Local IP Address to Bind On	Select the local TCP/IP address of the MiCollab AM machine. This is a drop-down box and displays all available local TCP/IP addresses.
SIP Local Connection Port	The port MiCollab AM uses to listen for incoming SIP messages. The default value is <b>5060</b> .

SIP Parser Qualifier String	<ul style="list-style-type: none"> <li>• <b>Single SIP integration on the call server:</b> Enter the local IP address to which the integration is bound. This field is used by MiCollab AM to match SIP packets to the appropriate SIP integration.</li> <li>• <b>Multiple SIP integrations on the call server:</b> Use a string that is unique to each SIP integration.</li> </ul> <p><b>For example:</b></p> <p>The extension that will be used as the hunt number on the PBX followed by the @ symbol and the IP of the call server, such as 5000@172.16.4.202. <i>The hunt number must be unique across all IP integrations.</i></p> <p>The Fully Qualified Domain Name (FQDN) of the switch, such as pbx1.sipdomain.com.</p> <p><b>NOTE</b> This setting must match a string in the SIP header that is unique to this particular integration</p>
Parser Filename	Enter the name of the parser file for parsing the SIP messages and in-band integration data. The default value is set for each integration automatically.
Media Packet Size (milliseconds)	MiCollab AM sends/receives packets containing the number of milliseconds worth of audio data set here. The default value is <b>20</b> .

- b** In the **Local Integration Settings** section, select the **Dialogic Media Gateway Settings** view and configure the following parameters:

Table 5. Dialogic Media Gateway Settings Parameters for Integration Options

Field	Value
DMG Model	Select <b>Analog</b> as the type of DMG device used for this integration. The default value is <b>Analog</b> .
Administrator Name*	Enter the administrator user name configured on the DMG device. The default value is <b>admin</b> .
Administrator Password*	Enter the administrator password configured on the DMG device. The default value is <b>IpodAdmin</b> .

**\* NOTE** Requires the Administrator name and password of the DMG device to configure the device for the integration.

- c** In the **Local Integration Settings** section, select the **Integration Specific Parameters** view and configure the following option:

- Set the **Type of Call Progress to use for External Calls** value. How this should be set depends on the gateway used for the integration as follows:
    - **Digital:** Select Digital if the gateway supports call progress through to the endpoint.
    - **Media:** Select Media if the gateway reports early that the call is connected, such as before the phone rings or while the phone is ringing.
- 7 Click **OK**. The **Switch Section Options** dialog box displays.
  - 8 In the **Switch Section Options** dialog box, configure the following options:
    - a In the **Local Integration Settings** section, select the **Required Parameters** view.
    - b In the **Incoming Hunt Mode** field, enter the mode for this integration.
 

**NOTE** Select the hunt mode that matches the hunt mode type in IP PBX programming.
    - c In the **Hunt Group Access Code** field, type the code that was programmed in the telephone system.
    - d Click **OK**.
  - 9 Continue through and complete the configuration. At the end of the configuration, a confirmation dialog box displays. Click **OK**.
  - 10 If **MiCollab AM Configuration** does not open automatically after the configuration completes, open **MiCollab AM Configuration**, and select the **Lines** tab.
  - 11 In the table from the **Lines** tab, enter the extension numbers on the Lines in which they appear. Verify that the line numbers match the hunt group member DNs defined in the telephone system programming.
 

For information on configuring callout settings, see the topic *Configuring Callout Settings*, in the online help system.
  - 12 Click **OK** to save all changes.

## Configuring Existing MiCollab AM for the Integration

To configure exiting MiCollab AM for the telephone integration:

- 1 Open **MiCollab AM Configuration**, and go to the **Main** tab.
- 2 In the **Main** tab, click **Shutdown** to stop the system. Wait until the **Current Status** shows **Stopped**.
 

**NOTE** If you have not configured the virtual board with your MiCollab AM system yet, complete **Step 3**. If your MiCollab AM already has the virtual board configured, skip to **Step 4**.
- 3 **[Optional]** Select the **Board** tab, and then click the **Add** button. The **Board** dialog box displays.
  - a From the **Manufacturer** dropdown list, select **RadVision**.
  - b From the **Model** dropdown list, select **SIP STACK**.

- c** In the **Name** field, the name for this board is automatically generated. Enter a new name if necessary.
  - d** From the **Protocol** dropdown list, select **SIP IP RTP**.
  - e** In the **Number of Lines** field, enter the number of lines this board uses. The total number of lines is limited by the capacity of the board and the number of **Available Line Licenses**.
  - f** Click **OK**.
- 4** Select the **Switch** tab and click the **Add** button. The **Switch Integration Data Setup** dialog box displays.
- a** From the **Manufacturer** dropdown list, select the manufacturer of your telephone system.
  - b** From the **Model** dropdown list, select the switch model type you are integrating with.
  - c** From the **Integration Type** dropdown list, select **DMG SIP**.
- 5** Click **OK**. The **Switch Options** dialog box displays.
- 6** If necessary, make any changes to the default settings your site requires in the **Switch Options** dialog box.

**NOTE** The settings related to the telephone system in the **Switch Options** dialog box are filled in automatically when you select the correct telephone system during setup.

If you need to customize settings on the **Switch Options** dialog box to meet requirements specific to your site, refer to the documentation accompanying the telephone system, the online help, and the guide, *System Installation Guide*.

- 7** Click **OK**. The **Integration Options** dialog box displays.
- 8** In the **Integration Options** dialog box, configure the options as follows:
- a** In the **Local Integration Settings** section, select the **Required Parameters** view and configure the following parameters:

Table 6. Required Parameters for Integration Options

Field	Value
SIP Server Address	Enter the TCP/IP address or FQDN of the DMG device.
SIP Server Port	Enter the SIP port on which the DMG device is listening for SIP messages. The default value is <b>5060</b> .
SIP Domain Name	Enter the TCP/IP address of the Call Server's network connection serving this integration.
Transport for outgoing SIP messages	Enter the transport protocol for sending SIP messages to the DMG device. Enter <b>UDP</b> or <b>TCP</b> . The default value is <b>UDP</b> .
SIP Device Name	Enter the hunt group number for the integration. This must match the hunt group number set in the switch section associated with this integration.

	<p><b>NOTE</b> This field is used when MiCollab AM makes outgoing calls. The hunt group number is displayed on the caller's phone (instead of the MiCollab AM port number) during outgoing calls.</p>
Local IP Address to Bind On	Select the local TCP/IP address of the MiCollab AM machine. This is a drop-down box and displays all available local TCP/IP addresses.
SIP Local Connection Port	The port MiCollab AM uses to listen for incoming SIP messages. The default value is <b>5060</b> .
SIP Parser Qualifier String	<ul style="list-style-type: none"> <li>• <b>Single SIP integration on the call server:</b> Enter the local IP address to which the integration is bound. This field is used by MiCollab AM to match SIP packets to the appropriate SIP integration.</li> <li>• <b>Multiple SIP integrations on the call server:</b> Use a string that is unique to each SIP integration.</li> </ul> <p><b>For example:</b></p> <p>The extension that will be used as the hunt number on the PBX followed by the @ symbol and the IP of the call server, such as 5000@172.16.4.202. <i>The hunt number must be unique across all IP integrations.</i></p> <p>The Fully Qualified Domain Name (FQDN) of the switch, such as pbx1.sipdomain.com.</p> <p><b>NOTE</b> This setting must match a string in the SIP header that is unique to this particular integration</p>
Parser Filename	Enter the name of the parser file for parsing the SIP messages and in-band integration data. The default value is set for each integration automatically.
Media Packet Size (milliseconds)	MiCollab AM sends/receives packets containing the number of milliseconds worth of audio data set here. The default value is <b>20</b> .

- b** In the **Local Integration Settings** section, select the **Dialogic Media Gateway Settings** view and configure the following parameters:

Table 7. Dialogic Media Gateway Settings Parameters for Integration Options

Field	Value
DMG Model	Select <b>Analog</b> as the type of DMG device used for this integration. The default value is <b>Analog</b> .

Administrator Name*	Enter the administrator user name configured on the DMG device. The default value is <b>admin</b> .
Administrator Password*	Enter the administrator password configured on the DMG device. The default value is <b>IpodAdmin</b> .

**\* NOTE** Requires the Administrator name and password of the DMG device to configure the device for the integration.

- c** In the **Local Integration Settings** section, select the **Integration Specific Parameters** view and configure the following option:
  - Set the **Type of Call Progress to use for External Calls** value. How this should be set depends on the gateway used for the integration as follows:
    - **Digital:** Select Digital if the gateway supports call progress through to the endpoint.
    - **Media:** Select Media if the gateway reports early that the call is connected, such as before the phone rings or while the phone is ringing.
- 9** Click **OK**. The **Switch Section Options** dialog box displays.
- 10** In the **Switch Section Options** dialog box, configure the following options:
  - a** In the **Local Integration Settings** section, select the **Required Parameters** view.
  - b** In the **Incoming Hunt Mode** field, enter the mode for this integration.

**NOTE** Select the hunt mode that matches the hunt mode type in IP PBX programming.

- c** In the **Hunt Group Access Code** field, type the code that was programmed in the telephone system.
- d** Click **OK**.
- 11** In **MiCollab AM Configuration**, verify that the telephone system is properly added and configured in the **Switches**, **Switch Sections**, and **Integrations** tabs.
- 12** Select the **Lines** tab.
- 13** In the table from the **Lines** tab, enter the extension numbers on the Lines in which they appear. Verify that the line numbers match the hunt group member DNs defined in the telephone system programming.  
  
For information on configuring callout settings, see the topic *Configuring Callout Settings*, in the online help system.
- 14** Click **OK** to save all changes.

# Testing the TCP/IP Connection

Open the Event Viewer on the Call Server to verify communication between MiCollab AM, and to determine if changes were accepted by the DMG.

- 1 Select **Start**, right-click **My Computer**, and then click **Manage**.
- 2 In the Computer Management dialog box, click **Event Viewer**, and then double-click **Application**.

Look for three event types of messages in the Event Viewer. The source is always AT\_SysCfg. The three event types are:

- SUCCESS/INFORMATIONAL
- ERRORS
- WARNINGS

The SUCCESS/INFORMATIONAL entries state that the DMG was updated successfully either with or without a device restart. They are:

- **DMG device successfully updated (no restart required)**
- **DMG device successfully updated and restarted**

The ERRORS entries state the DMG failed to update or failed to restart, if a restart was required. These Event Viewer entries are generated because of a communication problem between the Call Server and the DMG or the Call Server was not shutdown prior to making changes in the Required Parameters section of Integration Options. They are:

- **DMG device update failed**
- **DMG device successfully updated, restart failed (if required)**

The WARNING entry is generated when the DMG requires an update but the user purposely chose to not upload configuration data. The entry is:

- **DMG device requires update (user selected not to upload configuration data)**

Once the DMG is updated successfully, continue with the completion of the MiCollab AM installation.



# Changing the Network Binding Order on the MiCollab AM Platform

If your MiCollab AM server platform is a component of two or more local or wide area networks (LANs or WANs), you must make sure that this integration does not interfere with the normal network operation of the server. By default, MiCollab AM uses the primary (public) network interface card (NIC) in the platform, the first NIC in the network binding order. If you want MiCollab AM to use a NIC other than the first one, you must make several required configuration changes. It is much easier to configure the Integration to use another NIC by simply setting the integration parameter Local IP Address to bind on to the address of the NIC card connected to the PBX.

**NOTE** The operating system gives precedence to the first network connection in the list followed by the remaining connections based on their position in the list.

The instructions in this document ensure that the binding order is correct when you set up the integration. However, if you replace a NIC on the MiCollab AM server platform later, the platform's operating system registers the new adapter at the bottom of its binding order. Restoring the original binding order should correct any problems caused by the change.

**IMPORTANT** The following procedure shifts the binding order of the network interface cards. To determine which NIC is associated with a specific network connection, right-click the connection in the Network Connections window, and then select **Properties**.

## Windows Server 2008 R2 with Service Pack 1

To change the binding order of multiple NICs:

- 1 From the taskbar, click **Start > Control Panel**.
- 2 In the **Control Panel**, click **Network and Sharing Center**.
- 3 On the left pane, select **Change Adapter Settings**.
- 4 Press **Alt** to display the menu bar.
- 5 On the menu bar, select **Advanced**, and then click **Advanced Settings**.
- 6 On the **Adapters and Bindings** tab of **Advanced Settings**, click the network connection that serves MiCollab AM.
- 7 Click the up arrow button to the right of the **Connections** list as many times as needed to move the connection to the top of the list.
- 8 Click **OK**, and then close the **Network Connections** window and the **Control Panel**.

## Windows Server 2012 R2

To change the binding order of multiple NICs:

- 1 From the taskbar, click **Start > Control Panel**.
- 2 In the **Control Panel**, click **Network and Sharing Center**.
- 3 On the left pane, select **Change Adapter Settings**.
- 4 Press **Alt** to display the menu bar.
- 5 On the menu bar, select **Advanced**, and then click **Advanced Settings**.
- 6 On the **Adapters and Bindings** tab of **Advanced Settings**, click the network connection that serves MiCollab AM.
- 7 Click the up arrow button to the right of the **Connections** list as many times as needed to move the connection to the top of the list.
- 8 Click **OK**, and then close the **Network Connections** window and the **Control Panel**.

# Configuring Quality of Service (QoS)

As of version 6.0, MiCollab AM has no internal support for QoS. QoS must now be implemented externally via group policies as Policy-Based QoS. Refer to your operating system's documentation for details.

Table 8. QoS Configuration

Field	Setting
Application Name	At_TelephonyServer.exe
Protocol	Match the setting used for the integration UDP or TCP
Source Port	<p>MiCollab AM requires a range of ports for audio support. The MiCollab AM audio ports start at the Local Media Base UDP Port configured in the Server tab. Each MiCollab AM line reserves 10 ports. Hence, the port range starts from the number configured there, and goes to the last port of the last line. The formula for calculating the highest port number in the range is as follows:</p> $\text{BasePortNumber} + (\text{NumberOfCXPorts} * 10) - 1.$ <p>Hence, if the base port is 10000, and MiCollab AM has 8 lines, then the port range to use would be:</p> <p>10000:10079</p>
DSCP Value	46