# **MiVoice Business Console**

MiVoice Business Console Installation Guide RELEASE 9.2 October 2021



#### Notice

The information contained in this document is believed to be accurate in all respects but is not warranted by **Mitel Networks**<sup>™</sup> **Corporation (MITEL**<sup>®</sup>). The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes.No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

#### Trademarks

The trademarks, service marks, logos and graphics (collectively "Trademarks") appearing on Mitel's Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively "Mitel") or others. Use of the Trademarks is prohibited without the express consent from Mitel. Please contact our legal department at legal@mitel.com for additional information. For a list of the worldwide Mitel Networks Corporation registered trademarks, please refer to the website: <u>http://www.mitel.com/trademarks</u>.

> ®,™ Trademark of Mitel Networks Corporation
>  © Copyright 2021, Mitel Networks Corporation All rights reserved

# Contents

#### Chapter: 1

	About This Document       1         Intended Audience       1         What's New in this Release?       1         What's New in Release 9.1 SP1       1         What's New in Release 9.1 SP1       2         What's New in Release 9.1?       2         What's New in Release 9.0 SP1?       2         What's New in Release 9.0 SP1?       2         What's New in Release 9.0?       2         What's New in Release 8.0 SP3?       3         What's New in Release 8.0 SP2?       3         What's New in Release 8.0 SP1?       3         What's New in Release 8.0?       4         What's New in Release 7.2 SP1?       4         What's New in Release 7.2 SP1?       5         What's New in Release 7.1?       5         What's New in Release 7.0 SP1?       5         Related Documentation       5         Accessing Documentation       6         Training       6         User Training Course       6
Chapter: 2	Requirements and Peripherals
	Introduction
	System Requirements
	PC Requirements
	Windows Software Requirements
	Recommended Peripherals
	Keyboards
	Speakers
	Headsets and Handsets
	Adaptor Cables
	Instructions for Headsets and Handsets

	Audio Recommendations
Chapter: 3	Software Installation 12
	Introduction
	Prerequisites
	Prerequisites for MiVoice Business Console Configuration
	Prerequisites for a MiVoice Border Gateway Connection13
	Recommendations for MiCollab Client User Accounts
	Downloading the MiVoice Business Console Application Software13
	Installing the MiVoice Business Console Software
	Configuring the Console
	Configuring the Console in the MiVoice Border Gateway
	For More Information
Chapter: 4	Software Upgrades
	Introduction
	Prerequisites
	Recommended Upgrade Procedures
	Upgrading from MiVoice Business Console 7.1, 7.2, and 8.017
	Upgrading the MiVoice Business Console Software
	Updating the Console Device in the MiVoice Border Gateway
Chapter: 5	Software Removal
	Uninstalling the MiVoice Business Console Software
Chapter: 6	Migrating a 5550 IP Console to a MiVoice Business Console 20
	Introduction
	Prerequisites
	Recommended Migration Procedure
Chapter: 7	Appendix A
-	Port Diagrams

## Introduction

### **About This Document**

This document contains the following information:

- MiVoice Business Console™ PC and system requirements
- recommended peripherals
- how to install the MiVoice Business Console software
- how to upgrade software on a MiVoice Business Console
- audio recommendations and guidelines
- known issues and troubleshooting

### **Intended Audience**

This manual is for Mitel® certified technicians, installers, and administrators.

### What's New in this Release?

MiVoice Business Console 9.2 includes the following features and enhancements:

- CloudLink Authentication:
  - The console supports CloudLink Authentication for CloudLink Chat. If CloudLink Authentication is enabled in the MiCollab server, operators can log in to CloudLink using the Chat icon in the main window status area. Operators can also log out from this area or configure the option to logout on exit.
- CloudLink chat enhancements:
  - Operators can create chat groups using the Groups button in the chat window.
  - Chat window search includes groups that an operator belongs to.
  - A Read by indication is displayed when a sent message has been read by one or more chat participants.
  - An Is Typing indication is provided when a chat participant types a response to a chat message.
- When in ADF mode, an LCS column is no longer needed to enable chat capability.

### What's New in Release 9.1 SP1

MiVoice Business Console 9.1 SP1 includes the following features and enhancements:

- A new option in the **Audio** panel allows advanced audio device configuration.
- With Cloudlink Chat, you can now view a chat contact's phone number(s) and place calls from the chat window.

- Installation of the console in teleworker mode is now simpler with support for the MiVoice Border Gateway installer password in the MiVoice Business Console's Configuration Wizard.
- Windows 7 is no longer supported.

### What's New in Release 9.1?

MiVoice Business Console Release 9.1 includes the following features and enhancements:

- User Messaging Enhancements
  - The MiVoice Business Console now supports Cloudlink Chat when the option is enabled on the MiCollab Client Server. When CloudLink Chat is enabled, chat messages can be sent to a contact, even if the contact is off-line. Presence is represented by a blue chat icon to indicate Cloudlink Chat is enabled.
  - The following additional enhancements are available for both Cloudlink and MiCollab chat:
    - A new chat window is available within the tools window. The window lists active chats on the left side and conversations on the right side.
    - The console toolbar now supports a new chat button. The chat function can also be assigned to a configurable keyboard key.
    - Improved notifications are provided when a new chat message is received. These include, unread
      message indications on the toolbar chat button and within the chat window, and windows visual
      and audible notifications.
    - Chat history support.
    - Emoji support (Cloudlink chat only).
  - Up to 16 MiVoice Business Consoles can now be supported in MiCollab Solution with 20,000 contacts.
  - The port that the console uses to connect to the MiCollab Client Server is Port 36008 (instead of 6807 or 18100). Refer to the MiVoice Business Console Installation Guide for the updated port diagram.

### What's New in Release 9.0 SP1?

MiVoice Business Console 9.0 SP1 includes the following features and enhancements:

- Calendar Integration
  - MiVoice Business Console supports calendar integration with Microsoft™ Office 365.
- Call History Enhancements
  - The Call History panel displays more search results in the Call History search list.
  - The console supports call back to external caller number directly from the Call History panel if the prefix is configured for in the Call History Options.

### What's New in Release 9.0?

MiVoice Business Console 9.0 includes the following features and enhancements:

Phone Book Search - Search Within Name and Text Fields

- In Additional Database Field (ADF) directory mode, the operator can now enable or disable phone book searching for characters within in a name or text field.
- MiVoice Business Secure Connection
  - The console supports Transport Layer Security (TLS) connections to the MiVoice Business when the MiVoice Business TLS system option is enabled. For security certificate management details, refer to the MiVoice Business Console Administrator Help and MiVoice Business Console Installation Guide.

### What's New in Release 8.0 SP3?

MiVoice Business Console 8.0 SP3 includes the following features and enhancements:

- Customizable Keyboard Keys
- You can assign PC keyboard keys to the frequently used functions.

### What's New in Release 8.0 SP2?

No new features were added in this release.

### What's New in Release 8.0 SP1?

MiVoice Business Console 8.0 SP1 includes the following features and enhancements:

#### Support for Master Profile

 Master Profile allows configuration settings to be shared by a group of console users. The administrator sets this feature up on each console within the group. As part of the setup, the administrator designates a master console user responsible for selecting settings to be included in the master profile, making changes to those settings, and generating a master profile file containing the settings. The master profile file is subsequently imported when console users within the group start their console.

**NOTE:** Master Profile replaces the Backup/Restore function that was available in earlier releases.

#### Support for Postgres Database Release 9.6

- MiVoice Business Console now supports Postgres Database Release 9.6 for the Call History feature.
- Phone Book Search
  - The Operator can perform a phone book search for characters contained in a name or text field in Additional Database Field (ADF) directory mode
- Microsoft Exchange Server 2016
  - MiVoice Business Console supports Microsoft™ Exchange Server 2016.

### What's New in Release 8.0?

MiVoice Business Console Release 8.0 includes the following features and enhancements:

- MiVoice Business Phone Book Directory Support
  - In MiVoice Business Release 8.0, Phone Book enhancements allow the administrator to exclude non-dialable telephone directory entries from the console's Phone Book. Additionally, the console now displays longer user names, longer department and location strings, e-mail addresses, and primary phone service indications.
- User names can now contain multilingual characters by default. The Multilingual Name Display option has been removed.
- User messaging and Calendar Integration features no longer require Additional Database Field (ADF) as a prerequisite. ADF remains a prerequisite for MiCollab Service Federation with third-party servers.
- Headset Answer/Release Support
  - The operator can now answer and release calls from Jabra™ and Plantronics™ audio devices.
- BLF All List
  - A BLF list containing all monitored extensions is automatically generated.
- Missed Calls Integration into Call History
  - You can see the missed call details under the Call History tab.
- My Queued Calls
  - My Queued Calls, within the Queued Calls area, provides a comprehensive view of all the current calls in the console, that is, the Incoming, Held, Transferred, and the Parked calls.
- Emergency Notification on Headset/Handset device
  - In addition to playing an emergency ring tone on the console ringer, the console will now play an
    emergency notification tone on a headset/handset device if the option to hear ringing on a
    headset/handset device is enabled.
- Configurable MAC Address
  - The administrator now has an option within the configuration wizard to assign a unique MAC address instead of using the default PC MAC address. The MAC address can be obtained from Mitel Management Portal (MMP), which includes a MAC address for the MiVoice Business Console in the user introduction e-mail.
- MiVoice Border Gateway Secure Connection
  - This new option controls whether the console connects to the MiCollab Client Server using a direct connection or a secure connection through the MiVoice Border Gateway.
- Microsoft Windows 10
  - Support for Microsoft™ Windows 10.

### What's New in Release 7.2 SP1?

MiVoice Business Console Release 7.2 SP1 includes the following features and enhancements:

- Mitel Brand Header Support.
- Ability to search and sort when editing a BLF List.
- Ability to display multi-line greetings and remarks in the Source area.

### What's New in Release 7.2?

MiVoice Business Console 7.2 includes the following features and enhancements:

- Support for ISO-8859-1 character set (accented characters) in User Login ID and password, presence integration, chat, and IM functionality in User Messaging.
- Support for MiVoice Border Gateway resiliency.

### What's New in Release 7.1?

MiVoice Business Console 7.1 includes the following features and enhancements:

- Multilingual Name Display (UTF-8) When ADF is enabled, this option allows multilingual names, such as Russian and Chinese, to display in many areas of the Console Display, such as the Phone Book, Busy Lamp Field, Call History, Source and Destination and so forth.
- Enhancements to the Comments function allows 1500 characters to be entered into a comment, and also allows the following: bold, underline, italics, as well as changes to font, text size, and style of text.
- Number of ADF entries increased to 130,000.
- Number of BLF Private Lists increased to 500.
- New Ring Options allows you to select a tone to be played for incoming calls.
- Auto Unmute lets you have a call automatically unmute when the called party answers during a supervised transfer.

### What's New in Release 7.0 SP1?

MiVoice Business Console 7.0 SP1 includes the following features and enhancements:

- Support for Exchange 2013.
- Support for Windows 8 Touchscreen.
- Support for Comments in Transfer Assistant.
- Support for incoming call ringing on headset/handset devices.
- Support for a unique PC-based MAC address for hosting deployments.

### **Related Documentation**

See the following documents for more information on the MiVoice Business Console.

- **MiVoice Business Console Quick Reference Guide** introduces the main features of the MiVoice Business Console and explains how to perform basic call-handling tasks.
- **MiVoice Business Console Operator Online Help** The Online help embedded within the MiVoice Business Console Application is intended for Operators who use the application to handle calls.
- **MiVoice Business Console Administrator Online Help** The On-Line help embedded within the MiVoice Business Console Application is intended for Installers and Administrators who configure features, such as Teleworker, Multiple Company Directory, User Messaging, Additional Database Fields, and so forth.

• **MiVoice Business Engineering Guidelines** - this guide provides information on the MiVoice Business engineering requirements.

#### **Accessing Documentation**

To access MiVoice Business Console and system-specific documentation:

- 1. Go to Document Center.
- 2. To view a document, click on the document title.

### Training

A user training course is available. The user training course teaches operators call handling basics.

#### **User Training Course**

To access MiVoice Business Console user training course:

- 1. Go to https://www.mitel.com.
- 2. Select SOLUTIONS and under Services, select MitelTraining.

The Mitel Training page appears.

- 3. Click CUSTOMER TRAINING.
- 4. Click here to access free courses.
- 5. Under Desktop Device Tutorial, click Read more.
- 6. Click MiVoice Business Console to start the training course.

# **Requirements and Peripherals**

### Introduction

This chapter provides system hardware and software requirements, and the recommended peripherals for the MiVoice Business Console.

### **System Requirements**

The MiVoice Business Console Release 9.2 is supported by the following:

- MiCloud Flex on Google Cloud Platform (GCP)
- MiVoice Business, Release 9.2
- MiVoice Business, Release 9.2
  - Software for the 3300 controller
  - Software for Industry Standard Server
  - VMware Virtual Application
- MiCollab Client Server, Release 9.4
- MiVoice Border Gateway, Release 11.3

The MiVoice Business Console Release 9.2 is backward compatible with the following MiVoice Business Release releases:

- 9.1 SP2
- 9.0 SP3

MiVoice Business Release 9.0 and later is not backward compatible with pre-9.0 releases of the MiVoice Business Console.

#### See Recommended Upgrade Procedures.

For backward compatibility of MiVoice Business Release 9.2 and MiVoice Business Release 9.2 with MiCollab and MiVoice Border Gateway releases, refer to the MiVoice Business and MiVoice Business Console release notes on **MiAccess > Software Download Center**.

### **PC Requirements**

For MiVoice Business Console, the PC must meet the requirements outlined in the table below.

**NOTE:** Mitel does not recommend the use of Celeron-based PCs for the MiVoice Business Console as voice quality may be compromised or does not meet Mitel's voice quality standards.

Hardware	Minimum Requirements	Recommended
CPU	Windows 8 - 32 and 64 bit - 1.8 GHz Windows 10 - 32 and 64 bit - 2 GHz	See Note 2 for MiCollab Client integration See Note 3 for Postgres SQL integration
RAM	Windows 8 - 32 and 64 bit - 2 GB Windows 10 - 32 and 64 bit - 2 GBs	See Note 2 for MiCollab Client integration See Note 3 for Postgres SQL integration
Hard Drive	Windows 8 - 32 bit 16 GB Windows 8 - 64 bit 20 GB Windows 10 - 32 bit and 16 GB Windows 10 - 64 bit and 20 GB	
Monitor	Minimum resolution 1024 x 768	
LAN Connection	100 BaseT/Ethernet adaptor	

#### NOTES:

- 1. For MiCollab Client Presence-enabled consoles that service more than 500 clients or work in a peered MiCollab Client Service arrangement, each MiVoice Business console PC must meet a minimum PC requirement of: 3.0 GHz processor speed and 4 GB of RAM.
- 2. The console PC running the Postgres SQL Server must meet the following minimum PC requirements for Call History and Transfer Assistant features:
  - Windows 8 or Windows 10 Professional operating system (recommended) or Linux
  - Processor: 4.0 GHz
  - Memory (RAM) 4 GB
  - Hard Drive: 200 GB


For optimal audio quality, use a wired network connection when operating the MiVoice Business Console. If using a laptop with battery power, configure the PC to use a high-performance power setting.

**IMPORTANT:** Running the MiVoice Business Console on a virtual machine is not supported. If the install software detects a virtual machine, a pop-up warning is given. Continuing the installation is done at your own risk with no liability and support from Mitel. If the console does not function as expected, we recommend disabling the Hyper-V feature or disabling the Hyper-V Virtual Ethernet Adapter.

To disable the Hyper-V feature:

- 1. Open the Control Panel.
- 2. Select Programs and Features.
- 3. Select Turn Windows features on or off.

Windows Features dialogue box opens:

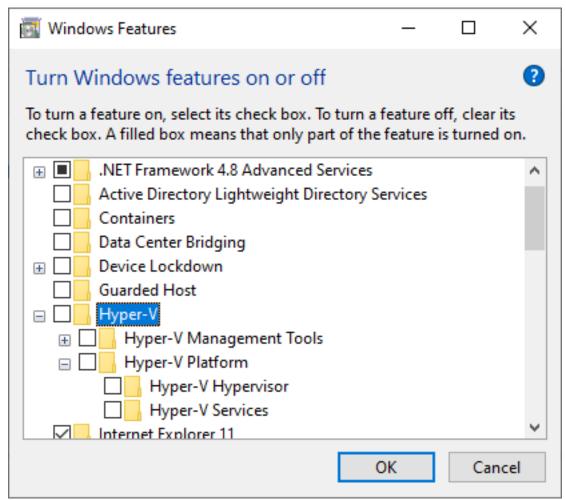

4. Clear Hyper-V check boxes.

The Hyper-V feature is disabled.

### **Windows Software Requirements**

MiVoice Business Console is supported on the following versions of Windows software:

- Microsoft Windows 8 or Windows 8.1 (32/64 bit)
  - Professional
  - Enterprise
- Microsoft Windows 10 (32/64 bit)
  - Professional
  - Professional for Workstations
  - Enterprise
  - Enterprise LTSB
  - Education

Installation of the MiVoice Business Console on following versions of Windows software is not supported:

- Windows Server variants
- Windows N variants
- · Windows Professional with Media Center
- Windows 10 Home
- Windows 10 Mobile
- Windows 10 S
- Windows 10 IoT not supported

**IMPORTANT:** Installation of MiVoice Business Console on a version of Windows software that is not listed above is done at your own risk with no liability and support from Mitel.

### **Recommended Peripherals**

Since the MiVoice Business Console runs on a Windows PC, USB and Bluetooth peripherals can be used with the Console application. USB peripherals are available at a wide variety of price points with much variation in quality. Mitel offers the following guidelines.

#### **Keyboards**

- A full-size keyboard with a numeric keypad from a reputable vendor is recommended.
- If using a laptop without an integrated numeric keypad, a separate full-sized keyboard is recommended.
- Labels (included with the MiVoice Console product) should be applied to the keyboard at every workstation that will be used as a Console position. This will help Operators learn the new functions of keys. The labels are for two types of keys: fixed keys and customizable keys.

#### **Speakers**

• Speakers are required to play "ringer" sounds from the MiVoice Business Console application.

#### **Headsets and Handsets**

 For Operators, audio quality is important. Mitel recommends that a good quality headset be used such as the Mitel H40, H30, or H10, or a headset or handset from a reputable vendor, such as Plantronics<sup>™</sup> or Jabra<sup>™</sup>. Refer to their respective websites for a list of recommended devices.

**NOTE:** Jabra recommends using their standard headsets and not those that have been optimized for Microsoft Office Communicator. These headsets are identified by MS in the headset name.

- · We strongly recommend that you consult Operators when selecting a headset or handset.
- There are a variety of USB handsets on the Market, such as the Plantronics Calisto 240 USB corded handset, the Jabra Dial 550, and the Jabra Handset 450.
- In some cases, it is possible to "convert" an existing RJ-11 headset or handset to USB by purchasing an adaptor cable.
- The Mute function on a headset/handset will work, but it is not integrated into the MiVoice Business Console application.

#### CHAPTER 2

- Volume controls on a headset or handset can be used to control the MiVoice Business Console application volume.
- The Answer/Release buttons on Mitel, Jabra, and Plantronics headsets or handsets can be used to handle calls. The following headsets and handsets are supported:
  - Mitel H40, H30, and H10 headsets
  - USB wired, wireless, or Bluetooth headsets from Plantronics are supported.
  - USB wired or wireless headsets from Jabra are supported. Bluetooth support is not available.

LIMITATIONS:

- Multiple headset or handset devices plugged into the PC can cause unpredictable answer/release button behavior.
- If you are using a Plantronics headset for your console, ensure only one Plantronics headset is plugged into the PC. If you need a second headset, a Jabra headset is recommended.
- You may use two Mitel or Jabra headsets; however, they must be different models.
- Dialing from a handset dial pad is not supported.

#### **Adaptor Cables**

- Adaptor cables that convert a traditional telephony connector to USB exist and can be found on the internet. These can be used with telephone handsets and headsets.
- Mitel has validated one such cable (Earsing DA200) and found that while the audio quality is good, other features on the cable, for example, mute and volume, do not work.

#### Instructions for Headsets and Handsets

Follow the manufacturer's instructions to configure the USB headset or handset on the PC. **NOTE:** For wireless headsets or handsets, it is recommended that you load the manufacturer's software. Ensure that the option to maintain the link from the headset/handset to the PC is selected to avoid potential connection delays.

For details on configuring Audio devices, refer to the MiVoice Business Console Help.

#### **Audio Recommendations**

**IMPORTANT:** Operators should follow the recommendations below so that the ringer is audible in the case of emergency calls.

- Operators should not mute the volume in the Windows Sound Panel or turn the volume off on the speaker itself.
- If the ringer is turned off, an emergency call will override and ring the ringer device.

For more details using audio devices, see Managing Audio in the MiVoice Business Console On-line Console Operator Help.

## **Software Installation**

### Introduction

This section describes how to download and install the MiVoice Business Console software for Release 9.2.

It also describes two configuration options:

- How to configure the software to connect to the MiVoice Business for corporate applications. See *Configuring the Console*.
- How to configure the software to connect to the MiVoice Border Gateway for operators who will use the MiVoice Business Console as a teleworker in their home or in other locations away from the office.

Contact your technical support specialist should you encounter any difficulties during installation.

### **Prerequisites**

Before you begin the installation:

- Verify that your system, PC hardware and software meet the minimum requirements listed in *Requirements and Peripherals*.
- Ensure that you have Administrative privileges for Microsoft Windows, which are required to install the MiVoice Business Console application software.
- Close any programs that are running that might conflict with the installer program.
- Verify that the Mitel MiVoice Business has been programmed to recognize the console. For information, see the *MiVoice Business System Administration Tool Help*.
- Ensure that an Active Operator License is allocated on the Primary MiVoice Business Controller in the License and Option form. This is required for the MiVoice Business Console to go into the Operator Present state.

**WARNING:** Before starting the console, ensure that a wired Ethernet connection is being used and turn off any wireless connections. To avoid voice quality issues, using the MiVoice Business Console with a wireless connection is not recommended.

#### Prerequisites for MiVoice Business Console Configuration

The following information is needed to configure the MiVoice Business Console.

- The Directory Number for the MiVoice Business Console configured on MiVoice Business.
  - Obtain the DN from the Attendants -> IP Consoles form.
- The IP Address or Fully Qualified Domain Name (FQDN) name for the Primary MiVoice Business controller. This is the address for the Primary MiVoice Business Controller on which the MiVoice Business Console is configured.
- Set Replacement Access Code (found on the System Options form).
- **Quality of Service Settings** : Voice Media and TOS. (Quality of Service settings are only supported on Consoles running with Administrative privileges).

 If Transport Layer Security (TLS) is enabled in the MiVoice Business, you will need the Issuer and Fingerprint details for the installed certificate (found in the System Administration Tool Device Certificate form) to verify the security certificate presented by the console when the console is configured to connect to the MiVoice Border Gateway.

#### Prerequisites for a MiVoice Border Gateway Connection

Operators can use the MiVoice Business Console as a teleworker in their home or in other locations away from the office. Complete the following additional tasks if you want to connect the console to the MiVoice Border Gateway (MBG):

- Obtain the IP address or Fully Qualified Domain Name (FQDN) for the MBG.
- Obtain the MiVoice Border Gateway Installer Password (optional)

**CAUTION:** Be aware that there can be firewall issues/risks in using the home router (with VPN access) to provide leisure Internet connectivity for home usage. You may choose to apply Access Control List in the home router to restrict traffic to either the corporate VPN or to the MBG/MiCS, or enforce the firewall at the corporate end of the VPN to provide security from the Internet across the home network.

#### **Recommendations for MiCollab Client User Accounts**

In order for the MiVoice Business Console Operators to have access to MiCollab Client user presence information, the console will need to register with the MiCollab Client Server as a MiCollab Client user.

Mitel recommends that you create MiCollab Client user accounts exclusively for Operator use. One account is required for each Operator who will be "active" at the same time. For example, if there will be three Console Operators "active" or taking calls at the same time, then you should create three MiCollab Client users, with generic names such as Operator1, Operator2 and Operator3.

While an employee may already have a personal MiCollab Client this is NOT the account that the employee would use when working as an Operator. Instead, the console will need to register with the MiCollab Client Server as an Operator user, for example, Operator 1.

Each Operator user in MiCollab Client Server will require the following licenses (54006165, 54006070). For details of configuring MiCollab Client users to create these "Operator" users, please refer to MiCollab Client documentation.

# Downloading the MiVoice Business Console Application Software

- 1. Login to Mitel MiAccess.
- 2. Click Software Download Center.
- 3. From Navigate by categories, click MiVoice Business.
- 4. Scroll down and navigate to the **MiVoice Business > MiVoice Business Console** section.
- 5. Select the appropriate software to download.
- 6. When you click on the software to download, a "Disclaimer" is displayed that prompts "I agree..." or "I disagree". Click the appropriate response.

7. Select a location on your PC to store the downloaded software.

### Installing the MiVoice Business Console Software

- 1. Execute the install process by unzipping the software file you downloaded.
- 2. Follow the on-screen instructions in the InstallShield Wizard to complete the installation.

**NOTE:** Accept the default location for the files and folders when installing the MiVoice Business Console software.

- **3.** When installation is complete, the **Configuration Wizard** starts. The wizard is used to register the console with
  - the MiVoice Business

OR

- the MiVoice Border Gateway to run in Teleworker Mode

See Configuring the Console.

**NOTE:** If at any time you need to rerun the Configuration Wizard to update configuration items, use the Configuration Wizard shortcut on the desktop, if available. You may also access it using the Start menu and selecting **All Programs -> Mitel -> MiVoice Business Console -> Configuration Wizard** or entering "Configuration Wizard " in the **Start** menu search box.

**NOTE:** If the console is installed on a PC with high DPI display and you experience display issues (such as issues with text size or text that is cut off in display windows) you may need to turn off high DPI scaling to display the application properly.

To fix the display issue, follow the steps below:

- 1. Close the MiVoice Business Console application.
- 2. Right-click the MiVoice Business Console application desktop icon, and then click Properties.
- 3. From the **Compatibility** tab, in the **Settings** group, click **Change Hi DPI Settings**. The **Properties** window appears.
- 4. From the **High DPI scaling behavior** group, select the **Override high DPI scaling behavior** check box.
- 5. In the drop-down list, select System.
- 6. Click Apply and then click OK.
- 7. Restart the console.

### **Configuring the Console**

Review the *Prerequisites* before starting this procedure.

After the MiVoice Business Console software is installed, the Configuration Wizard is launched.

- 1. At the Welcome screen, click Next.
- Select Console has Administrative Access if this console will be used to sync the Additional Database Fields (ADF) data file with the MiVoice Business Telephone Directory and click Next. The Master Profile screen is displayed.
- 3. At the **Master Profile** screen, you can optionally enable the Master Profile feature to simplify configuration for multiple console users on the same or different PCs. To enable the Master Profile feature:
  - a. Click Browse to enter the path and file name of the Master Profile file.
  - **b.** Select **Console has Master Profile write access** if this console is responsible for maintaining the Master Profile XML file.
  - c. Click Next.
- 4. At the Operating Mode screen, do either of the following :
  - To connect the console directly to the MiVoice Business, select Connect to your MiVoice Business and enter the IP address or the Fully Qualified Domain Name (FQDN) of the primary controller, and then click Next.
  - To connect the console in teleworker mode, select Connect to a MiVoice Business Border Gateway. Enter the IP address or the Fully Qualified Domain Name (FQDN) name of the MiVoice Border Gateway and, the Installer Password (optional). Installer password allows the automatic programming of a Console on the MBG. Click Next.

**NOTE:** You may see a note at the bottom of the screen informing you that the MBG address was not recognized at this point. You can proceed under caution that you will connect the network at a later time, or this PC is not in the Teleworker "Home" environment at this moment.

- 5. Enter the **Set Replacement Access Code**. Ensure it matches the one programmed in the MiVoice Business System Options form in the System Administration Tool.
- 6. Enter the Directory Number for this console.
- 7. Enter a MAC address, if one has been supplied in an e-mail from MMP. If you do not enter one, the console will use the PC MAC address. Click **Next**.
- At the Quality of Service (QoS) Settings screen, enter the Voice Media value. The default is value is 46.
- 9. Enter the TOS value. The default is 6. Click Next.

**NOTE:** Quality of Service settings are only supported on Consoles running with Administrative privileges.

10. All the entered information is displayed on the **Ready to Make Changes** screen.

If the console connects in teleworker mode and you have not supplied an installer password, note down the MAC address and configure the console in the MBG, see *Configuring the MiVoice Business Console in the MiVoice Border Gateway*. If you are migrating from a 5550 IP Console to a MiVoice Business Console, see *Updating the Console Device in the MiVoice Border Gateway*.

- 11. If all the information on the Ready to Make Changes screen is correct, click Next.
- 12. Click **Next** on the **Performing Changes screen** to connect the MiVoice Business Console or MiVoice Business Border Gateway.

- If the console connects directly to the MiVoice Business and Transport Layer Security (TLS) is enabled in the MiVoice Business System Options Form, a secure connection (port 6801) is used and the console displays a Certificate Warning pop-up message. Accept the certificate if the issuer and fingerprint displayed in the message match the settings in the System Administration Tool Device Certificate form.
- If the console connects to a MiVoice Border Gateway, a certificate is automatically generated and an attempt is made to connect to the MiVoice Border Gateway. If an installer password has been provided, the console will be automatically programmed in the MiVoice Border Gateway.
- 13. The changes are complete screen is displayed. Click **Finish** if all the information is correct. If not, click **Start Over**.

### **Configuring the Console in the MiVoice Border Gateway**

**TIP**: The console can be automatically configured in the MiVoice Border Gateway by entering the Installer Password on the Operating Mode screen.

Ensure you have the MiVoice Business Console's MAC address.

- 1. Login to MBG.
- 2. Under Applications, click MiVoice Border Gateway.
- 3. From the Service Configuration drop-down menu, select the Minet Devices option.
- 4. Click Add Minet Device.
- 5. Enter the MAC address in the **Device ID** field. This is the MAC address that you recorded in the step 10 of *Configuring the Console*.
- 6. Enter a description in the **Description** field.
- 7. Click Enable.
- 8. Select the MiVoice Business Controller in the **Configured ICP** field and click **Save**.
- 9. From the Service Configuration drop-down menu, select the Application Integration option.
- 10. Select the MiVoice Business Console support check box to enable it, and click Save.

**NOTE:** For backward compatibility of the MiVoice Business Console with MiVoice Business Controllers running releases earlier than 9.0, you must enable a proxy connection (through the Internet) between the MBG proxy TCP port 6806 and the TCP port 1606 on the MiVoice Business Controller. This proxy connection is not needed with MiVoice Business Release 9.0 and later.

For a complete list of the ports, refer to Appendix A.

#### **For More Information**

For information on enabling support for the MiVoice Business Console in MBG, refer to the *MiVoice Border Gateway Online Help*.

# **Software Upgrades**

### Introduction

This section describes how to upgrade the MiVoice Business Console software to Release 9.2.

### Prerequisites

Before you begin the upgrade:

- Refer to the list of prerequisites for installing the MiVoice Business Console software see Prerequisites.
- Download the MiVoice Business Console software. See *Downloading the MiVoice Business Console Application Software*.

### **Recommended Upgrade Procedures**

#### Upgrading from MiVoice Business Console 7.1, 7.2, and 8.0

MiVoice Business Console 7.1, 7.2, or 8.0 are not compatible with MiVoice Business 9.0 or later releases. To avoid console service disruptions, upgrade consoles to Release 9.2 before you migrate the hosting MiVoice Business controllers.

### **Upgrading the MiVoice Business Console Software**

- 1. Execute the install process by unzipping the software file you downloaded.
- 2. Click Next in the Install Shield Wizard to update the installed software to the latest version.
- 3. When the installation is complete, the **Configuration Wizard** runs if configuration options are added in the new software.
- 4. Click Next to step through the Configuration Wizard screens.

**NOTE:** In Release 7.2, the MiVoice Business Console was modified to use the MAC address of the PC on which the console is running. If this console connects to a MiVoice Border Gateway and you are upgrading from a pre-7.2 release, ensure that the previous MAC address for the MiVoice Business Console has been deleted in the IP Consoles form on the MiVoice Business. See *Updating the Console Device in the MiVoice Border Gateway*.

**NOTE:** In Release 8.0 SP1, support for Master Profile was added. If you want to configure Master Profile, see *Configuring the Console*.

5. Click Next on the Performing Changes to connect to the MiVoice Business.

**NOTE:** If Transport Layer Security (TLS) is enabled in the System Administration Tool System Options form and the console is upgrading from a pre-9.0 release, the console connects to the

MiVoice Business system using a secure connection (port 6801) and displays a Certificate Warning pop-up message. Accept the certificate if the issuer and fingerprint displayed in the message match the settings in the System Administration Tool Device Certificate form.

- 6. The "Changes are complete" screen is displayed. Click **Finish** if all the information is correct. If not, click **Start Over**.
- 7. Reboot the PC if requested by the Upgrade process.

# Updating the Console Device in the MiVoice Border Gateway

Ensure you have the MiVoice Business Console's MAC address and Directory Number.

- 1. Login to MBG.
- 2. Under Applications, click MiVoice Border Gateway.
- 3. From the Service Configuration drop-down menu, select the Minet Devices option.
- 4. In the Filter Listing search field, enter the directory number.
- 5. Click Apply.

The MBG Device Information is highlighted.

- 6. Click Delete. You will see a warning message. Click OK.
- 7. Next, click Add Minet Device.
- 8. Enter the MAC address in the Device field. This is the MAC address configured in the MiVoice Business Console Configuration Wizard.
- 9. Enter a description in the **Description** field.
- 10. Click Enable.
- 11. Select the MiVoice Business Controller in the Configured ICP field and click Save.
- 12. From the Service Configuration drop-down menu, select the Application Integration option.
- 13. Select the MiVoice Business Console support check box to enable it, and click Save.

# **Software Removal**

### Uninstalling the MiVoice Business Console Software

Uninstalling the MiVoice Business Console application software removes it from your computer.

- 1. Exit the MiVoice Business Console application.
- 2. Click Start > Settings > Control Panel and then double-click Programs.
- 3. Under Programs and Features, click Uninstall a Program.
- 4. Select MiVoice Business Console.
- 5. Click **Uninstall this program** and follow the on-screen instructions to remove the application files.
- 6. Reboot the PC if requested by the Uninstallation process.

# Migrating a 5550 IP Console to a MiVoice Business Console

### Introduction

This chapter describes how to migrate a 5550 IP Console that is running release 4.3 to a MiVoice Business Console running release 9.2.

**NOTE:** MiVoice Business Console 9.2 release is not supported on Windows 7. If you are migrating a 5550 IP Console to MiVoice Business Console release 9.2, it is recommended to install the MiVoice Business Console on a Windows 10 PC.

### **Prerequisites**

Before you begin your console migration:

- Refer to the list of prerequisites for installing the MiVoice Business Console software on page 16.
   NOTE: When migrating a 5550 IP Console to a MiVoice Business Console, you do not need to configure a new Directory Number in the MiVoice Business IP Consoles Form. The device type and MAC address will be automatically updated in the MiVoice Business when the MiVoice Business Console Configuration Wizard runs.
- 2. Download the MiVoice Business Console software see *Downloading the MiVoice Business Console Application Software*.
- 3. Read through Recommended Migration Procedures .

### **Recommended Migration Procedure**

Migrate a 5550 IP Console to a MiVoice Business Console as follows:

- 1. Install the MiVoice Business Console on a Windows 10 PC using the steps in *Installing the MiVoice Business Console Software*.
- 2. Configure the MiVoice Business Console software by following the steps in *Configuring the Console*.

**NOTE:** If this console connects to a MiVoice Border Gateway, you will need to delete the 5550 IP Console from the MBG and add the MiVoice Business Console as described in *Updating the Console Device in the MiVoice Border Gateway*.

# **Appendix A**

### **Port Diagrams**

DNS	UDP/53 (DNS)		
DHCP			
		UDP/68 (DHCP)	
MiCollab Client/UCA	TCP/80 (HTTP/Web Services) TCP/36008 (HTTP/Web Socket)	MiVB	
SQL (Call History)	TCP/5432 (SQL DB)	Console	
MS Exchange	TCP/443 (HTTPS/Calendar)		
		TCP/6800 (MiAudio)	
		UDP/68 (DHCP)	
	TCP/1606 (CSMSG - Prior to MiVB9.0)		
	TCP/7011 (Data Services)		
MiVB	ТСР	/4950049549 (Data Services) Port defined through port 7011	
	A STATE OF A	999 (MiNet, TLS, Secure MiNet)	
	UDP/5000050511 (Voice Media - *1) UDP/5000153001 UDP/5000153001		
	UDP/5000050511 (Voice Media - *1)	-	Soft -
			Phone
IP End Device (IP-Phone,	UD	IDP/5000153001 (Voice Media) P/5000153001 (Voice Media)	
Application)	UDP/Ephemeral (Voice Media) *1: Default Value shown. Upper value may change depending on	installation settings	
	*2: Port 6800 is disabled for secured configurations MiVoice Business Console (Non-Telew)		L

Figure 7.1: MiVoice Business Console - Non-Teleworker Mode

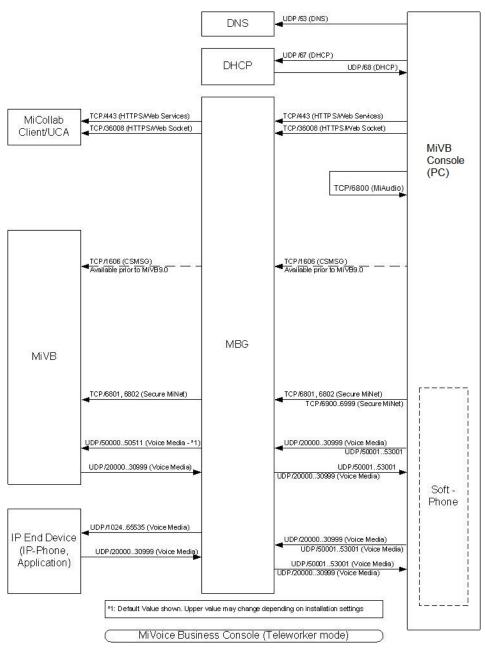


Figure 7.2: MiVoice Business Console - Teleworker Mode