



Clearspan[®]

AASTRA[®] 6757i CT IP PHONE

2789-003

Firmware Version 3.2.2

2811 Internet Blvd
Frisco, Texas 75034-1851
Tel +1 469 365 3000
Tel +1 800 468 3266
www.aastrausa.com



3rd Edition (September 15, 2011)

© Copyright 2011 Aastra USA Inc. All rights reserved.

Information in this manual may change with product revisions. Aastra® may add features or enhancements to the product(s) and/or program(s) described in this manual at any time.

Technical Publications freezes the information in this manual based on the specified software and hardware releases. Publications writers incorporate such changes into newly released publication editions. Publications writers will incorporate any modifications provided to them **after the publication release date** into the next scheduled release of the publication.

Aastra furnishes the application described in this manual under a license agreement and customers may use or copy information in the manuals only in accordance with the terms of the agreement.

Contact Information

Address any reader comments to:

Aastra USA Inc.
Technical Publications Manager
2811 Internet Boulevard
Frisco, TX 75034-1851

You may also send email to techpubs@aastrausa.com

What to Expect when Contacting Company

Technical Publications will email responses to customers within seven business days of the contact. Note that product support is not available through this email address. For product support, contact Aastra Customer Technical Support (ACTS) at 1-800-729-1872. Aastra may use or distribute review comments and information without incurring obligation.

Trademarks and Acknowledgements

Product registered trademarks and copyrights of the products included in this publication include Clearspan® and OpEasy® as registered trademarks of Aastra Technologies Ltd.; Microsoft® and MSN® as registered trademarks of Microsoft Corporation.

This publication identifies all other products or services mentioned herein by the trademarks, service marks, or product names designated by the companies that market those products. The companies producing these trademarks and registered trademarks control ownership of them. Make all inquiries concerning such trademarks directly to those companies.

6757i CT Product

Product Liability

Aastra Telecom will not accept liability for any damages and/or long distance charges, which result from unauthorized and/or unlawful use.

While every effort has been made to ensure accuracy, Aastra Telecom will not be liable for technical or editorial errors or omissions contained within this documentation. The information contained in this documentation is subject to change without notice.

Copyright 2005 Aastra Telecom. www.aastra.com

All Rights Reserved.

Software License Agreement

Aastra Telecom Inc., hereinafter known as "Seller", grants to Customer a personal, worldwide, non-transferable, non-sublicenseable and non-exclusive, restricted use license to use Software in object form solely with the Equipment for which the Software was intended. This Product may integrate programs, licensed to Aastra by third party Suppliers, for distribution under the terms of this agreement. These programs are confidential and proprietary, and are protected as such by copyright law as unpublished works and by international treaties to the fullest extent under the applicable law of the jurisdiction of the Customer. In addition, these confidential and proprietary programs are works conforming to the requirements of Section 401 of title 17 of the United States Code. Customer shall not disclose to any third party such confidential and proprietary programs and information and shall not export licensed Software to any country except in accordance with United States Export laws and restrictions.

Customer agrees to not reverse engineer, decompile, disassemble or display Software furnished in object code form. Customer shall not modify copy, reproduce, distribute, transcribe, translate or reduce to electronic medium or machine readable form or language, derive source code without the express written consent of the Seller and its Suppliers, or disseminate or otherwise disclose the Software to third parties. All Software furnished here under (whether or not part of firmware), including all copies thereof, is and shall remain the property of Seller and its Suppliers and is subject to the terms and conditions of this agreement. All rights reserved.

Customer's use of this software shall be deemed to reflect Customer's agreement to abide by the terms and conditions contained herein. Removal or modification of trademarks, copyright notices, logos, etc., or the use of Software on any Equipment other than that for which it is intended, or any other material breach of this Agreement, shall automatically terminate this license. If this Agreement is terminated for breach, Customer shall immediately discontinue use and destroy or return to Seller all licensed software and other confidential or proprietary information of Seller. In no event shall Seller or its suppliers or licensors be liable for any damages whatsoever (including without limitation, damages for loss of business profits, business interruption, loss of business information, other pecuniary loss, or consequential damages) arising out of the use of or inability to use the software, even if Seller has been advised of the possibility of such damages.

Limited Warranty

Aastra Telecom warrants this product against defects and malfunctions during a one (1) year period from the date of original purchase. If there is a defect or malfunction, Aastra Telecom shall, at its option, and as the exclusive remedy, either repair or replace the telephone set at no charge, if returned within the warranty period.

If replacement parts are used in making repairs, these parts may be refurbished, or may contain refurbished materials. If it is necessary to replace the telephone set, it may be replaced with a refurbished telephone of the same design and color. If it should become necessary to repair or replace a defective or malfunctioning telephone set under this warranty, the provisions of this warranty shall apply to the repaired or replaced telephone set until the expiration of ninety (90) days from the date of pick up, or the date of shipment to you, of the repaired or replacement set, or until the end of the original warranty period, whichever is later. Proof of the original purchase date is to be provided with all telephone sets returned for warranty repairs.

Exclusions

Aastra Telecom does not warrant its telephone sets to be compatible with the equipment of any particular telephone company. This warranty does not extend to damage to products resulting from improper installation or operation, alteration, accident, neglect, abuse, misuse, fire or natural causes such as storms or floods, after the telephone is in your possession.

Aastra Telecom shall not be liable for any incidental or consequential damages, including, but not limited to, loss, damage or expense directly or indirectly arising from the customer's use of or inability to use this telephone, either separately or in combination with other equipment. This paragraph, however, shall not apply to consequential damages for injury to the person in the case of telephones used or bought for use primarily for personal, family or household purposes. This warranty sets forth the entire liability and obligations of Aastra Telecom with respect to breach of warranty, and the warranties set forth or limited herein are the sole warranties and are in lieu of all other warranties, expressed or implied, including warranties or fitness for particular purpose and merchantability.

Warranty Repair Service

Should the set fail during the warranty period, contact the Aastra Customer Service Center (CSC) at 1-800-729-1872.

Revision History

The following represents the revision history of this publication:

Revision Number	Date Completed	Point of Contact	Description
003	09/15/11	Bev Marsh	Firmware Release 3.2.2.1035
002	03/09	Bev Marsh	Additions and Corrections.
001	11/03/08	Bev Marsh	Initial release of this publication.



Table of Contents

3rd Edition (September 15, 2011).....	3
Contact Information.....	3
What to Expect when Contacting Company.....	3
Trademarks and Acknowledgements	3
6757i CT Product	3
Product Liability.....	3
Software License Agreement.....	4
Limited Warranty.....	4
Exclusions	4
Warranty Repair Service.....	5
Revision History	5
Table of Contents.....	7
Table of Figures	13
1 About this Publication	15
1.1 Overview	15
1.2 Audience	15
1.3 Terms and Definitions.....	15
1.4 References.....	15
2 Introduction.....	17
2.1 Overview	17
2.2 The 6757i CT IP Phone with Cordless Handset	17
2.2.1 Phone Features – 6757i CT Base Station.....	17
2.2.2 Phone Features – 6757i CT Cordless Handset	18
2.2.3 General Requirements.....	18
2.3 Headset/Handset Connection	18
2.3.1 Handset	18
2.3.2 Headset (Optional)	19
3 Getting Started	21
3.1 Installation and Setup	21
3.1.1 Startup Sequence	21
3.1.2 Configuration and Updates.....	22
3.1.3 Language Packs	22
3.1.4 Configuration Complete	22
3.1.5 Idle Screen.....	23
3.1.6 Incomplete Configuration.....	23
3.1.7 No Service Message.....	23
3.1.8 Network Disconnected Message	23
3.2 6757i CT Base Station and Functions.....	24

3.3	Key Description	24
3.4	Features	25
3.5	Clearspan Feature Access Codes	28
3.6	Softkey Display	28
3.7	Idle Screen Display	28
3.7.1	Bottom Softkey Display	28
3.7.2	“State-based” Softkey Display	29
3.8	Line Appearance Keys	30
3.9	Softkeys as Line Appearances	30
3.9.1	Softkey Line Appearance Status Icons	30
3.10	Line Status Lamps	30
3.11	Speaker and MWI Status Lamps	31
3.12	Speaker Lamp	31
3.13	Message Waiting Indicator Lamp	31
3.14	Volume Keys	31
3.15	Call Timer	32
3.16	Mute	32
4	Customize Your Phone	35
4.1	Options List	35
4.1.1	Access the Options List	36
4.1.2	Call Forward Menu	37
4.1.3	Preferences Menu	39
4.1.4	Display	40
4.1.5	Speed Dial Edit	43
4.1.6	Live Dialpad	43
4.1.7	Set Audio	44
4.1.8	Time and Date	46
4.1.9	Language	50
4.1.10	Phone Status Menu	50
4.1.11	User Password	53
4.1.12	Administrator Menu	53
4.1.13	Restart Phone	53
4.1.14	Phone Lock	54
5	Call Handling on the 6757i CT Base Station	57
5.1	Place a Call	57
5.2	Receive a Call	57
5.2.1	Answer an Incoming Call	58
5.3	Ignore a Call	58
5.4	Connected Call	59
5.4.1	Connected Call Display Details	59
5.4.2	Lock Symbol	59
5.4.3	Calls on Hold	60

5.5	Callers List and Redial List	60
5.6	Handle Calls Using the Speaker	60
5.7	Handle Calls Using a Headset	61
5.8	End a Call	61
6	Phone Features	63
6.1	Hold	63
6.1.1	Place a Call on Hold	63
6.1.2	Retrieve a Held Call	64
6.1.3	Automatic Hold	64
6.1.4	Manage Multiple Calls on Hold	64
6.2	Do Not Disturb	65
6.3	Transfer	65
6.4	Conference	68
6.4.1	Establish the Conference	68
6.5	Park and Pickup	70
6.5.1	Default Display	70
6.5.2	Use Park and Pickup	70
6.6	Call Forwarding All, Busy, No Answer	71
6.7	Call Return	72
6.8	Call Waiting	72
6.9	Directed Call Pickup	72
6.9.1	Directed Call Pickup Feature Interactions	73
6.10	Directed Call Pickup with Barge-In	73
6.11	Autodial (Hotline and Warmline)	74
6.12	Intercom	74
6.12.1	Outgoing Intercom	74
6.12.2	Incoming Intercom	74
6.12.3	Use the Intercom Softkey	74
6.13	Stuttered Dial Tone	75
6.14	Services	75
6.15	Callers List	75
6.15.1	Callers List Display	76
6.15.2	Callers List Functions	76
6.15.3	Missed Calls Indicator	77
6.15.4	Delete Entries in the Callers List	78
6.15.5	Exit the Callers List	78
6.16	Redial	79
6.16.1	Last Number Redial	79
6.17	Redial List	79
6.18	Speeddial	80
6.18.1	Edit a Speeddial Key using the Options List	80
6.18.2	Add a new Speeddial Key (Press and Hold)	83

6.19	Speed Dial 8.....	84
6.20	Speed Dial 100	84
6.21	Speedial/Xfer Softkey	84
6.21.1	Speedial/Xfer Key Requirements and Functionality	85
6.22	Speedial/Conf Softkey	85
6.23	Shared Call Appearance Call Retrieve.....	85
6.23.1	Keys States and LED Behavior.....	86
6.24	XML Application Keys.....	87
6.24.1	Access XML Applications	88
6.25	Voicemail List	88
7	The 6757i CT Cordless Handset	91
7.1	The 6757i CT Cordless Handset	91
7.2	Idle Display.....	91
7.3	Handset Icons and Status Messages.....	92
7.3.1	Screen Icons.....	92
7.3.2	Status Messages.....	92
7.4	Handset Keys.....	93
7.5	Multi-function Handset LED Indicator Lamps.....	94
7.6	Headset	94
7.7	Battery	94
7.7.1	Battery Charge	94
7.7.2	Battery Guidelines.....	94
7.7.3	Handset Battery Indicator & Status	95
7.8	Volume Control	95
7.8.1	Adjust the Receiver Volume	95
7.8.2	Adjust the Ringer Volume.....	96
7.9	Feature Key Functions	96
7.10	Feature Key Programming.....	97
7.11	Mute.....	97
7.12	Edit with the 6757i CT Cordless Handset.....	97
7.12.1	Characters and Numbers	97
7.12.2	General Record Editing	97
7.13	Handset Directory	98
7.14	Callers List on the Handset	100
7.14.1	Use the Handset Callers List.....	101
7.15	Redial Key on the Handset	103
8	Customize your 6757i CT Cordless Handset	105
8.1	Handset Options List	105
8.2	Access the Options List.....	105
8.2.1	Select an Option.....	106
8.3	Intercom.....	106
8.4	Language	107

8.5	Ring Tone.....	107
8.6	Custom Name.....	108
8.6.1	Create the Name.....	108
8.7	Timer.....	109
8.8	Vibrate	109
8.9	Key Lock.....	109
8.10	Backlight.....	110
8.11	Silent Alert	110
8.12	Handset Pairing	111
9	Call Handling on the 6757i CT Cordless Handset.....	113
9.1	Place Calls from the Handset.....	113
9.1.1	Dial a Number	113
9.2	Receive Calls on the Handset.....	113
9.2.1	Answer an Incoming Call	113
9.3	Call Privacy	113
9.4	Private and Public Keys.....	114
9.4.1	Use the Public Feature on the Handset.....	114
9.5	Access the Public Feature on the Base Station.....	115
9.5.1	Base Station Display when the Cordless Handset is Used	115
9.6	Hold and Auto-hold	116
9.6.1	Retrieve a Held Call	116
9.7	Transfer	117
9.8	Conference.....	117
9.8.1	Release the Conference	118
9.9	End a Call.....	118
10	Pair and Unpair the Cordless Handset to the Base Station.....	119
10.1	Pair a Handset	119
10.2	Unpair a Handset.....	121
	Appendix A - Optional Expansion Modules	125
	Expansion Modules.....	125
	M670i.....	125
	M675i.....	125
	Using the Expansion Modules.....	126
	M670i Expansion Module.....	126
	M675i Expansion Module.....	127
	Appendix B – Clearspan Feature Access Codes	129
	Appendix C - Troubleshooting	137
	Index	139



Table of Figures

Figure 1. 6757i CT IP Phone with Cordless Handset	17
Figure 2. Headset and Handset Connection	19
Figure 3 Idle Screen	23
Figure 4 6757i CT Keys and Functions	24
Figure 5 Receive a Call.....	58
Figure 6 Connected Call	59
Figure 7 Lock Symbol	60
Figure 8 Services Menu	75
Figure 9 Missed Calls Indicator	77
Figure 10 SCA Bridging	86
Figure 11 6757i CT Cordless Handset.....	91
Figure 12 Handset Idle Display	91
Figure 13 M670i Expansion Module	125
Figure 14 M675i Expansion Module	125
Figure 15 M670i Expansion Module Drawing.....	126
Figure 16 M675i Page 1 Screen	127
Figure 17 M675i Page 2 and 3 Screens	127
Figure 18 M675i Extensions on a 6757i CT	128



1 About this Publication

1.1 Overview

This guide explains how to use the features of your new 6757i CT IP phone. The features assigned to your phone were chosen by your system administrator according to the requirements of your organization; therefore, you may not have access to all the features presented in this document.

1.2 Audience

This publication is intended for any user of the 6757i CT IP phone.

1.3 Terms and Definitions

Term	Definition
IP	Internet Protocol (IP) is a data-oriented protocol used for communicating data across a packet-switched network.
IP Address	An identifier for a computer or device on a TCP/IP network. Networks using the TCP/IP protocol route messages based on the IP address of the destination. The format of an IP address is a 32-bit numeric address written as four numbers separated by periods. Each number can be zero to 255. For example, 10.160.10.240 could be an IP address.
MAC Address – Media Access Control	A number located on the white sticker on the bottom of the phone that serves as a name for each phone.
SIP – Session Initiation Protocol	The protocol for VOIP and other text and multimedia sessions, such as instant messaging, video, online games and other services.
VoIP – Voice Over IP	A technology that allows you to make telephone calls using a broadband Internet connection instead of a regular (or analog) phone line.

1.4 References

The following publications provide additional information for the 6757i CT IP phone.

Title	Description
Aastra Model 6757i CT Installation Guide	Installation and set-up instructions, general features and functions, and basic options list customization. This publication is included with the telephone.



2 Introduction

2.1 Overview

The 6757i CT IP telephone provides communications over an IP Network using the SIP IP telephony protocol. The 6757i CT has all the features of a regular business phone, allowing you to place and receive calls, transfer, conference and more.

2.2 The 6757i CT IP Phone with Cordless Handset



Figure 1. 6757i CT IP Phone with Cordless Handset

2.2.1 Phone Features – 6757i CT Base Station

- 11-line graphical LCD screen (144 x 128 pixels) with white backlight.
- 12 multi-functional softkeys.
 - 6 Top Keys: Static programmable softkeys – (up to 10 programmable functions).
 - 6 Bottom Keys: State-based programmable softkeys - (up to 20 programmable functions).
- 4 line/call appearance keys with corresponding status lamps.
- Supports up to 9 lines.
- Full-duplex speaker for hands-free calls.
- Headset support (modular connector).

- Built-in two-port, 10/100 Ethernet switch allowing you to share a connection with your computer.

2.2.2 Phone Features – 6757i CT Cordless Handset

- 5 line backlit display screen.
- 2 multi-functional softkeys.
- Programmable function key supports up to 14 functions.
- Vibration Alert.
- Headset Jack.
- Desk charging stand.
- Belt Clip.


2.2.3 General Requirements

The 6757i CT requires the following environment:

- A SIP-based IP PBX system or network installed and running with a SIP account created for the 6757i CT.
- Access to a Trivial File Transfer Protocol (TFTP) server.
- Ethernet/Fast Ethernet LAN (10/100mb).
- Category 5/5e straight through cabling.
- Power Options:
 - Power over Ethernet (PoE) 802.3af
 - Inline power injector – An optional accessory necessary only if your network provides no inline power.
 - AC power adapter, included with the phone.

2.3 Headset/Handset Connection

2.3.1 Handset

Turn the phone over and locate the handset jack marked . Insert one end of handset cord into the jack until it clicks into place. Then route the handset cord through the groove as shown in the illustration below. Attach the handset to the other end of the handset cord.

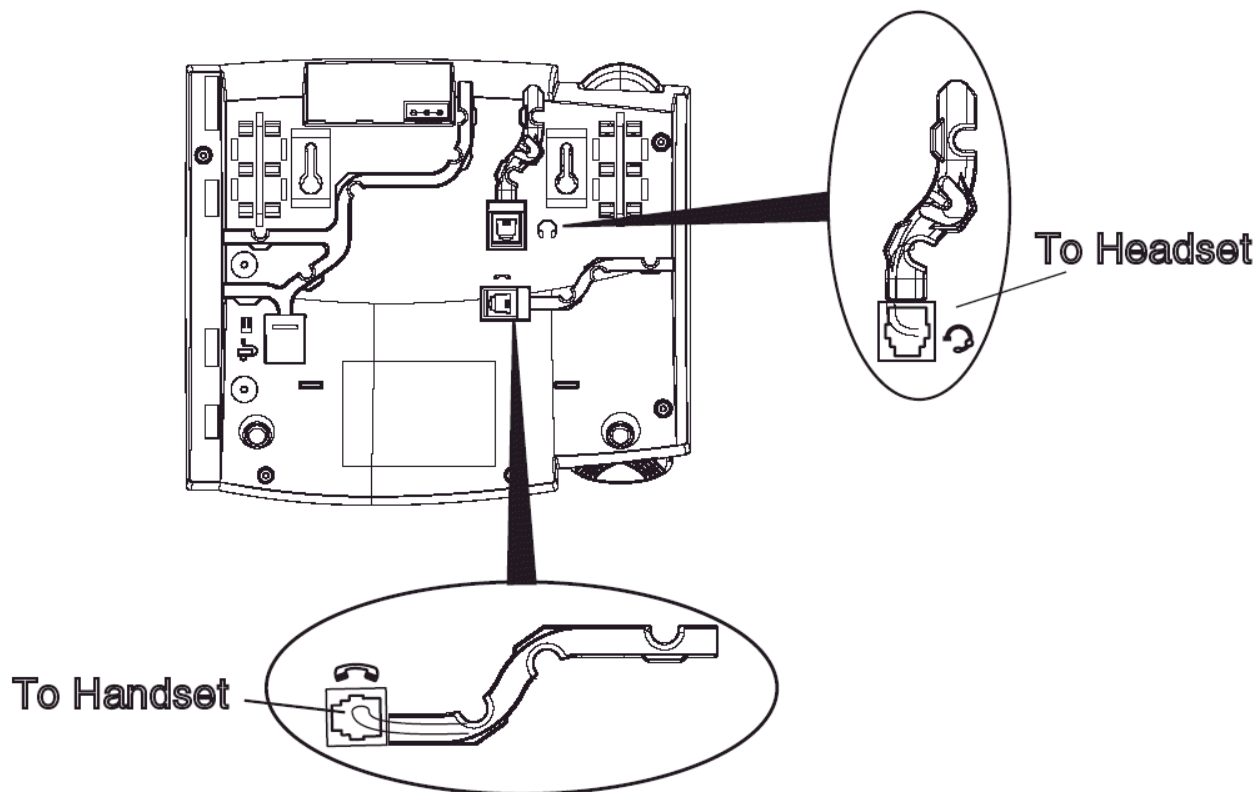



Figure 2. Headset and Handset Connection

2.3.2 Headset (Optional)

Turn the phone over and locate the headset jack marked . Insert the headset cord into the jack until it clicks into place. Then route the headset cord through the groove as shown in the above illustration.



3 Getting Started

3.1 Installation and Setup

If your system administrator has not already setup your 6757i CT, please refer to the Aastra Model 6757i CT Installation Guide for basic installation and physical setup of the phone.

Note

- Your system or network administrator manages the configuration and updates for the IP phones on the configuration server.
- New updates to your phone can be automatically scheduled from the server by your system administrator. Automatic updates are scheduled during non-business hours or slow call periods.

3.1.1 Startup Sequence

The 6757i CT automatically begins the startup sequence as soon as it is connected. The phone goes through this process the first time you plug in your phone and every time you restart your phone. The following screens display:



Note

Other startup screens will only appear the first time you connect your phone, or if your phone has been set back to factory defaults.

3.1.2 Configuration and Updates

The 6757i CT then checks settings and looks for new configuration and firmware updates on the configuration server. If a new update is found, the phone displays the update it is installing (either "Updating Config" or "New Firmware"). This process could take a few moments while the configuration server downloads the latest updates.



Do not unplug or remove power from the phone while it is restarting.

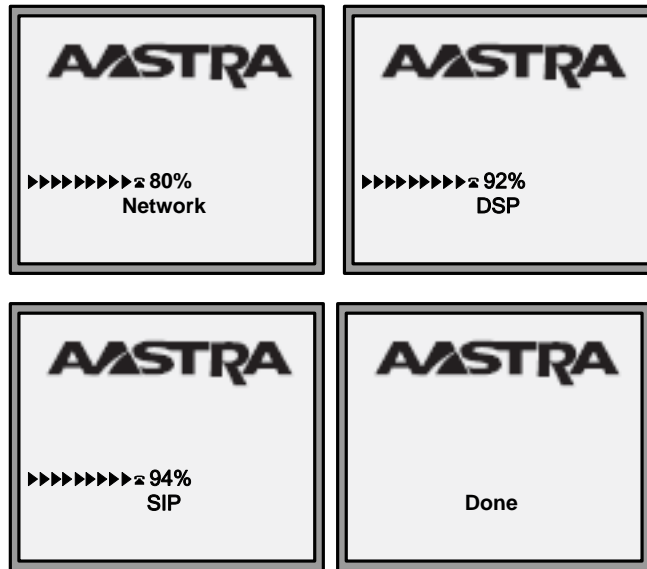
3.1.3 Language Packs

If language packs were loaded to your phone by your System Administrator, the following screen displays during startup.



3.1.4 Configuration Complete

When the configuration update is complete, the phone displays the following screens:



3.1.5 Idle Screen

The idle screen displays when your 6757i CT startup process is completed.

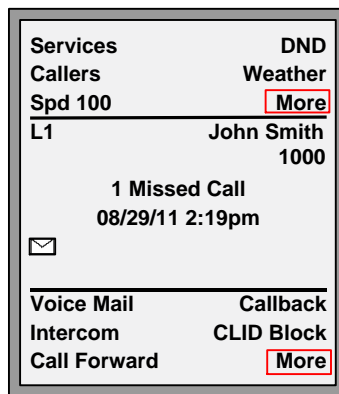


Figure 3 Idle Screen

3.1.6 Incomplete Configuration

If your phone displays an "Incomplete Config" message without any extension or user name at the end of the start-up sequence instead of an Idle state screen, this indicates the phone configuration that was downloaded from the configuration server is not complete or correct. Contact your System Administrator for assistance.

3.1.7 No Service Message

See [Appendix C, No Service](#) for information.

3.1.8 Network Disconnected Message






 
 

 
See [Appendix C, Network Disconnected](#) for information.




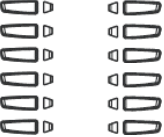
3.2 6757i CT Base Station and Functions



Figure 4 6757i CT Keys and Functions

3.3 Key Description

Key	Description
	<ul style="list-style-type: none"> Ends an active call Exits an open list, such as the Options List, without saving changes.
	Accesses a list of options to customize your phone.
	Controls the Hold feature.
	<ul style="list-style-type: none"> Accesses the Redial list of to 100 previously dialed numbers. Controls the Last Number Redial feature.
	Adjusts the volume for the handset, headset, ringer, and speaker.
   	4 line/call appearance keys.

Key	Description
	Activates the Speaker or Headset depending upon audio mode.
	Mutes the microphone so that your caller cannot hear you. The lamp indicator flashes when the microphone is on mute.
	<p>Navigation keys:</p> <p>Up and Down arrows (▲ or ▼):</p> <ul style="list-style-type: none"> Allow you to view status and text messages on the LCD display if the message consists of more than one line. Allow you to scroll through menu selections, such as the Options List. <p>Right and Left arrows (◀ and ▶):</p> <ul style="list-style-type: none"> Allow you to view line/call appearances. Allow you to exit and enter a specific option in the Options list. While editing entries on the display, the LEFT arrow key erases the character on the left and the RIGHT arrow key sets (saves) the option.
	<p>Top Softkeys – 6 static programmable softkeys displaying at the top of the LCD screen supporting up to 10 programmable functions, with corresponding status lamps.</p> <p>-----</p> <p>Bottom Softkeys - 6 Context-sensitive state-based softkeys displaying at the bottom of the LCD screen supporting up to 20 programmable functions, with corresponding status lamps.</p> <p>By default, keys 1 through 6 have no assigned functions. You can configure all 6 bottom softkeys to perform specific functions. However, after you lift the handset, there are specific static softkeys that display and cannot be changed.</p> <ul style="list-style-type: none"> 1 - DIAL - Allows you to dial out on the phone. 2 - CONF - Begins a conference call with the active phone. 3 - XFER - Transfers the active call to another number.
Optional Expansion Modules	The M670i or M675i Expansion Module(s) provide an additional 36 softkeys on each M670i Expansion Module, and up to 60 softkeys on each M675i Expansion Module. (The 6757i CT IP Phone allows up to 3 expansion modules on each phone).

3.4 Features

Note

Because Clearspan features are available by license only, you may not have access to all of them. The keys are configured by the system administrator according to the requirements of your organization. Contact your system administrator with any questions.

Feature	Description
Commonly used features:	
Hold	Handles held calls.
Do Not Disturb	Places the phone in the Do Not Disturb state. Incoming calls go directly to your pre-defined call forward/busy destination, usually your voicemail.
Transfer	Transfers a call to another party.
Call Forwarding Call Forward in Phone UI	Forwards all incoming calls to another number. Includes: <ul style="list-style-type: none"> • Call Forward All Activation/Deactivation • Call Forward Busy Activation/Deactivation • Call Forward No Answer Activation/Deactivation • Call Forward Always to Voice Mail Activation/Deactivation • Call Forward Busy to Voice Mail Activation/Deactivation • Call Forward No Answer to Voice Mail Activation/Deactivation
Conference	Establishes a 3-way conference.
Call Return	Enables you to call the last party that called you, whether or not that call was answered.
Call Waiting	Allows you to answer a call while already engaged in another call.
Park	Used park a connected call.
Pickup	Used to pick up a parked call.
Directed Call Pickup	Allows you to pick up a call ringing at another extension in the same group.
Directed Call Pickup with Barge-In	Allows you to do Directed Call Pickup, and also allows you to barge in on the call if the call was already answered.
Stuttered Dial Tone	Allows you to hear stuttered dial tone when there is a message waiting on your phone.
Last Number Redial	Allows you to automatically redial the last number dialed.
Services	Accesses enhanced features such as the Callers List and Voicemail List, and services provided by third parties such as XML services.
Callers List	Accesses the Callers List.
Speed Dial	Dials a user-defined number automatically.
Speed Dial 8	Allows you to associate single-digit codes (2-9) to 8 frequently dialed numbers.
Speed Dial 100	Allows you to associate two-digit codes (00-99) to 100 frequently dialed numbers.
Shared Call Appearance Call Retrieve	Allows incoming calls to ring on up to 35 additional phones simultaneously and connecting to the first phone to be answered. A call on a shared line can be held on one phone and retrieved from any other phone.

Additional Features:	
Automatic Callback Deactivation	Allows you to monitor a busy party and automatically establish a call when that party becomes idle. You can deactivate all callbacks that you have left on other parties by dialing the appropriate feature access code.
Calling Line ID Delivery Blocking Persistent Activation or Deactivation	Enables you to “persistently” block delivery of your calling line ID to the called party.
Calling Line ID Delivery Blocking per Call	Overrides the blocking of the calling line ID (CLID) so you can block the delivery of your identity for the next call. At the end of the call, the presentation of your identity is restored to its “persistent” status.
Calling Line ID Delivery per Call	Overrides the persistent presentation of the calling line ID (CLID) so you can allow the delivery of your identity for the next call. At the end of the call, the presentation of your identity to the “persistent” status.
Call Waiting Persistent Activation/Deactivation	Enables you to answer a call while already engaged in another call. Call Waiting is “On” by default, but can be deactivated.
Cancel Call Waiting per Call	Allows you to disable Call Waiting for the next or current call.
Clear Voice Message Waiting Indicator	Clears the voice message indicator lamp.
Customer Originated Trace	Allows you to start a trace after an obscene, harassing, or threatening call.
Diversion Inhibitor	Prevents redirected calls from being redirected again by the called party.
Music on Hold Per-Call Deactivation	Allows you to enable/disable Music On Hold on either a per-call or persistent basis. This feature is especially useful when participating in a conference call.
No Answer Timer	Allows you to set the number of rings before a call is forwarded by setting the no-answer timer.
Per Call Account Code	Allows you to enter an account code before making a call. You are prompted for an account code, you dial the code, receive confirmation, and then proceed with the call as usual. The sequence is as follows: [Off-hook] [FAC] [prompt] [code] [confirmation] [dial tone] [call]
Push to Talk (Intercom)	Allows you to call another station, where the system requests that the destination station automatically answer, providing intercom-like functionality. A user or administrator can specify an accept list and a reject list. These are used to screen incoming Push-To-Talk sessions. <ul style="list-style-type: none"> • The accept list indicates which users are allowed to call a station. • The reject list indicates which users are not allowed to call a station. In both lists, a wildcard can be used, which indicates all stations.

Shared Call Appearance Location Control Activation and Deactivation	Allows you to activate or deactivate the shared call appearance at a particular station.
Sustained Auth Code Activation and Deactivation	Allows you to unlock calls by having the Calling Plan service use a sustained authorization code for all calls instead of prompting for the code on a per-call basis. You can also disable the sustained authorization codes feature, which restores the collection of authorization codes for all calls.
Voice Portal Access	Provides an interactive voice response (IVR) application that can be called by members of the group from any phone, to manage their services and voice mailbox, or to change their passcode.

3.5 Clearspan Feature Access Codes

The main call handling and extension management features for the Clearspan system have feature access codes that can be set up as speed dial keys on your phone using the Aastra Phone User Interface. You can also manually dial the feature access codes.

See [Appendix B - Clearspan Feature Access Codes](#) for the default codes. If the codes have been customized, your system administrator must provide the code information.

3.6 Softkey Display

The 6757i contains two softkey display sections:

- Bottom Softkeys – 6 context-sensitive “state-based” softkeys displaying at the bottom of the LCD screen supporting up to 20 programmable functions, with corresponding status lamps.
- Top Softkeys - 6 static programmable softkeys displaying at the top of the LCD screen supporting up to 10 programmable functions, with corresponding status lamps.




3.7 Idle Screen Display

The idle screen displays when your phone is not in use and displays the feature softkeys configured for your phone. If more than 6 features have been configured, the **More** softkey displays in the 6th position of the section to allow you to navigate forward or backward in the softkey display list.

3.7.1 Bottom Softkey Display

In the following example, 7 features were configured on the bottom softkeys.

Main Idle Screen:	Second Screen:
5 softkeys display along with the More softkey indicating there are more keys to see.	When you use the More softkey, the top of the screen remains the same. <ul style="list-style-type: none"> • The 2 remaining softkeys display plus the More softkey. • The More softkey takes you back to the main screen.


Main Idle Screen:	Second Screen:
<div> <div> ServicesDND CallersWeather Spd 100More L1John Smith 1000 1 Missed Call 08/29/11 2:19pm  Voice MailCallback IntercomCLID Block Call ForwardMore </div> <div>Note</div> <div> The  icon indicates that you have new voicemail messages. </div> </div>	<div> <div> MaryMore L1John Smith 1000 1 Missed Call 08/29/11 02:20pm  Sallie EdwardMore </div> </div>

3.7.2 “State-based” Softkey Display

The softkey display at the bottom of the screen changes as the state of the phone changes. The softkey features display in the first positions and the remaining softkey features move to the second and third screens as necessary. For example:

- When you lift the handset to dial, the **Dial**, **Conf** and **Xfer** keys display, along with the **More** softkey. The remaining softkeys move to the next screens.
- When your phone rings, the **Answer** and **Ignore** softkeys display, along with the **More** softkey. The remaining softkeys move to the next screens.
- When you are connected to a call, the **Drop**, **Conf** and **Xfer** softkeys display, along with the **More** softkey. The remaining softkeys move to the next screens.

The following example shows how the screen changes from the idle state to the connected state.

Idle Screen	Connected State Screen	Connected State – Screen 2
<p>The main idle screen:</p> <div> <div> ServicesDND CallersWeather Spd 100More L1John Smith 1000 1 Missed Call 06/29/07 2:19pm  Voice MailCallback Call PullCLID Block Call ReturnMore </div> </div>	<p>When you are connected to a call, the Drop softkey displays.</p> <div> <div> ServicesDND CallersWeather Spd 100More L1John Smith 02:42 Mary Jones 1003 Drop Conf XferMore </div> </div>	<p>The remaining softkeys from the main screen move to the second screen.</p> <div> <div> ServicesDND CallersWeather SPd 100More L1John Smith 02:50 Mary Jones 1003 Voice MailCallback Call PullCLID Block Call ReturnMore </div> </div>

3.8 Line Appearance Keys

There are 4 line appearance keys on the bottom right side of the phone labeled L1 – L4. The associated lamps indicate the status of the line. The following applies to these keys:





- L1 is your preferred line (extension). Regardless of the line used on a call, the next time the phone goes off-hook, it will select L1 if available; however, you can use any of them to place a call if you select the line manually.
- If you have more than one directory number on your phone and want to originate a call from a specific line that is not your preferred line, you must choose the line manually.

3.9 Softkeys as Line Appearances

Softkeys can also be programmed as line appearances. Status icons display next to the number displayed. Line appearance assignments for these keys are **L5 – L9**. The following applies to these keys:

- Bottom “state-based” softkeys assigned as line appearances will move to the subsequent screens along with the other feature softkeys according to the state the phone is in. Top softkeys remain in their pre-defined order in the display.
- If call rings in on a line softkey that does not display on the first screen of the phone, you can go off-hook and the call is automatically answered.

3.9.1 Softkey Line Appearance Status Icons

Softkey Line/Call Appearance Status Icons		
Activity	Icon	Description
Idle		There is no call activity for the line/call appearance softkey.
Connected		A call is connected to the phone on this line/call appearance softkey. The equivalent on a line/call appearance hard key is a solid lamp.
Ringing		A call is ringing at in on this line/call appearance softkey. The equivalent on a line/call appearance hard key is a fast flashing lamp.
On Hold		This icon flashes slowly when a call is on hold on this line/call appearance softkey. The equivalent on a line/call appearance hard key is a slow flashing lamp.

3.10 Line Status Lamps

Line/Call appearance hard keys **L1 – L4** have green lamps. Line/call appearances assigned to both top and bottom softkeys have red lamps.

Activity	Lamp	Description
Idle	Off	There is no call activity on this line/call appearance.
Connected	Solid	A call is connected to the phone on this line/call appearance.
Ringing	Fast Flash	A call is ringing in on this line/call appearance.
On Hold	Slow Flash	A call is on hold on this line/call appearance.

3.11 Speaker and MWI Status Lamps

The Speaker lamp and the Message Waiting Indicator (MWI) lamp provide visual status indications.

3.12 Speaker Lamp

The speaker lamp is located beside the **Speaker** key.

Speaker LED Status	Description
On Solid	You are in Speaker mode.
Slow Flash	You are in Headset mode.





3.13 Message Waiting Indicator Lamp

The **Message Waiting Indicator** (MWI) lamp is located at the top right of the phone.

MWI LED Status	Description
Slow Flash	You have a new message (s).
Rapid Flash	You have an incoming call.
Even Flash	One or more calls are on hold.

3.14 Volume Keys

You can adjust the volume on the receiver, headset, speaker, and ringer using the Volume keys.






Step	Action	Result
Set Ringer Volume:		
1.	Leave the handset in the cradle.	
2.	Press the Volume keys  .	The Ringer displays on the screen and you hear the current ringer volume. You can also set the volume to OFF.
Set Handset Volume:		
1.	Lift the handset	You hear dial tone at the current sound level.
2.	Press the Volume keys  .	The Handset volume indicator displays on the screen. The handset remains at this volume until it is adjusted again.
Set Headset Volume:		
1.	Press the Volume keys  while on a call.	The Headset volume indicator displays on the screen. The headset remains at this volume until it is adjusted again.
Set Speaker Volume:		
1.	Press the Volume keys  while on a call and talking on the Speaker.	The Speaker volume indicator displays on the screen. The speaker remains at this volume until it is adjusted again.

3.15 Call Timer

This timer displays the elapsed time of a call.

3.16 Mute

You can use the **Mute** key in any audio mode.

Step	Action	Result																
Activate the Mute feature:																		
1.	<p>During a call: Press the Mute key.</p> <p> Caution!</p> <p>If you place a muted call on hold, the phone automatically takes the call off mute when you reconnect to the call.</p>	<ul style="list-style-type: none">The red Mute lamp flashes slowly.The microphone icon  displays on the screen.You can hear the caller.The caller cannot hear you. <div><table><tr><td>Services</td><td>DND</td></tr><tr><td>Callers</td><td>Weather</td></tr><tr><td>Spd 100</td><td>More</td></tr><tr><td>L1</td><td>John Smith</td></tr><tr><td> Mary Jones 2394</td><td>00:45</td></tr><tr><td>Drop</td><td></td></tr><tr><td>Conf</td><td></td></tr><tr><td>Xfer</td><td>More</td></tr></table></div>	Services	DND	Callers	Weather	Spd 100	More	L1	John Smith	 Mary Jones 2394	00:45	Drop		Conf		Xfer	More
Services	DND																	
Callers	Weather																	
Spd 100	More																	
L1	John Smith																	
 Mary Jones 2394	00:45																	
Drop																		
Conf																		
Xfer	More																	
Deactivate the Mute feature:																		
1.	Press the Mute key again.	Mute is deactivated.																



4 Customize Your Phone

4.1 Options List

You can customize your phone using the Phone User Interface (UI) and the Options List. The Options List is a list of configuration options for your phone. The **Options** key allows you to access the list.

The following table shows the phone options you can access with the Phone UI. Options requiring an administrator password are indicated.

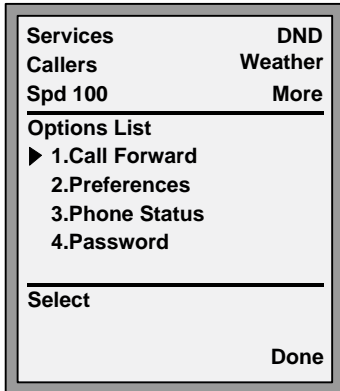


Any changes from the default settings are permanent until you change them again.

Menu Item Number	Main Menu Options	Sub-menu Options	Description
1.	Call Forward	All Busy No Answer	Sets the Call Forward All, Busy, and No Answer destinations.
2..	Preferences	Tones	Sets ring tone and tone set preferences.
		Display	Sets the contrast level and backlight for the phone display.
		Speed Dial Edit	Allows the user to configure a Speed Dial key.
		Live Dialpad	Controls the Live Dialpad feature. This feature is set to ON by default.
		Set Audio	Sets the audio type used to handle calls your calls. The audio mode is set to Speaker by default. It also set the headset microphone volume.
		Time and Date	Sets the time and date on the phone.
		Language	The language option has been pre-defined as English.
3.	Phone Status	IP and MAC Addresses	Displays the IP and MAC addresses.
		LAN Port	Displays LAN Port information.
		PC Port	Displays PC port information.
		Firmware Info	Displays the current firmware used by the phone.
		Error Messages	Displays any phone-related error messages

Menu Item Number	Main Menu Options	Sub-menu Options	Description
		Copyright	Displays the Copyright information for the phone.
4.	Password		Sets the user password on the phone.
5.	Admin Menu		Administrator functions requiring an administrator password.
6.	Restart Phone		Restarts the phone.
7.	Phone Lock		Locks and unlocks the phone.

4.1.1 Access the Options List

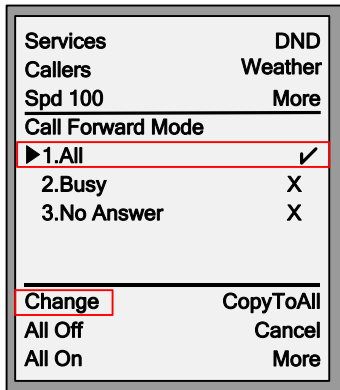
Step	Action	Result
1.	Press the Options key.	The Options List displays. 
2.	<ul style="list-style-type: none"> Press ▼ or ▲ to scroll through the list of 6 options. Press Select or ►. <p>Or</p> <ul style="list-style-type: none"> Press the menu item number to go into the option. 	The corresponding option screen displays.
Exit and save changes:		
1.	Press the Done or Quit softkey at any time.	The change is saved and you return to the previous screen.

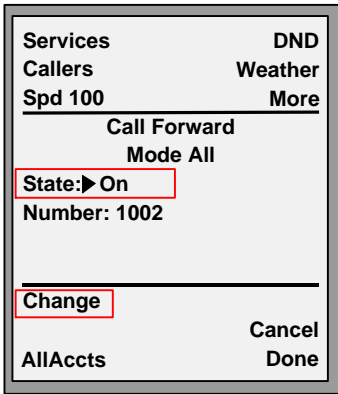
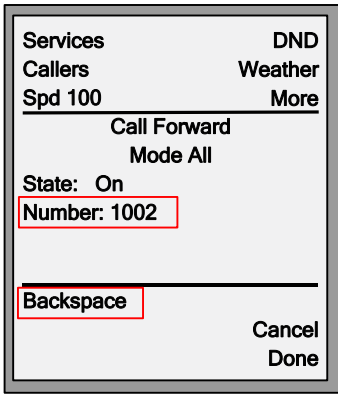
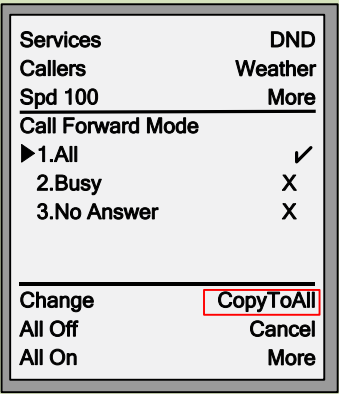
Cancel changes:		
1.	<ul style="list-style-type: none"> Press the Cancel softkey. <p>Or</p> <ul style="list-style-type: none"> Press ◀ until the main screen displays. <p>Or</p> <ul style="list-style-type: none"> Press the Goodbye key. 	
Exit the Options list:		
1.	Press the Goodbye key or the Options key from any menu.	The idle screen displays.

4.1.2 Call Forward Menu

Note

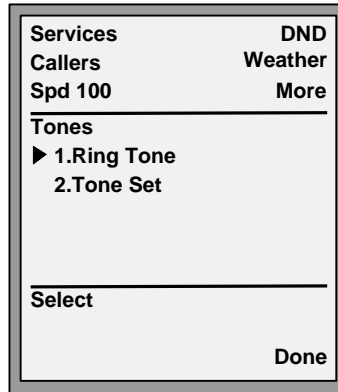
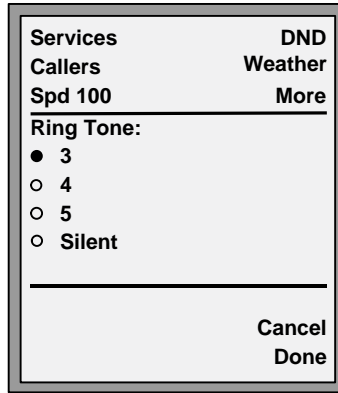
The **AllAccts** softkey is used to change all accounts (extensions) defined on the phone.

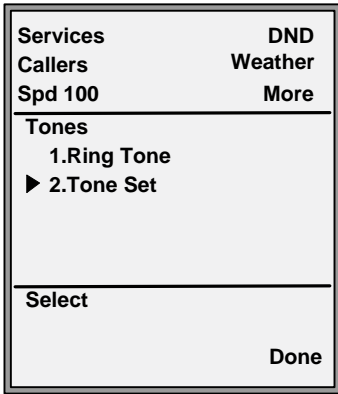
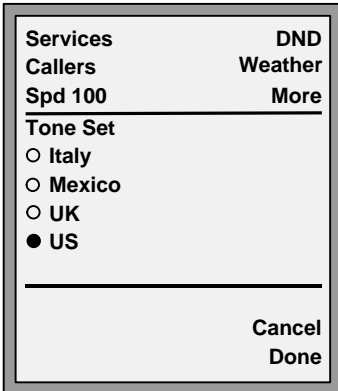
Step	Action	Result
The following procedure applies to all Call Forward Modes:		
1.	Press the Options key.	The Call Forward option is the first in the list.
2.	Press Select or ▶.	<p>The Call Forward Mode screen displays.</p> 

Step	Action	Result
3.	Press Change to set the Call Forward mode.	
4.	Press Backspace to edit the Call Forward number.	
5.	Press Done .	
<div> <div>Note</div> <ul style="list-style-type: none"> Once the number is programmed, it will not change until you change it again. You can use the On and Off softkeys on the main Call Forward screen to manage the state of the Call Forward modes. You can set one Call Forward mode and use the CopyToAll softkey to copy the information to all modes.  </div>		

4.1.3 Preferences Menu

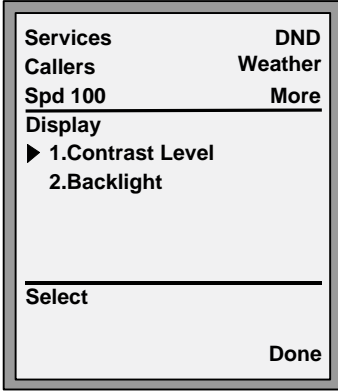
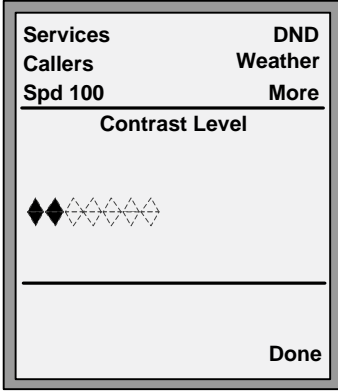
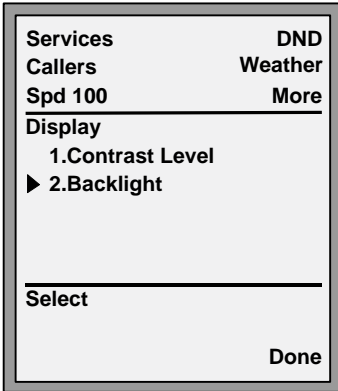
4.1.3.1 Tones

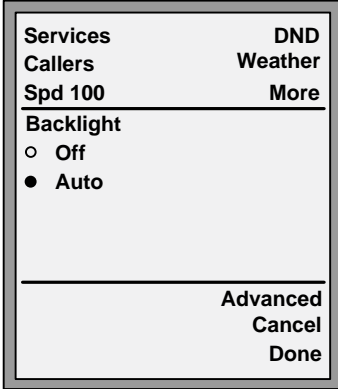
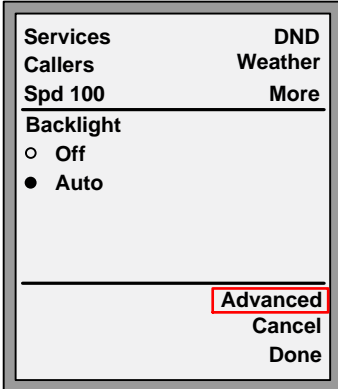
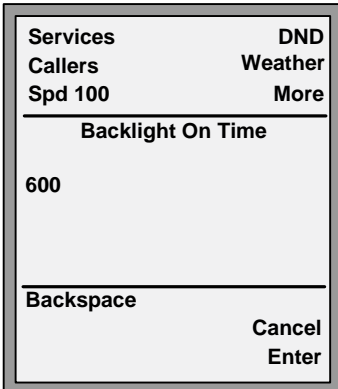
Step	Action	Result
Ring Tone: Sets ring tone. Select from 5 different ring tones or choose silent ring tone. (Ring tone 1 is the default.)		
1.	Go to Options > Preferences .	
2.	Press Select or ►.	The Preferences menu displays. The Tones option is the default.
3.	Press Select or ►.	The Tones menu displays. Ring tone is the default. <div data-bbox="937 690 1273 1079" data-label="Image">  </div>
4.	Press Select or ►.	The Ring Tone screen displays. Ring Tone 1 is the default. <div data-bbox="937 1167 1273 1556" data-label="Image">  </div>
5.	Press ▼ or ▲ until you find the desired ring tone.	As you navigate through the list, each tone plays.
6.	Press Done .	Ring tone is saved.
Tone Sets: Provides country-specific tone set options for call progress tones. (The US tone set is the default.)		
1.	Go to Options > Preferences > Tones .	

Step	Action	Result
2.	Press ▼ to select Tone Set .	 <p>The screenshot shows a menu with options: Services, Callers, Spd 100, DND, Weather, More, and Tones. The 'Tones' section is expanded, showing '1. Ring Tone' and '2. Tone Set' (which is highlighted with a right arrow). At the bottom, there are 'Select' and 'Done' buttons.</p>
3.	Press Select or ►.	<p>The Tones Set screen displays. US is the default.</p>  <p>The screenshot shows a 'Tone Set' screen with radio button options: Italy, Mexico, UK, and US. The 'US' option is selected with a filled circle. At the bottom, there are 'Cancel' and 'Done' buttons.</p>
4.	Press ▲ or ▼ to change the tone set. Valid values are: <ul style="list-style-type: none"> • Australia • Europe • France • Germany • Italy • Mexico • UK • US (Default) 	
5.	Press Done .	The Tone Set option is saved.

4.1.4 Display

The Display option provides 8 contrast settings that brighten or darken the display. You can also turn the backlight on or off or set it to go out after a pre-defined length of time (1-30 seconds).

Step	Action	Result
Contrast Level:		
1.	Go to Options > Preferences > Display .	
2.	Press Select or ►.	<p>The Display options screen displays and Contrast Level is the first option.</p> 
3.	Press Select or ►.	<p>The Contrast Level screen displays.</p> 
4.	Use ◀ and ▶ to set the contrast level.	
5.	Press Done .	The choice is saved.
Backlight:		
1.	Go to Options > Preferences > Display .	
2.	Press ▼ to select Backlight .	

Step	Action	Result
3.	Press Select or ►.	<p>The Backlight screen displays with options.</p> 
4.	Use ▼ and ▲ to set the backlight option.	
5.	Press Done .	The choice is saved.
Backlight on Auto: You can set the backlight to automatically turn off when the phone is idle after a specified length of time (1-30 seconds). You can reactivate the backlight by pressing any key.		
1.	Set the Backlight option to Auto .	<p>The Advanced softkey displays.</p> 
2.	Press the Advanced softkey.	<p>The Backlight On Time screen displays. 10 seconds is the default timer.</p> 

Step	Action	Result
3.	<ul style="list-style-type: none"> Press the Backspace softkey to erase a digit. <p>Or</p> <ul style="list-style-type: none"> Press the Clear softkey to completely clear the field. 	
4.	Press Done .	The Backlight setting is saved.

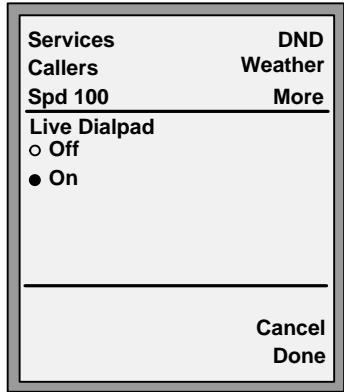
4.1.5 Speed Dial Edit

See [Speedial](#).

4.1.6 Live Dialpad

This option controls the Live Dialpad feature.

- Live Dialpad feature ON (Default) - The phone automatically selects a line/call appearance and turns the speaker on as soon as a dial pad key is pressed. If the number is not completed, the phone will time out, go to the busy state, and play busy tone until you disconnect by using the **Goodbye** key or hang up.
- Live Dialpad feature OFF – The digits are entered first, displayed on the screen, and can be edited using the **Backspace** softkey. When the handset is lifted or the speaker key pressed, the number automatically dials.

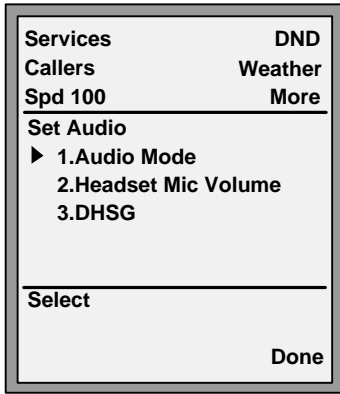
Step	Action	Result
1.	Go to Options > Preferences > Live Dialpad .	
2.	Press Select or ►.	<p>The Live Dialpad screen shows current status. The default is ON.</p> 
3.	Press ▼ or ▲ to select Off or On .	
4.	Press Done .	The change is saved.

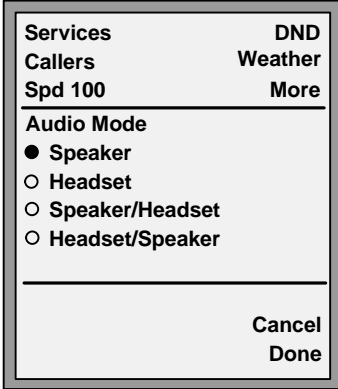
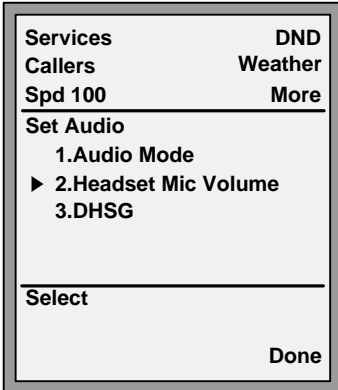
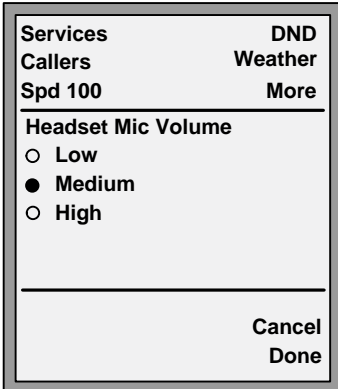
4.1.7 Set Audio

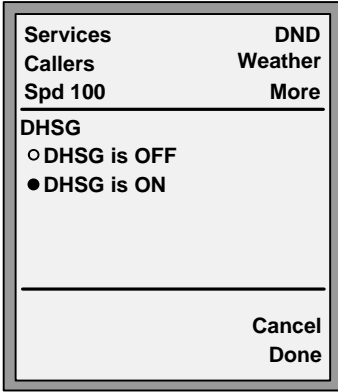
The Set Audio option provides 4 audio combinations for maximum flexibility for handling calls. Incoming audio can be set to one of the following options:

Option	Description
Speaker (Default)	The default setting. Calls are placed or received using the handset or speaker. Use the Speaker key to switch between handset and speaker.
Headset	Place or receive calls using a headset. Use the Speaker key to switch between the headset and handset. Lift the handset to switch from the headset to the handset.
Speaker/Headset	Incoming calls go directly to the speaker. Use the Speaker key to switch between the speaker, headset, and handset. Lift the handset at anytime to switch back to the handset from either the speaker or the headset.
Headset/Speaker	Incoming calls go directly to the headset. Use the Speaker key to switch between the speaker, headset, and handset. Lift the handset at anytime to switch back to the handset from either the headset or the speaker.

4.1.7.1 Set the Audio Option and Headset Volume

Step	Action	Result
1.	Go to Options > Preferences > Set Audio .	The Set Audio screen displays. 

Step	Action	Result
2.	Press Select or ►.	<p>The Audio Mode screen displays. Speaker mode is the default.</p> 
3.	Use ▼ and ▲ to reset the audio option.	
4.	Press Done .	The change is saved. The Set Audio menu displays again.
Headset Microphone Volume:		
1.	Go to Options > Preferences > Set Audio .	
2.	Press ▼ to select Headset Mic Volume .	
3.	Press Select or ►.	<p>The Headset Mic Volume screen displays.</p> 
4.	Press ▼ or ▲ to select the volume.	

Step	Action	Result
5.	Press Done .	The change is saved.
DHSG – Electronic Hookswitch Support (EHS)		
1.	Go to Options > Preferences > Set Audio .	
2.	Press ▼ to select DHSG .	
3.	Press ▼ to select DHSG is ON .	
4.	Press Done .	DHSG is now on.

4.1.8 Time and Date

This option sets the date and time on the phone, but can be overwritten by the time server when the phone is restarted.

4.1.8.1 Time Server

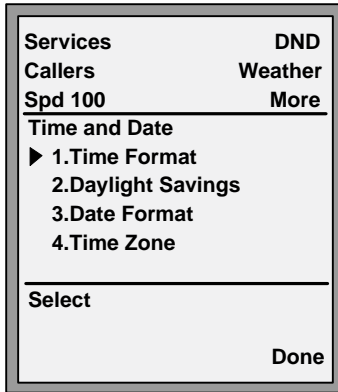
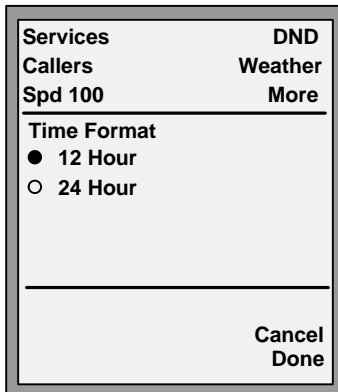
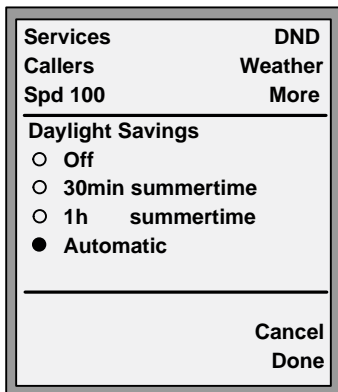
The phone acquires the time and date from the time server. The time server is already assigned, and this option requires an administrator password. Talk to your administrator if your phone has any difficulty with the date and time.

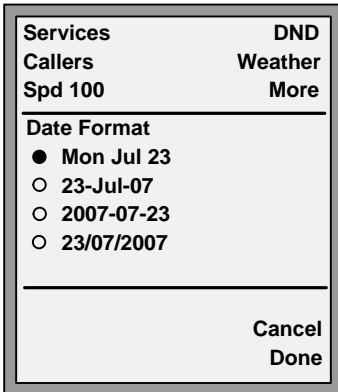
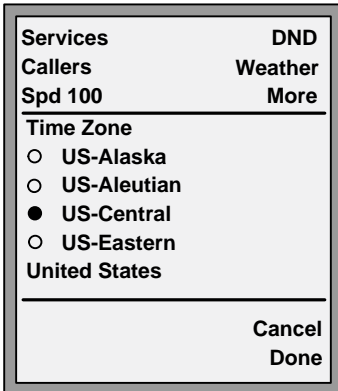
4.1.8.2 Set Time and Date Manually

Note

If you set the time manually, the phone will not try to synchronize the time with the time server until the next time the phone is restarted.

Step	Action
1.	Go to Preferences > Time and Date .

Step	Action	
2.	Press Select or ►.	<p>The Time and Date menu displays.</p> 
Time Format: Sets the time format display (12h or 24h clock).		
1.	Go to the Time Format option.	
2.	Press Select or ►.	
3.	Use ▲ or ▼ to scroll to the desired option.	
4.	Press Done .	
Daylight Savings: Sets daylight savings time. Automatic is the default.		
1.	Go to the Daylight Savings option.	
2.	Press Select or ►.	

Step	Action	
3.	Use ▲ or ▼ to scroll to the desired daylight savings option.	
4.	Press Done to save.	
Date Format: Sets the date display format.		
1.	Go to the Date Format option.	
2.	Press Select or ►.	
3.	Press ▲ or ▼ to scroll to the desired date format.	
4.	Press Done .	
Time Zone: Sets the current time zone. US-Central is the default.		
1.	Go to the Time Zone option.	
2.	Press Select or ►.	
3.	Press ▲ or ▼ to scroll to the desired time zone.	
4.	Press Done .	

Time Server:

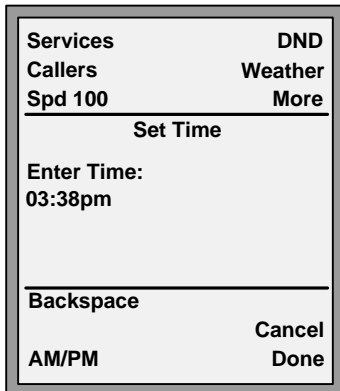
All Time Server menus require an Administrator Password.

Set Time:

Displays the network time if the Time Server option is enabled and also allows you to set the time manually.

Note

If you set the time manually, the phone will not try to synchronize the time with the Time Server until the next time the phone is restarted.

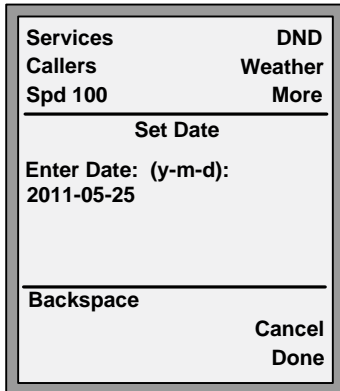
1.	Go to the Set Time option.	
2.	Press Select or ►.	
3.	Use the keypad to enter the time.	
4.	Press AM/PM to toggle between AM and PM.	
5.	Press Done .	

Set Date:

Displays the network date if the Time Server option is enabled and also allows you to set the date manually.

Note

If you do set the date manually, the phone will not try to synchronize with the Time Server until the next time the phone is restarted.

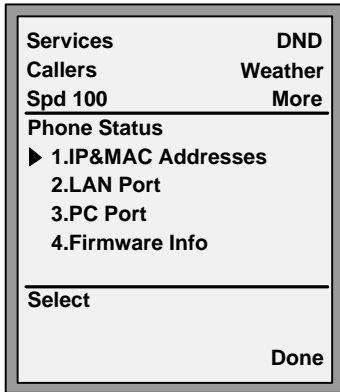
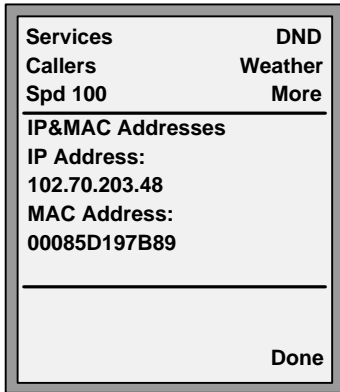
1.	Go to the Set Date option.	
2.	Press Select or ►.	

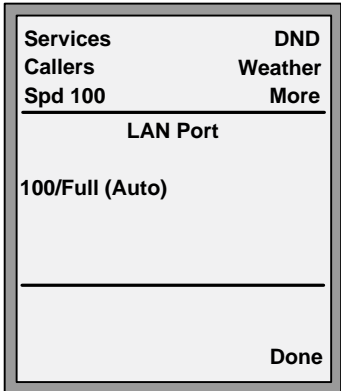
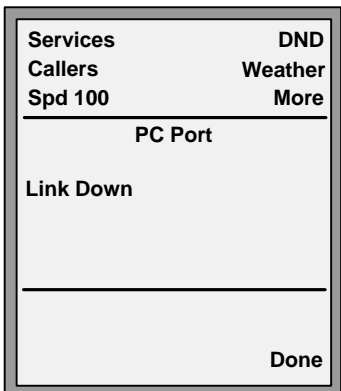
3.	Use the keypad to enter the date in the format displayed.	
4.	Press Done .	

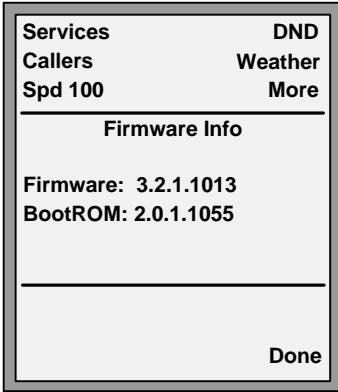
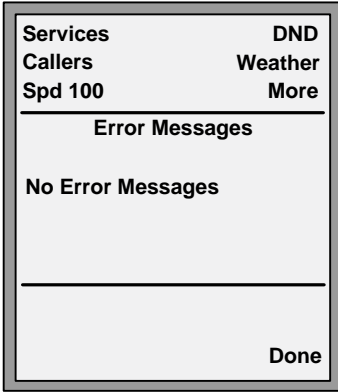

4.1.9 Language

This option sets the language for all of the phone display screens. The phone is permanently set to the English language.

4.1.10 Phone Status Menu

Step	Action	Result
1.	Go to Options > Phone Status .	
2.	Press Select or ►.	<p>The Phone Status menu displays. The IP and MAC addresses option is the first choice.</p> 
IP & MAC Addresses:		
1.	Press Select or ►.	<p>The IP and MAC addresses for the phone display.</p> 
2.	Press Done .	The Phone State menu displays.

LAN Port:		
1.	Go to LAN Port in the menu.	
2.	Press Select or ►.	<p>The LAN port information displays.</p> 
3.	Press Done .	The Phone State menu displays.
PC Port:		
1.	Go to PC Port in the menu.	
2.	Press Select or ►.	<p>The PC Port information displays.</p> 
3.	Press Done .	The Phone State menu displays.
Firmware Info:		
1.	Go to Firmware Info in the menu.	
2.	Press Select or ►.	The first of the Firmware Info screens displays.

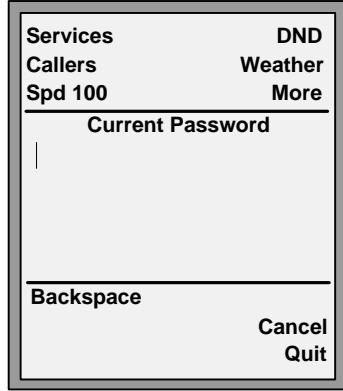
3.	Use ▼ to scroll down to the screen that actually displays the firmware load.	
4.	Press Done .	
Error Messages:		
1.	Go to Error Messages in the menu.	
2.	Press Select or ►.	<p>The Error Messages screen displays.</p> 
3.	Press Done .	
Copyright:		
1.	Go to Copyright in the menu.	
2.	Press Select or ►.	<p>The Copyright screen displays.</p> 
3.	Press Done .	

4.1.11 User Password

This option allows you to change the user password for your phone so that only you can alter your phone settings and helps keep your system secure.

Valid values for the password are 0 to 4294967295 (integers only; symbols and alpha characters are not allowed).

The default password is an empty string "" (field is blank.)

Step	Action	Result
1.	Go to Options > User Password .	
2.	Press Select or ►.	<p>The Current Password screen displays.</p>  <p>Note</p> <p>If the password <i>has never been set up</i>, press the Enter softkey and continue with password setup.</p>
3.	Enter the current user password.	
4.	Press Enter .	
5.	Enter the new user password.	
6.	Press Enter .	
7.	Re-enter the new user password.	
8.	Press Enter .	The "Password Changed" message displays on the screen.
9.	Press Quit .	

4.1.12 Administrator Menu

The options in this menu are configured by a system administrator and require an administrator password.

4.1.13 Restart Phone

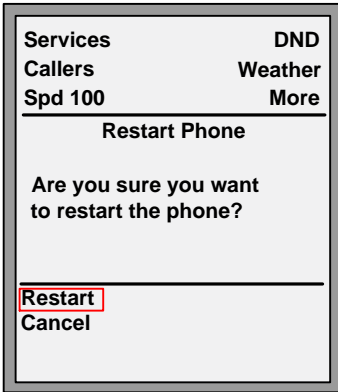
Occasionally you may be instructed to restart your phone to check for updates from the configuration server. This option allows you to restart the phone.

Note

Your phone is temporarily out-of-service during the restart and download processes.

Caution!

Do not unplug or remove power to the phone while it is checking or installing firmware.

Step	Action	Result
1.	Go to Options > Restart Phone .	
2.	Press Select or ►.	<p>The Restart screen displays.</p> 
3.	<p>Press Restart.</p> <p>Note Press Cancel to cancel without restarting the phone.</p>	The phone restarts.

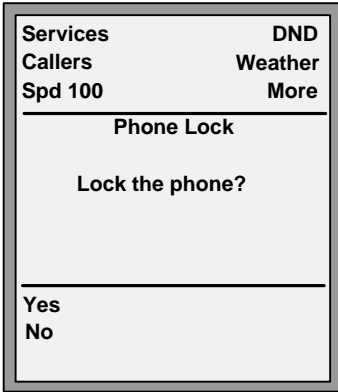
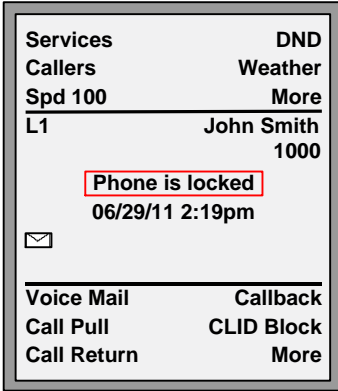
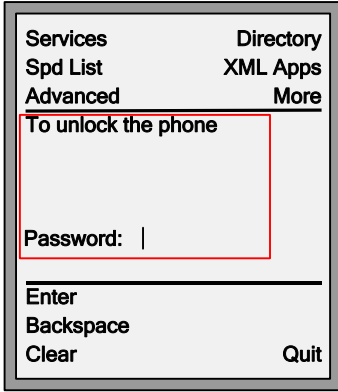
4.1.14 Phone Lock

You can lock the phone to prevent it from being used or configured.

Caution!

While the phone is locked, only emergency 911 dialing is permitted.

Step	Action	Result
Lock the Phone:		
1.	Go to Options > Phone Lock .	

Step	Action	Result
2.	Press Select or ►.	<p>The Phone Lock screen displays.</p> 
3.	Press the Lock softkey to lock the phone.	<ul style="list-style-type: none"> The locked message displays on the phone. The red status lamp at the top right of the phone turns on. 
Unlock the Phone:		
1.	Go to Options > Phone Lock .	<p>The “unlock the phone” message displays.</p> 

Step	Action	Result
2.	<p>Enter your user password.</p> <p>Note</p> <p>If the user password has never been set up, press the Enter softkey without a password.</p>	<ul style="list-style-type: none"> • The phone is unlocked. • The red status lamp at the top right of the phone turns off.

5 Call Handling on the 6757i CT Base Station

5.1 Place a Call

You can place a call using one of the following methods.

Note

If you are unable to make calls within certain area codes, check with your system administrator for any toll restrictions placed on your extension that may restrict your access to long distance area codes or dialing prefixes.

Step	Action
1.	Dial the number. Note Live Dialpad is set to ON by default.
Note Speaker mode is the default audio mode . The Speaker turns on automatically when you dial the number, and the call is placed.	
Handset:	
1.	Lift the handset (the phone will automatically select the next available line/call appearance).
2.	Dial the number.
Speaker Key:	
1.	Press the Speaker key.
2.	Dial the number.
Line/Call Appearance Key:	
1.	Press a line/call appearance key.
2.	Dial the number.

5.2 Receive a Call

When a call rings in at your phone, the inbound call screen displays, the line/call appearance lamp flashes, and the MWI lamp flashes.

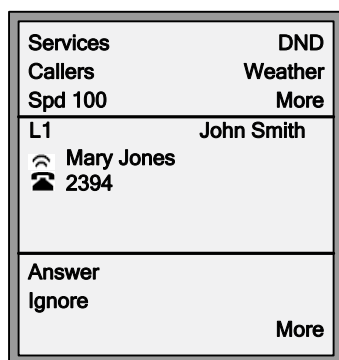


Figure 5 Receive a Call

5.2.1 Answer an Incoming Call

When a call rings at your phone, only the softkeys needed to answer the call are displayed on the screen.

If the phone is already connected to a call, pressing the line/call appearance key for the new incoming call automatically places the connected call on hold and answers the new call.

If you cannot answer, the call is redirected to a pre-defined destination such as your voice mailbox.

Step	Action
Hands-free Operation:	
1.	<ul style="list-style-type: none"> Press the Answer softkey. <p>Or</p> <ul style="list-style-type: none"> Press the line/call appearance key. <p>Or</p> <ul style="list-style-type: none"> Press the Speaker key.
Headset:	
1.	Press the Speaker key.
Handset:	
1.	Lift the handset.

5.3 Ignore a Call

Step	Action	Result
1.	Press the Ignore softkey.	The call will forward to your pre-defined call forward/busy destination, usually your voicemail.

5.4 Connected Call

The connected state screen displays when you are talking to someone on the phone. The softkeys displayed are those you need for handling the call.

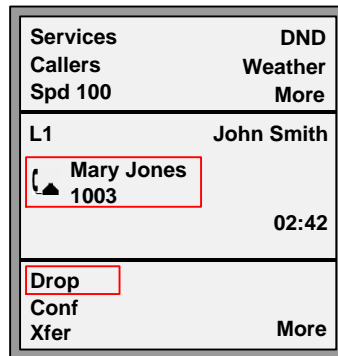


Figure 6 Connected Call

Note

Use the **More** softkey at any time to view other available softkeys.

5.4.1 Connected Call Display Details

A call display shows:

- The Caller ID information (name and number, if available).
- The timer specific to that call.
- The call status in the form of icons.

Keys	Description
◀ and ▶	These icons display when there is more call information either to the left, right or both sides of the current information you are viewing.
▲ or ▼	These icons display when there is more information on the next screen or on the previous screen.
📞🎵	The call is on hold.
📞📶	The call is connected.

5.4.2 Lock Symbol

The lock symbol indicates your call is secure within the phone system.

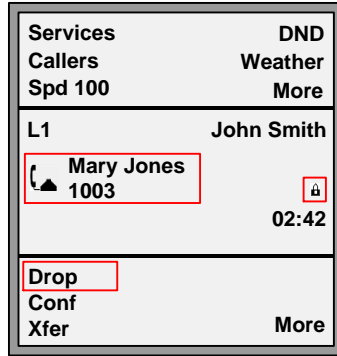


Figure 7 Lock Symbol

5.4.3 Calls on Hold

- If Phone A places the call on hold, it can be retrieved by Phone B by pressing the key of the red flashing lamp on Phone B. (Phone B does not have a Pickup softkey at this time because it does not have control of the call.)
- When Phone B takes control of the call, the line lamp changes to green and the display changes to reflect the details of the connected call. Phone A immediately returns to the off-hook display or the idle state display and the red status lamp on that line indicates Phone B has control of the call.

5.5 Callers List and Redial List

- For inbound calls answered by Phone A, Phone B does not show any details of the call on the screen, but does display “1 Missed Call”, and the call is stored in the [Callers List](#) as a missed call. The opposite applies if the call was answered by Phone B.
- For outbound calls originated by Phone A, nothing is stored in the [Redial list](#) on Phone B because Phone A originated the call. The opposite applies if the call is placed by Phone B.

5.6 Handle Calls Using the Speaker

The Speaker allows you to speak to someone without using the handset or headset. The [Set Audio](#) option for your phone is set to “Speaker” by default.

Step	Action
Dial using the speaker:	
1.	Press the Speaker key and enter a number from dial tone.
Answer a call using the speaker:	
1.	Press the Speaker key or the line/call appearance key.

Switch between the speaker and handset in speaker audio mode:	
1.	<ul style="list-style-type: none"> Lift the handset to go back to the handset. Press the Speaker key to switch back to the speaker.
Switch between the speaker and the headset in speaker/headset audio mode:	
1.	Press the Speaker key.

5.7 Handle Calls Using a Headset

Ensure that you have selected a headset audio mode by accessing the Options list. For more information on how to set this audio option in your phone, see the [Set Audio](#) option.

Step	Action
1.	Plug the headset into the jack.
2.	<p>Press the Speaker key or the line/call appearance key to get dial tone or to answer an incoming call.</p> <p>Depending on the audio mode selected from the Options list, a dial tone or an incoming call will be received on either the headset or the speaker.</p> <p>Also see Headset Volume.</p>

5.8 End a Call

Step	Action
1.	<p>From a connected call:</p> <ul style="list-style-type: none"> Press the Goodbye key. <p>Or</p> <ul style="list-style-type: none"> Press the Drop softkey. <p>Or</p> <ul style="list-style-type: none"> Place the handset back on hook if connected through the handset.



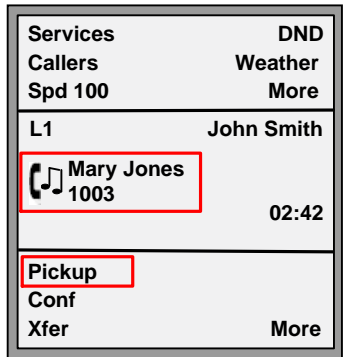
6 Phone Features

6.1 Hold

6.1.1 Place a Call on Hold

Note

- You cannot place a call on hold or retrieve a call on hold if you are viewing the [Redial List](#) or [Callers List](#).
- If you have left a call on hold for a pre-defined period of time (if the option is configured on your system), the system will ring your phone until you answer the call. When you answer, you are re-connected to the held party.
- With multiple calls on hold, or if your held call information is not on the screen, you can press ◀ or ▶ to view the screen that shows information about the calls on hold.

Step	Action	Result
1.	From a connected call: Press the Hold key.	<ul style="list-style-type: none"> • The line lamp flashes slowly. • The MWI lamp on the top of the phone flashes. • The Pickup softkey displays. 

6.1.2 Retrieve a Held Call

Only the phone that placed the call on hold can retrieve the call on hold, unless the held call is on a directory number that appears on more than one phone. Also see [Shared Call Appearance Call Retrieve](#).

Step	Action	Result
1.	Press the Line key where the call is on hold. Note <ul style="list-style-type: none"> The Goodbye key will not retrieve a held call. The Hold key will not retrieve a held call. 	You are reconnected to the call.

6.1.3 Automatic Hold

The 6757i CT automatically puts your current call on hold when you press a new line key.

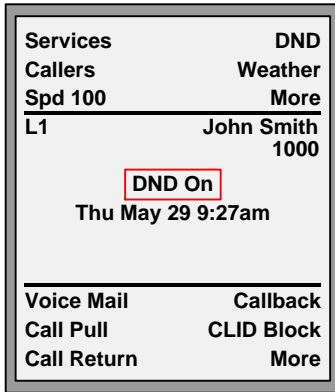
6.1.4 Manage Multiple Calls on Hold

Step	Action	Result
1.	Press ◀ or ▶ to scroll through the call information for multiple calls on hold.	
Connect to an incoming call or re-connect to a call you placed on hold:		
1.	<ul style="list-style-type: none"> Press Pickup. Or <ul style="list-style-type: none"> Press the line key. 	
If the phone is already connected to a call:		
1.	Press the line key for the new incoming call.	The current call is automatically placed on hold, and the new call is answered.

6.2 Do Not Disturb

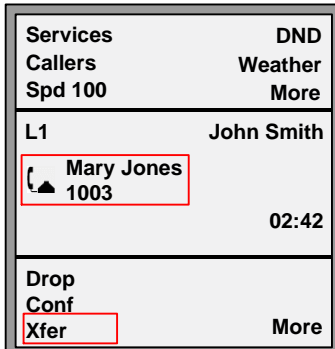
The Do Not Disturb (DND) feature allows you to block incoming calls. When DND is activated, an incoming call does not ring at the phone and the call will forward directly to your pre-defined call forward busy destination, usually your voicemail.

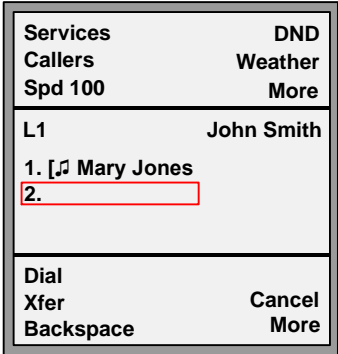
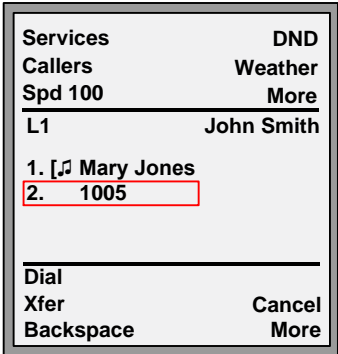
The DND key toggles this feature on and off. If the phone shares a line with other phones, only the phone where DND was set is affected.

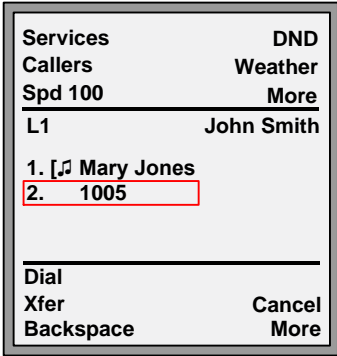
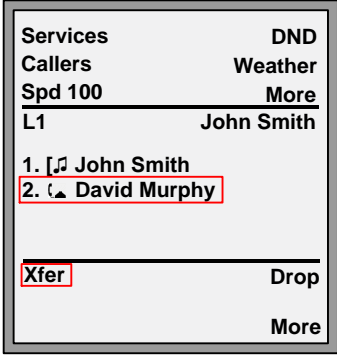
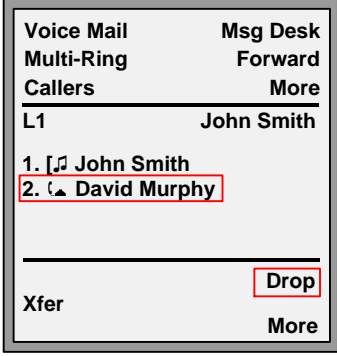
Step	Action	Result
Activate Do Not Disturb:		
1.	Press the DND key.	The Do Not Disturb message displays. 
Deactivate Do Not Disturb:		
1.	Press DND .	The feature is deactivated.

6.3 Transfer

The **Xfer** softkey is a static key that cannot be changed. It appears when the phone is off-hook, and while the phone is connected to a call.

Step	Action	Result
Unannounced (blind) transfer: When you transfer a call directly to another party and complete the transfer without consulting with the receiving party, it is an unannounced transfer.		
1.	You are connected to the call to transfer.	

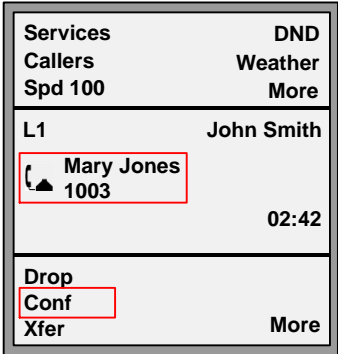
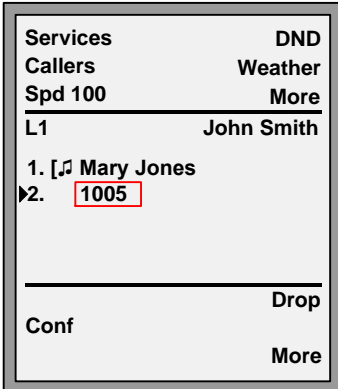
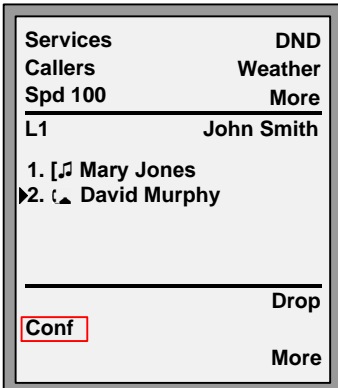
Step	Action	Result
2.	Press the Xfer key.	<p>You hear dial tone.</p> 
3.	Enter the number of the destination party using the keypad.	<p>The number is automatically dialed.</p>  <p>Note</p> <p>You can use the Dial softkey for numbers that are not automatically dialed.</p>
4.	<p>Before the destination party answers:</p> <ul style="list-style-type: none"> Press Xfer again. <p>Or</p> <ul style="list-style-type: none"> Press the Goodbye key. 	The transfer completes.
<p>Announced Transfer:</p> <p>When you transfer a call to another party and remain on the line to talk to the other party before you complete the transfer, it is an announced transfer. After you consult with the other party, you can either complete the transfer or go back to the original caller.</p>		
1.	Press the Xfer key.	You hear dial tone.

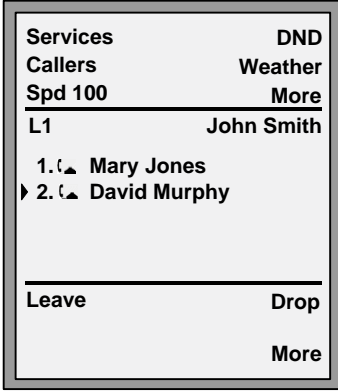
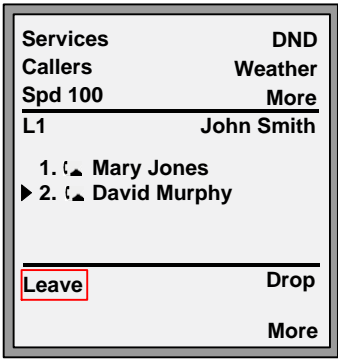
Step	Action	Result
2.	Enter the number of the destination party using the keypad.	The number is automatically dialed. 
3.	Consult with the destination party.	
4.	<ul style="list-style-type: none"> Press Xfer again. Or <ul style="list-style-type: none"> Press the Goodbye key. 	You are dropped from the call, and the transfer completes.
Cancel a transfer:		
1.	Press the Cancel softkey while the destination is ringing.	
Drop the destination party without completing the transfer:		
1.	After consulting with the destination party: Press Drop .	The originating party is on hold. 
2.	<ul style="list-style-type: none"> Press the Line key. Or <ul style="list-style-type: none"> Press the Hold key. 	You are reconnected to the originating party.

6.4 Conference

The 6757i CT supports up to three parties in a conference call.

6.4.1 Establish the Conference

Step	Action	Result
1.	Connect to the first party to include in the conference.	
2.	Press the Conf softkey.	You hear dial tone.
3.	Enter the number of the second party to add to the conference.	
4.	Wait for the second party to answer. Note You should always consult with a new party before adding them to the conference.	The first party is on hold. 

Step	Action	Result
5.	Press the Conf softkey again.	<ul style="list-style-type: none"> The conference is established. A list of the other two parties in the conference displays on your screen. 
If you do not wish to add the third party to the conference:		
1.	Press the Cancel softkey while the second party's phone is ringing.	You are reconnected to the first party.
Drop the second party after consultation without establishing a conference:		
1.	Use ▲ or ▼ to point to the party to drop.	
2.	Press Drop .	You are connected to the other party.
Leave the conference:		
1.	Press the Leave softkey.	<p>The other parties remain connected.</p> 
Conference two separate calls already on hold:		
1.	Press Conf .	Both calls are on hold.
2.	Press the Line key of the first held call.	The first line is connected.
3.	Press Conf again.	
4.	Press the Line key of the second held call	The conference is established.

6.5 Park and Pickup

The Call Park feature allows you to park a call so that any member of the group can retrieve it.

A call can be parked against any number in the group, including your own number.

You can only have one call parked at a time.

A 45-second timer is started when you park a call. If the timer expires and your line is idle, the system rings your line. If your line is not idle, the timer is restarted for 10 seconds and the call remains parked. This procedure is repeated until your line is idle, or the parked call is retrieved or released.

6.5.1 Default Display

- The Park softkey is visible only when a call is connected.
- The Pickup softkey is visible only the phone is idle or when the phone is off hook.

6.5.2 Use Park and Pickup

Step	Action	Result
Park a Call:		
1.	From a connected call: Press the Park softkey.	The feature access code for Park is dialed and you hear instructions given by the system.
2.	<ul style="list-style-type: none"> • Dial the number where you want to park the call plus the # key. <p>Or</p> <ul style="list-style-type: none"> • Dial # to park the call against your number. 	If the call is parked successfully, you hear the message "Your call has been Parked. Thank you."
3.	<ul style="list-style-type: none"> • Hang up the handset. <p>Or</p> <ul style="list-style-type: none"> • Press the Goodbye key. 	
Pick up a Parked Call:		
1.	Lift the handset.	The Pickup softkey appears.
2.	Press the Pickup softkey.	You hear the instructions given by the system.

Step	Action	Result
3.	<ul style="list-style-type: none"> Dial the number where the call was parked plus the # key. <p>Or</p> <ul style="list-style-type: none"> Dial # to pick up a call parked at your own number. 	You are connected to the parked call.

6.6 Call Forwarding All, Busy, No Answer

The following procedures apply to all Call Forwarding modes using keys assigned as Call Forwarding activation/deactivation keys:

- Call Forwarding Always
- Call Forwarding Busy
- Call Forwarding No Answer
- Call Forwarding Always to Voicemail
- Call Forwarding Busy to Voicemail
- Call Forwarding No Answer to Voicemail

Note

You can also set up Call Forwarding using the [Phone UI](#).

Step	Action	Result
Activate:		
1.	<ul style="list-style-type: none"> Press the appropriate Call Forwarding activation key. <p>Or</p> <ul style="list-style-type: none"> Dial the appropriate activation feature access code. 	The system prompts you for the destination number.
2.	Enter the destination number + the pound key (#). Note If no phone number is entered, calls are forwarded to the number that was previously configured.	The system plays the confirmation announcement.
3.	Hang up.	

Deactivate:		
1.	<ul style="list-style-type: none"> Press the Call Forwarding deactivation key. <p>Or</p> <ul style="list-style-type: none"> Dial the appropriate deactivation code. 	The system plays the confirmation announcement.
2.	Hang up.	

6.7 Call Return

The Call Return feature enables you to call the last party that called, whether or not the call was answered.

Step	Action	Result
1.	<ul style="list-style-type: none"> Press the Call Return key. <p>Or</p> <ul style="list-style-type: none"> Dial the Call Return feature access code. 	The number of the last party that called you is automatically dialed.

6.8 Call Waiting

The Call Waiting feature allows you to answer a call while already on another call. Call Waiting is “On” by default, but can be deactivated. It can also be canceled per call.

Step	Action	Result
You are on an active call and hear the Call Waiting tone.		
1.	Press the flashing Line/Call Appearance key of the waiting call.	You are connected with the waiting party and the original party is placed on hold.
2.	Press the Line/Call Appearance key of the original call to return to the first party.	The second party is now on hold.
If one party hangs up while the other party is held or waiting, your phone rings.		
1.	Answer the call.	You are reconnected to the held party.

6.9 Directed Call Pickup

Directed Call Pickup allows you to pick up a call ringing at another extension in the same group.

Step	Action	Result
1.	<ul style="list-style-type: none"> Press the Directed Call Pickup key. <p>Or</p> <ul style="list-style-type: none"> Dial the Directed Call Pickup feature access code. 	You hear dial tone. There are no system voice prompts.

Step	Action	Result
2.	Dial the extension of the ringing party.	<p>You are connected to the call.</p> <p>Note</p> <p>If the ringing party has already answered the call, or if it has no alerting call, or if the dialed extension is invalid, you will receive reorder.</p>

6.9.1 Directed Call Pickup Feature Interactions

The main feature interactions introduced by this feature are described in the following table.

Feature	Interaction Description
Call Waiting	It is not possible to pick up a waiting call. A call must be ringing to be picked up.
Call Forwarding No-Answer	You can pick up a ringing call before the call is forwarded by Call Forward No-Answer (CFNA). Picked up calls are not forwarded by the user picking up the call.
Call Hold and Retrieve	You can place a call on hold and do a Directed Call Pickup of another call.
Call Notify	Directed Call Pickup does not send a call notify message for picked-up calls.
Call Transfer (Unannounced)	You can pick up an unannounced (blind) transferred call, and you can also transfer a picked-up call.
Do Not Disturb	You can pick up calls regardless of whether the answering party is accepting calls.
Three-Way Call	It is not possible for the conference controller to pick up another call. However, a participant in a 3-way call can pick up another call by putting the original call on hold and dialing the Directed Call Pickup access code or pressing the Directed Call Pickup key.

6.10 Directed Call Pickup with Barge-In

Directed Call Pickup with Barge-in functions the same as Directed Call Pickup and allows you to pick up a call ringing at another extension in the same group. However, it also allows you to barge in on the call if the call was already answered. When the barge-in occurs, a 3-way conference call is established between the parties. You, as the Barge-in user, have control of the conference.

Step	Action	Result
1.	<ul style="list-style-type: none"> Press the Directed Call Pickup Barge-In key. Or Dial the Directed Call Pickup Barge-In feature access code. 	You hear dial tone.
2.	Dial the extension of the ringing party.	You are connected to the call.

6.11 Autodial (Hotline and Warmline)

Your System Administrator can configure an autodial feature on your phone. If autodial is enabled, the phone automatically dials a preconfigured number whenever it is off-hook. Depending on the configuration specified by your Administrator, the Autodial functions as either a “hotline”, or as a “warmline,” as follows:

- Hotline: The IP phone immediately dials a preconfigured number when you lift the handset.
- Warmline: The IP phone waits for a specified amount of time after you lift the handset before dialing a preconfigured number. If you do not dial a number within the time allotted, then the IP phone begins to dial the number.

Note

- Any speed dial numbers that you configure on your IP phone are not affected by autodial settings.
- If Autodial is configured on your phone, any lines that function as hotlines do not accept conference calls, transferred calls, and/or intercom calls.

6.12 Intercom

6.12.1 Outgoing Intercom


You can use the **Intercom** key to automatically connect to a remote extension. This feature is enabled by the system administrator. You must have an Intercom softkey to use the Intercom feature.

6.12.2 Incoming Intercom

By default, the IP phone allows incoming intercom calls to be automatically answered without having to set up an **ICOM** key on your phone. The phone automatically plays a warning tone and mutes the microphone when it receives an incoming intercom call. If the intercom call comes to the phone while an active call is already present, the phone puts the active call on hold and answers the intercom call.

6.12.3 Use the Intercom Softkey

Step	Action	Result
Place an Intercom Call:		
1.	Press the INCM key.	
2.	Enter the extension number of the person you wish to call on the intercom or the BLF key for that extension.	<ul style="list-style-type: none"> • You hear a beep tone. • Your phone automatically connects with the remote extension. • You can speak through the remote phone speaker.

End an Intercom Call:		
1.	<ul style="list-style-type: none"> Hang up the phone. Or Press  . Or Press the line appearance key. 	When you hang up, the remote phone also hangs up.

6.13 Stuttered Dial Tone

If this feature is enabled on your phone, you hear stuttered dial tone when there is a message waiting on your phone.

6.14 Services

The **Services** key accesses enhanced features and services provided by third parties. Using the Services key, you can:

- Select customized XML features
- Access the Callers List
- Access the Directory
- Access Voicemail

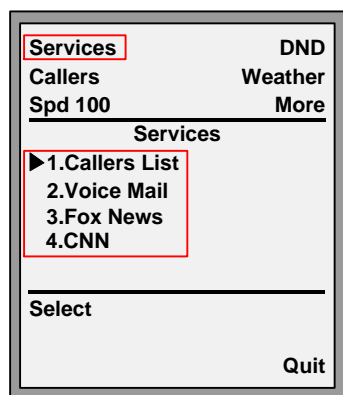


Figure 8 Services Menu



6.15 Callers List

The Callers List is a stored log of incoming calls containing up to 200 entries. The Callers List stores the name, phone number, call time and date, and missed/answered call status for all calls that ring in to this phone.

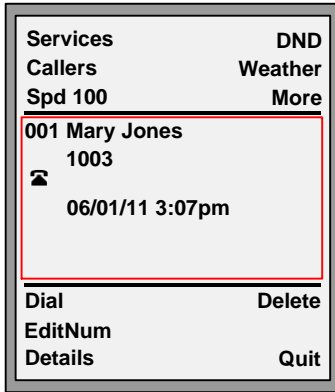
You can view, scroll through, and delete entries in the Callers List and dial directly from a displayed entry.

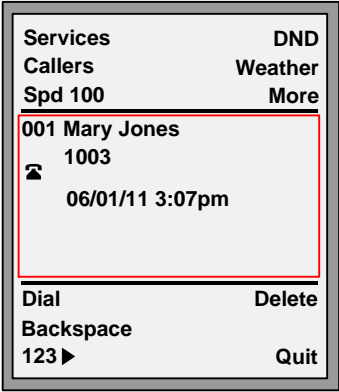
When the Callers List is full, the oldest call records are deleted to accommodate new caller information.

6.15.1 Callers List Display

Display	Description
N	The "N" at the left of the screen indicates a new call you have not reviewed.
	Indicates an unanswered call.
	Indicates an answered call.

6.15.2 Callers List Functions

Step	Action	Result
Access the Callers List		
1.	Press the Callers softkey.	The first entry displays. 
2.	Use the ▲ or ▼ to scroll through the entries in the list.	
Dial from the Callers List:		
1.	From the selected entry: <ul style="list-style-type: none"> Lift the handset. Or <ul style="list-style-type: none"> Press the Speaker key. Or <ul style="list-style-type: none"> Press a line/call appearance key. Or <ul style="list-style-type: none"> Press the Dial softkey. 	The number is automatically dialed.

Edit a number before you dial:		
1.	Press the EditNum softkey.	<p>The editing softkeys display.</p> 
2.	Edit the number.	
3.	<p>Edit the number.</p> <p>Note</p> <p>Use ► to skip over the numbers and Backspace to erase the number.</p>	

6.15.3 Missed Calls Indicator

The 6757i displays the “<Number of> Missed Calls” in the idle state screen display. This display alternates between the number of missed calls and the date and time display.

Missed calls are displayed as “<number of> new callers” on the idle screen. After you review the calls in the Callers List, the number of missed calls is cleared from the idle screen display.

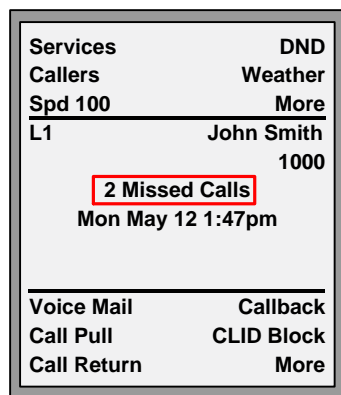

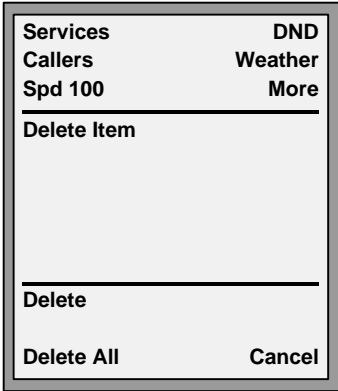


Figure 9 Missed Calls Indicator

6.15.3.1 View Missed Calls

Step	Action	Result
1.	Go into the Callers List.	The Callers List menu displays.
2.	Use ▲ or ▼ to scroll through the entries.	Missed calls are those marked with the telephone icon with the handset ON  .

6.15.4 Delete Entries in the Callers List

Step	Action	Result
Delete one or all entries:		
1.	Go into the Callers List .	
2.	Press Delete .	The Delete Item screen displays. 
3.	<ul style="list-style-type: none"> Press Delete to delete one entry. Or Press Delete All to delete all entries in the list. 	Note There is no confirmation message. The entry is deleted immediately.
Cancel the delete function:		
1.	Press the Cancel softkey.	

6.15.5 Exit the Callers List

Step	Action	Result
1.	Press the Quit softkey.	The idle screen displays.

6.16 Redial

6.16.1 Last Number Redial

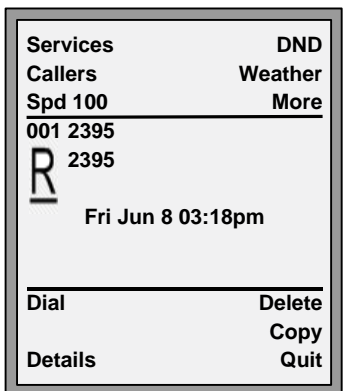
Step	Action	Result
Redial (On-hook or Off-hook):		
1.	Press the Redial key 2 times.	The number is automatically dialed.

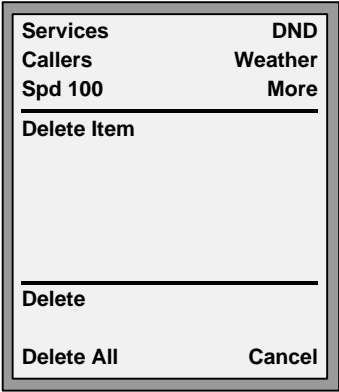
6.17 Redial List

There are 100 entries in the Redial List. If you are on-hook and press **Redial**, the Redial list displays, and you can scroll through it to select a number to redial. The list contains the name (if known), the number you dialed, the time and date the number was dialed, and the line used.

Note

You cannot edit an entry in the Redial List.

Step	Action	Result
Redial from the Redial List (On-hook)		
1.	While on-hook: Press the Redial key one time.	The Redial List displays the first entry. 
2.	Use ▲ or ▼ to find the entry to call.	
3.	<ul style="list-style-type: none"> Press the Dial softkey. Or <ul style="list-style-type: none"> Press an available line key. Or <ul style="list-style-type: none"> Press the Speaker key. Or <ul style="list-style-type: none"> Lift the handset. 	The number automatically dials.
Delete one or all entries in the Redial List:		
1.	Find the entry to delete.	

Step	Action	Result
2.	Press the Delete softkey.	The Delete Item screen displays. 
3.	<ul style="list-style-type: none"> Press Delete to delete only the <i>one selected entry</i>. Or <ul style="list-style-type: none"> Press Delete All to delete <i>all entries</i> in the list. 	Either the selected entry or all entries are deleted.
View Details of an entry:		
1.	Find the entry to view.	
2.	Press the Details softkey.	The specifics of that entry display.

6.18 Speeddial

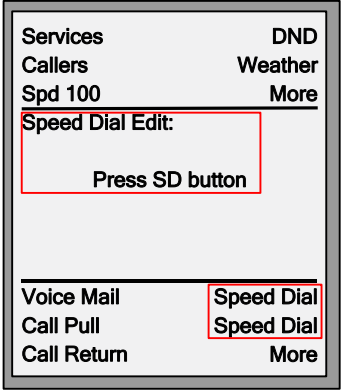
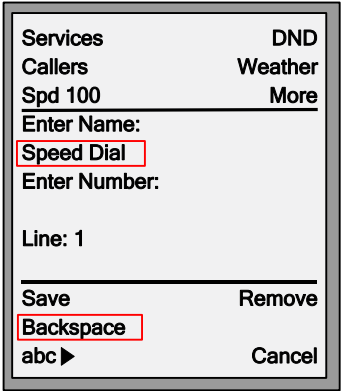
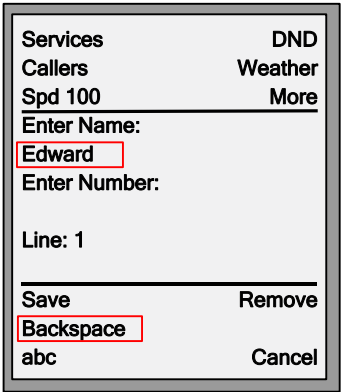
The Speeddial feature allows you to configure a Speeddial key on your phone. You can assign and label Speed Dial keys using the [Press and Hold](#) method.

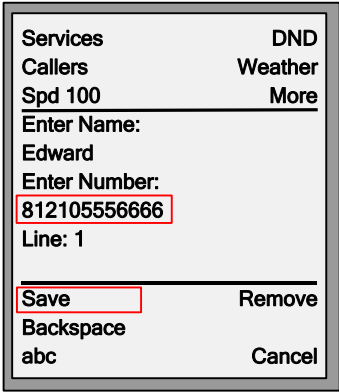
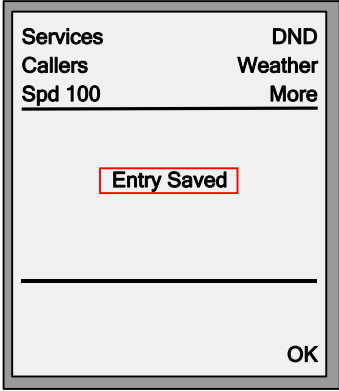
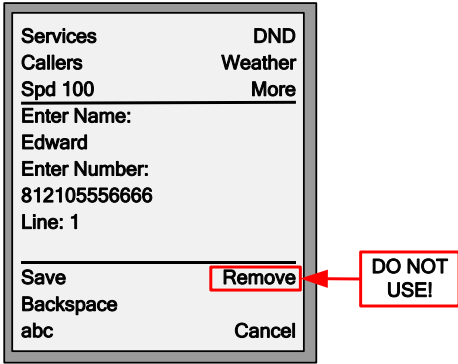
The Speed Dial Edit feature allows you to edit a previously assigned Speeddial key using the Phone UI Options List.

6.18.1 Edit a Speeddial Key using the Options List

You can edit a pre-assigned Speeddial key using the Options List.

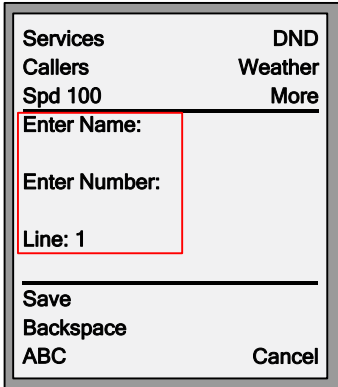
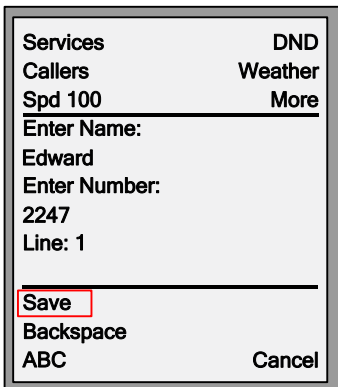
Step	Action	Result
1.	Go to Options > Preferences .	
2.	Press Select or ►.	
3.	Press ▼ to go to the Speed Dial Edit option.	

Step	Action	Result
4.	Press Select or ►.	<ul style="list-style-type: none"> The Speed Dial Edit screen displays. All programmable Speeddial lamps flash. 
5.	Press the Speeddial softkey to edit.	<p>The edit screen displays.</p> 
6.	<p>Use the Backspace softkey to change the name text.</p> <p>Note</p> <p>The ◀ key backspaces over characters, but does not erase the text.</p> <p>The phone automatically uses an uppercase letter for the first letter of each word and a lowercase letter for all subsequent letters in the word. If necessary, use the "ABC" softkey to specify uppercase letters or lowercase letters when entering the name.</p>	<p>The new name displays.</p> 

Step	Action	Result
7.	Enter the number including any access numbers.	
8.	Press the Save softkey.	<p>The Entry Saved message displays.</p> 
9.	Press the OK softkey.	The main screen displays.
<p>Note</p> <p>The Remove softkey:</p> <p>You can delete the entire key by using the Remove softkey. The key is reset to the type "None". You can use the press and hold method to add a new Speeddial key.</p> 		

6.18.2 Add a new Speeddial Key (Press and Hold)

You can press and hold a programmable key or softkey that has no pre-assigned function to create a new Speeddial key.

Step	Action	Result
1.	<p>Press a programmable key or softkey for 3 seconds.</p> <p>Note</p> <p>You can press the Cancel softkey at any time during programming to cancel without saving.</p>	<p>The edit screen displays.</p> 
2.	<p>In the Enter Name field:</p> <p>Enter a name to apply to the Speeddial key using the keypad (up to 16 characters).</p>	
3.	<p>In the Enter Number field:</p> <p>Enter a number (up to 16 numbers).</p>	
4.	<p>In the Line field:</p> <p>Select a line to apply to the Speeddial key.</p> <p>Note</p> <p>This is the line that the phone opens to dial the number after you press the Speeddial key. By default, the phone uses Line 1. If you want to use a different line, press the Change softkey, or press the ► key to select another line.</p>	
5.	<p>Press the Save softkey.</p>	<p>The key is saved.</p>

6.19 Speed Dial 8

You can have a Speed Dial 8 key that allows you to associate single-digit codes (2-9) to frequently dialed or hard-to-remember digit strings. You can then use the codes instead of the full numbers to place calls. This feature is separate from the programmable speeddial keys.

Step	Action	Result
1.	<ul style="list-style-type: none"> Press the Speed Dial 8 softkey. <p>Or</p> <ul style="list-style-type: none"> Dial the Speed Dial 8 feature access code. 	You hear dial tone.
2.	Press the 1-digit Speed Dial 8 code.	You hear dial tone.
3.	Dial the number to assign to this speed dial code, including access codes.	After a slight pause, you hear "Speed Dial 8 programming succeeded."
4.	Dial the # key.	You hear "Speed Dial 8 programming succeeded."

6.20 Speed Dial 100

You can have a Speed Dial 100 key that allows you to associate 2-digit codes (00-99) to frequently dialed or hard-to-remember digit strings. You can then use the codes instead of the full numbers to place calls. This feature is separate from the programmable speeddial keys.

Step	Action	Result
1.	<ul style="list-style-type: none"> Press the Speed Dial 100 softkey. <p>Or</p> <ul style="list-style-type: none"> Dial the Speed Dial 100 feature access code. 	You hear dial tone.
2.	Press the 2-digit Speed Dial 100 code.	You hear dial tone.
3.	Dial the number to assign to this speed dial code, including access codes.	
4.	Dial the # key.	You hear "Speed Dial 100 programming succeeded."

6.21 Speeddial/Xfer Softkey

The Speeddial key allows you to use one key to dial a frequently dialed number. The Xfer key allows you to transfer a call. The Speeddial/Xfer key combines the Speeddial and Xfer key's functionality together allowing the user to transfer calls or use Speeddial with one key.

6.21.1 Speeddial/Xfer Key Requirements and Functionality

The Speeddial/Xfer key has the following capabilities:

Function	Description
Speeddial/Xfer and Speeddial	Pressing the Speeddial/Xfer key while the phone is idle causes the phone to go off-hook and dial the predefined extension.
Speeddial/Xfer and Blind Transfer	When the phone is connected to a call, pressing the Speeddial/Xfer key blind-transfers the call to the predefined destination. If the transfer fails, the message "Transfer Failed" displays, and you can retry the call by pressing the line key again.
Speeddial/Xfer and Call Forward	Pressing the Speeddial/Xfer key while the phone is ringing forwards the call to the predefined number.

6.22 Speeddial/Conf Softkey

The **Speeddial/Conf** softkey allows you to conference another party at a pre-defined number while on an active call. The line focus changes to the dialing line. A cancel softkey displays on the phone allowing you to abort the conference speeddial if required.

The following messages display:

- **Ringling...** - Displays when the far end is ringing.
- **Conf. Unavailable** - Briefly displays when a conference is already in progress.

For example, while on a call, you can use the Speeddial/Conf softkey to dial a recording service and have the resulting conference recorded.

Note

If currently in a conference, the Speeddial/Conf softkey is disabled on the active call.

6.23 Shared Call Appearance Call Retrieve

Shared Call Appearance (SCA) is when incoming calls are presented to multiple phones simultaneously. For example, it is the ability to assign the boss' extension to a button on the secretary's phone. Calls can be transferred between two phones with the same extension button by simply putting the call on hold at one phone and picking it up on the other. Status LEDs flash in unison, allowing all people sharing the extension to see the status at a glance.

The phones include an enhanced SCA for the servers that support call bridging and allows two or more SCA users to be connected in a call with a third party.

The following is an example:

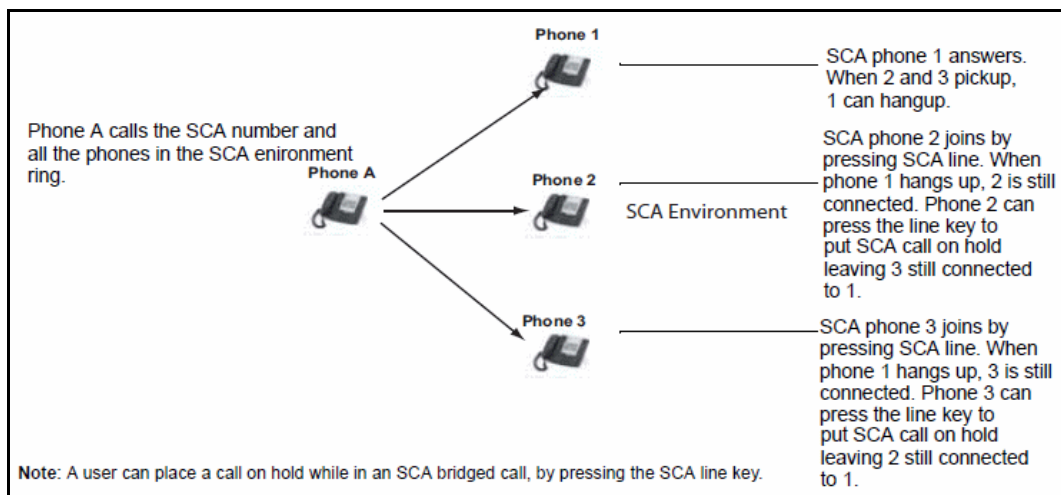


Figure 10 SCA Bridging

Using the example above, when a call comes into Phone 1, Phone 2 and Phone 3 can pick up the same call by pressing the SCA line key. Phone 2 and 3 display the call they are bridging into on the phone's LCD display. Existing SCA parties in a bridge or one-to-one call hear an audible beep when another party has joined the call.

Note

Your Administrator must enable/disable the beep.

If a phone is configured for SCA bridging and it attempts to join a call, but the account on the server does not have this functionality enabled, an error message displays to the LCD on the phone.

The SCA call bridging feature is disabled by default on all phones. Your Administrator can enable/disable this feature if required. Contact your System Administrator for more information.

6.23.1 Keys States and LED Behavior

There are two call states on the phones that support SCA bridging:

- **Bridge-active** - A bridged call is in progress.
- **Bridge-held** - The 3rd-party (i.e., non-SCA party) in the bridge is on hold.

The following tables provide the key states and LED behavior in an SCA bridge call for users involved in an SCA call and users not involved in the SCA call.

6.23.1.1 Line Keys and Idle Screens

State	Call LED	Caller ID	Non-Call LED	Non-Call Caller ID
Idle	N/A	N/A	Off	N/A
Seized	Solid Green	None	Solid Red	None
Progressing (Outgoing Call)	Green	Called Party	Solid Red	None
Alerting (Incoming Call)	Blinking Unselected Red	NA		
Active	Solid Green	Far-end	Solid Red	Far-end
Held	Slow Flashing Green	Far-end	Slow Flashing Red	Far-end
Hold private	Slow Flashing Green	Far-end	Solid Red	Far-end

Bridge-active	Solid Green	Far-end	Solid Red	Far-end
Bridge-held	Slow Flashing Green	Far-end	Solid Red	Far-end

6.23.1.2 Softkey Line Keys

State	Call Icon	Call LED	Non-Call Icon	Non-Call LED
Idle	Small circle	None	Small circle	None
Seized	N/A	NA	Solid circle	Solid Red
Progressing (Outgoing Call)	Empty circle	Solid Red	Solid circle	Solid Red
Alerting (Incoming Call)	Empty blinking circle	Flashing Red	N/A	N/A
Active	Empty circle	Solid Red	Solid circle	Solid Red
Held	Reverse empty blinking circle	Slow Flashing Red	Solid reverse circle	Slow Flashing Red
Hold private	Reverse empty blinking circle	Slow Flashing Red	Solid circle	Solid Red
Bridge-active	Empty circle	Solid Red	Solid circle	Solid Red
Bridge-held	Reverse empty blinking circle	Slow Flashing Red	Solid circle	Solid Red

6.23.1.3 Line Key Phone Behavior


State	Call Line Key Pressed	Non-Call Line Key Pressed
Idle	N/A	Attempt to seize the line
Seized	Hang up	Ignore
Progressing	Hang up	Ignore
Alerting	Answer	N/A
Active	Hold	Bridge
Held	Retrieve	Bridge
Hold private	Retrieve	Ignore
Bridge-active	Hold	Bridge
Bridge-held	Retrieve	Bridge

6.24 XML Application Keys

The 6757i IP phone supports **XML** (Extensible Markup Language). Your System Administrator can create customized XML menu services to access on your phone. These services include things like weather and traffic reports, contact information, company info, stock quotes, or custom call scripts.

6.24.1 Access XML Applications

Use the following procedures to access XML applications.

Step	Action	Result
From the Services key:		
1.	Press the Services key.	
2.	Use the up and down arrows (▲ or ▼) to scroll through the menu list.	
3.	Select a service to display the information for that customized service. Message services display to the screen after pressing the softkey key. For user input services, follow the prompts as appropriate.	
4.	Press the appropriate softkey or the Goodbye key to exit the Services menu.	
From the XML application key:		
1.	Press the XML key.	<p>A screen displays with a menu of available features.</p> 
2.	Use the up and down arrows (▲ or ▼) to scroll through the features offered.	
3.	Select the item you want to view.	
4.	Press the appropriate softkey or the Goodbye key to exit the menu.	

6.25 Voicemail List

The Voicemail list displays a list of phone numbers assigned to the phone that have registered voicemail accounts associated with them.

The phone displays up to 99 voicemails for an account even if the number of voicemails exceeds the limit.

The end of the Voicemail list displays the number of new voicemail messages (if any exist).

Step	Action	Result
1.	Press the Services softkey.	

Step	Action	Result
2.	Select Voicemail .	The Voicemail list displays. <div data-bbox="937 289 1271 642"> <div> ServicesDND CallersWeather Spd 100More </div> <div> Voicemail ▶ 1.9783331000 2.9783331001 </div> <div> Select Done </div> </div>
3.	Use ▲ or ▼ to point to the voicemail account.	
4.	Press Select or ▶.	The number is dialed.



7 The 6757i CT Cordless Handset

7.1 The 6757i CT Cordless Handset

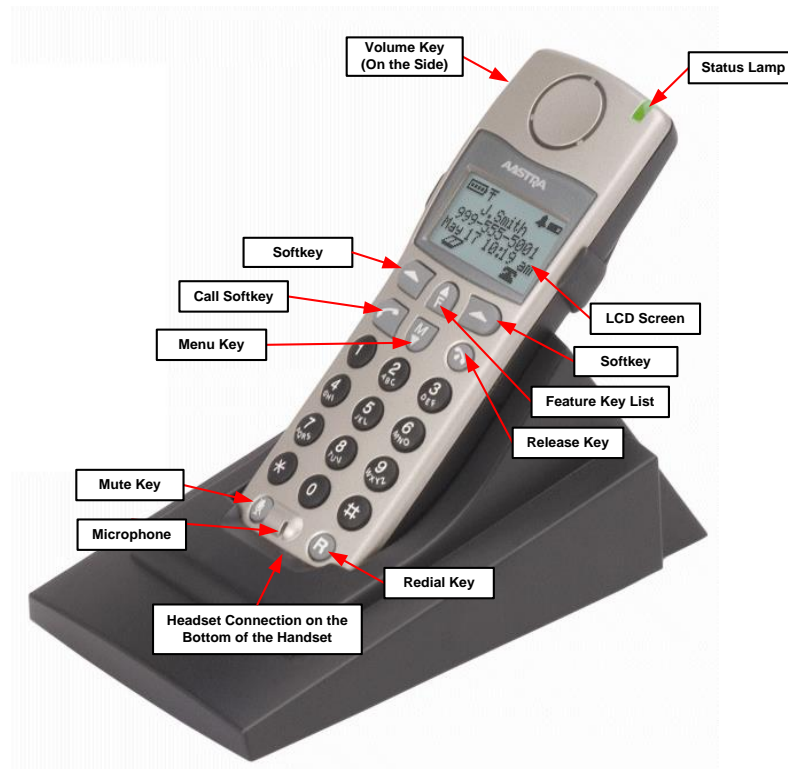


Figure 11 6757i CT Cordless Handset

7.2 Idle Display

When the handset is idle, the handset name, date & time, status messages, and status icons display on the screen.

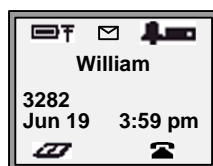




 







 
Figure 12 Handset Idle Display

7.3 Handset Icons and Status Messages












7.3.1 Screen Icons

Icon	Description
	Battery Charge State: 4 bars for battery full and the battery icon flashes when charging.
	Reception (Radio Link): <ul style="list-style-type: none"> On - Within Range/Ready for use. OFF - Out of range/No radio link.
	Feature Key Activation: Indicates the phone is off hook or a call is in progress.
	Silent Alert: Silent Alert is activated.
	Ringer Volume: This icon is available only when the handset is idle and indicates the ringer volume level. The box will go from empty to fully black to represent from off to low to high volume.
	Receiver Volume: This icon is available only when the phone goes off-hook to indicate the receiver audio volume. The box will go from empty to fully black to represent from low to high volume; there are 10 volume levels total.
	Directory: This icon located just above the softkey allows access to the Directory feature.
	Callers List: This icon located just above the softkey allows access to the Callers List feature.
	Indicates an unread voice mail message.

7.3.2 Status Messages

Display Message	Description
	Indicates when the Mute key has been activated
	Appears briefly when pressing a key if you are out of range of the base station

7.4 Handset Keys

Icons	Name	Description
 or 	Softkeys	The two 6757i CT cordless handset softkeys directly under the LCD display. The softkey menus will change depending on the phone state, displaying relevant softkeys only. These softkeys are pre-programmed for call handling and extension management features.
	Talk/Hold Key	A multi-purpose key with the following uses: <ul style="list-style-type: none"> • Initiates a call by seizing the line or through pre-dial. • Answers a call during ringing. • Places a call on hold during an active call.
	Hold Key	Places a call on hold.
	Release Key	The release key is a multi-purpose key with the following uses: <ul style="list-style-type: none"> • Ends a call. • Silences the ringing during an incoming call. • Exits a feature such as Menu (options), Directory, Callers, Redial, and Predial. <p>Note</p> <ul style="list-style-type: none"> • If the handset is placed in the charger cradle, it will also end the call. • Pressing this key in a feature will not terminate an active call.
	Mute Key	Mutes the conversation so that the caller cannot hear you.
	Redial Key	Displays a list of the last 10 calls made from the handset. Use the  and  to scroll through the list.
	Feature Key List	The 6757i CT cordless handset supports a programmable feature key list for easy access to common features.
	Menu Key List	The Menu list allows you to customize the operation of the handset. Please refer to Customize your 6757i CT Cordless Handset .

7.5 Multi-function Handset LED Indicator Lamps

Lamp	Description
Slow Flash	Message Waiting Indicator.
Rapid Flash	Alerting.
Intermittent Flash (Medium)	Mute on the handset where Mute has been activated.
Intermittent Flash	Hold.
Solid	Active Call.

7.6 Headset

The 6757i CT cordless handset accepts headsets through the 2.5 mm audio jack on the bottom of the phone. Contact your system administrator for a compatible headset. You should read and observe all safety recommendations contained in headset operating guides when using any headset.

7.7 Battery

7.7.1 Battery Charge

The handset is powered by a nickel metal hydride battery pack. Use the following procedure to install and charge the battery.

Step	Action
1.	Slide the cover of the battery compartment.
2.	Place the battery pack in the compartment with the connector wires pointing towards the bottom of the handset.
3.	Connect the battery terminal wire to the charging pins located in the compartment.
4.	Slide the cover of the battery compartment back onto the handset.
5.	Place the handset, face up, in the charging cradle. The handset should easily slide into the charging cradle. If it does not, check the battery compartment cover to ensure it is in the proper position.
6.	<p>To confirm that the battery is charging:</p> <p>Check the battery icon symbol on the handset display to see if the lines inside the icon are flashing left to right.</p> <p>Note</p> <p>The battery must be charged for a minimum of six hours prior to initial usage of the phone.</p>

7.7.2 Battery Guidelines



Please observe the following guidelines when dealing with the battery:

- Never tamper with or dismantle the battery pack.
- Avoid touching the battery contacts.

- If necessary, clean the contacts with a damp cloth.
- Protect the battery contacts from contact with any metal objects.
- Never immerse batteries in water or throw them into a fire.

7.7.3 Handset Battery Indicator & Status

The display provides information on the handset battery.

Display	Description
	The bars indicate the battery charge level — 4 for full, needs recharging when only 1 bar appears.
	The bars will flash when the battery is being recharged on the charger stand.

Note

The handset is designed to recharge the batteries automatically, when placed on the charger stand. The battery icon will not flash and the handset does not charge every time it is placed on the stand. If a defective battery is replaced, then the battery icon is not identified until the new battery is charged for at least 2 minutes.

7.8 Volume Control

The volume key, located on the side of the handset, controls both the receiver and ringer volume.

Note

The volume key can also be used to adjust the right/left cursor to add spaces or to erase characters on the display when editing or creating names, key labels etc.

7.8.1 Adjust the Receiver Volume

Step	Action	Result
1.	While on a call: <ul style="list-style-type: none"> • Press the top of the key to increase the receiver volume. Or <ul style="list-style-type: none"> • Press the bottom of the key to decrease the volume. 	The receiver volume icon indicates the current volume level.

7.8.2 Adjust the Ringer Volume

Step	Action	Result
1.	<p>When the handset is <i>not</i> being used for a call:</p> <ul style="list-style-type: none"> Press the top of the key to increase the ringer volume. <p>Or</p> <ul style="list-style-type: none"> Press the bottom of the key to decrease the ringer volume. 	<ul style="list-style-type: none"> The handset ringer sounds each time you change the setting. The ringer volume icon display will also show the current level.

7.9 Feature Key Functions



The 6757i CT handset can have up to 15 feature keys programmed with specific functions. The feature keys are assigned by your system administrator according to the requirements of your organization. The following table lists the functions available for these keys.

Key Function	Key Label	Description	Default for:
Line 1	Line1	Line 1 key - Selects line one.	Handset Key 1
Line 2	Line2	Line 2 key - Selects line two.	Handset Key 2
Line 3	Line3	Line 3 key - Selects line three.	Handset Key 3
Line 4	Line4	Line 4 key - Selects line four.	Handset Key 4
Icom	Intercom	Intercom key – Rings the base station or another handset.	Handset Key 5
Dir	Directory	Accesses the handset Directory.	Handset Key 6
Callers	Callers	Accesses the Callers List.	Handset Key 7
Xfer	Transfer	Activates the Transfer feature.	Handset Key 8
Conf	Conference	Activates the Conference feature.	Handset Key 9
Public	Public	Toggles between public & private call mode.	Handset Key 10
None	None	Optional.	Handset Key 11
None	None	Optional.	Handset Key 12
None	None	Optional.	Handset Key 13
None	None	Optional.	Handset Key 14
None	None	Optional.	Handset Key 15



7.10 Feature Key Programming

The following applies to feature keys on the handset:

A newly registered handset or handset that was out-of-range during programming must perform an "off-hook and on-hook" sequence in order for the newly programmed function to be broadcast to



the affected handsets. Press the off-hook  key from the idle state and then press the onhook  key to go back on-hook.

7.11 Mute

Step	Action	Result
1.	Press the  key at the bottom left of the handset.	<ul style="list-style-type: none"> You can hear the caller. The caller cannot hear you. The Microphone Mute message displays when mute is activated.
2.	Press the  key again.	The feature is deactivated.

7.12 Edit with the 6757i CT Cordless Handset



7.12.1 Characters and Numbers

- For alphanumeric entry, the volume control keys become edit keys and are used to provide backspace and forward-space capability.
- For Backspace/Erase, press the Lower end of the volume bar or press .
- To add a space or to erase from left to right, press the higher end of the volume bar or press .


7.12.2 General Record Editing

Use the available characters as labeled on the keypad to add or edit. Pause key and special characters are also available.

7.12.2.1 Key / Pause key

You can enter a pause character using the  digit key in while in alphanumeric edit mode. Characters will appear in the following order: 0, 


7.12.2.2 The Key

The  key accesses several special characters in alphanumeric mode. Characters appear in the following order:


1 @ . : ; = _ , - ' & ()

The special characters provided by the  key allow URI and IP address data entry.

Note



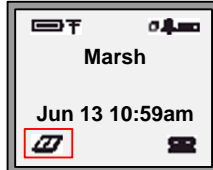
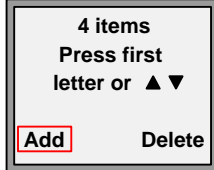
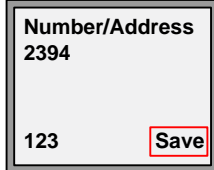
To enter the dot (the period) in text "abc" or "ABC" text mode, use the  key.

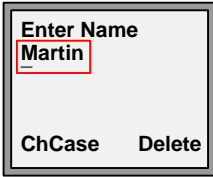




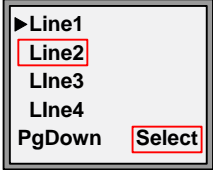
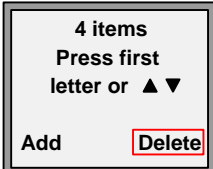
7.12.2.3 Toggle between Numbers, Lower Case, and Upper Case






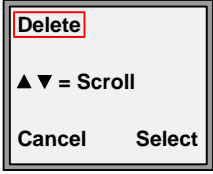

Use the left soft key  to toggle from numeric "123" mode to lower case text "abc" mode, to upper case text "ABC" mode.

7.13 Handset Directory

The directory on the handset can store up to 50 names and numbers, which are displayed in alphabetical order. If no name is entered, the entries are sorted by number, at the beginning of the directory.

Step	Action	Result
Add a record to the handset Directory:		
1.	Press the  softkey under the directory icon  on the left of the screen. 	The main directory screen displays: 
2.	Press the Add softkey.	The Number/Address screen displays: 
3.	Enter the Number/Address information.	

Step	Action	Result
4.	Press Save to advance to the name entry screen.	
5.	Enter a name for the Number/Address information. The name can have up to 15 characters, including spaces.	
6.	Press the Save softkey.	<p>The display shows:</p> 
Dial from the Directory:		
1.	Go into the Directory.	
2.	Use  and  to find the entry to dial.	
3.	Press the Line softkey.	
4.	Select an idle line from the list.	<p>The Line list displays:</p>  <p>Note</p> <p>In this example, Line1 is already in use, so you would select Line2.</p>
5.	Press the Select softkey.	The number is automatically dialed.
Delete records in the handset Directory:		
Delete all entries:		
1.	Go into the Directory.	<p>The main directory screen displays:</p> 







Step	Action	Result
2.	Press the Delete softkey.	The delete confirmation screen displays: 
3.	Press the Delete softkey again.	All items are deleted.
Delete one entry:		
1.	Go into the Directory.	
2.	Use  and  to find the entry to delete.	
3.	Press the Options softkey.	
4.	Use  and  to scroll to the Delete option.	
5.	Press the Select softkey.	The confirmation message displays: 
6.	Press the Delete softkey again.	The item is deleted.







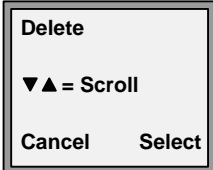
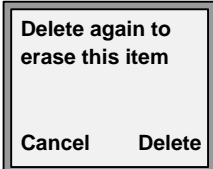
7.14 Callers List on the Handset

The Callers List on the handset stores the last 50 calls received. Items are stored in chronological order with new items being first in the list. Each call received is stored and can be deleted or saved to a directory. Oldest call records are automatically removed from the list when the list is full and new items are added.

Callers List Main Screen	Callers List – One Item
<div> Callers List 14 items 14 new Use ▼ for New Exit Delete </div> <p>The above screen shows the title, the number of total items, the number of new items, instructions for viewing the items and two soft keys, Exit and Delete.</p> <p>If there are no new items, then the x New line is not displayed. Once items are viewed, they are marked as old and do not display in the new call count or in the new item scroll list.</p>	<div> Item 09 New Stanley P. 2333 Jun 12 4:00 pm Options Line </div> <p>The above screen shows the item number, the name and number of the caller, and the time the call was received. Also shown are two soft keys, Options and Line.</p>

7.14.1 Use the Handset Callers List






Step	Action	Result
Access the handset Callers List:		
1.	<ul style="list-style-type: none"> Press the softkey  under the Callers List  icon on the right of the screen. <p>Or</p> <ul style="list-style-type: none"> Use the  key and scroll down to Callers Press Select. 	The Callers List displays and the Exit and Delete softkeys are available.
Save from the handset Callers List to the handset Directory:		
1.	Go to the Callers List.	The Callers List opens.
2.	Use  and  to scroll through the list to find the entry to save to the handset Directory.	
3.	Press the Options softkey on the left	The “Save  Directory” prompt displays. <div> Save ► Directory ▼▲ = Scroll Cancel Select </div>
4.	Press the Select softkey.	The screen displays: <div>Item Saved</div>

Dial from the handset Callers List:		
1.	Find the entry to dial.	
2.	Press the Line softkey on the right.	The features list of configured lines displays.
3.	Use  and  to find an available line.	
4.	Press the Select softkey.	The number automatically dials.
Delete handset Callers List entries:		
Delete all entries in the list:		
1.	Go to the Callers List.	The Callers List screen displays.
2.	Press the Delete softkey.	The “Press Delete to erase all” message displays.
3.	Press Delete again.	All entries are deleted.
Delete one entry:		
1.	Go to the Callers List.	
2.	Use  and  to find the item to delete.	
3.	Press Options .	The “Save ► Directory” prompt displays.
4.	Use  or  to move to the Delete option.	<p>The “Delete” option displays at the top of the screen.</p> 
5.	Press Select .	<p>This message displays:</p> 
6.	Press Delete again.	The “Item erased” message displays.

7.15 Redial Key on the Handset

There are two Redial functions you can access using the **Redial** key.

- Redial - If you are *off-hook* and press Redial, the last number you called will be called back.
- Redial List – Displays a list of the last 10 calls dialed from the handset. If you are *on-hook* and press Redial, the Redial list displays, and you can scroll through it to select a number to redial. The list contains the name (if known), the number you dialed, the time and date the number was dialed, and the line used.

Step	Action	Result
Redial (On-hook):		
1.	Press  on the bottom right of the phone.	The last number you dialed displays on the screen and is automatically dialed.
Redial from the Redial List (On-hook):		
1.	While onhook: Press  .	The Redial List displays the first entry.
2.	Use  or  to find the entry to call.	
3.	Press Line .	The Line list displays.
4.	Press Select on an available line.	The number automatically dials.
Exit the Redial List:		
1.	Press  .	The main screen displays.



8 Customize your 6757i CT Cordless Handset

8.1 Handset Options List





The Options key allows you to access a list of configuration options. The following table shows the options you can set up for the handset.




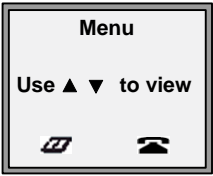


If you make changes from the default settings, they are permanent until you change them again.

Option #	Menu list
1	Intercom
2	Language
3	Ring Tone
4	Custom Name
5	Timer
6	Vibrate
7	Handset Pairing
8	Key Lock
9	Backlight
10	Silent Alert
Note The display will return to idle if no action/activity is initiated within 20 seconds.	

8.2 Access the Options List



Step	Action	Result
1.	In the idle state: Press the Menu key  .	The Options List menu displays.
Scroll through the list:		
1.	Use  and  to scroll through the list.	
Shortcut to a menu item:		
1.	One-digit items: <ul style="list-style-type: none"> Press the corresponding menu item number. Two-digit items: <ul style="list-style-type: none"> Press the digits within a one second time span. 	
Quit the menu:		
1.	Press the  key.	The idle screen displays.

8.2.1 Select an Option

Step	Action	Result
1.	Press the  key when the phone is not being used.	The Menu list displays with navigation icons. 
2.	Use  and  to scroll to the desired option.	




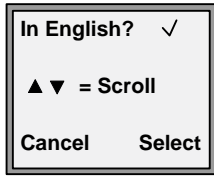


8.3 Intercom

The 6757i CT supports an intercom function between the base station and the paired handsets.

Step	Action	Result
1.	Go to the Intercom option in the Menu list.	
2.	Press Select .	The base and the handsets paired to the base display.
3.	<ul style="list-style-type: none"> Use the scroll keys  and  to scroll to the desired handset or base. <p>Or</p> <ul style="list-style-type: none"> Press the number corresponding to the base or handset you want to call. <ul style="list-style-type: none"> 0 = Base 1 thru 4 = Handsets 	
4.	Press the Call softkey.	The destination rings.




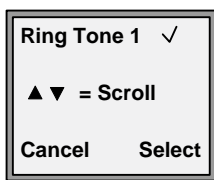
8.4 Language

The prompts on 6757i CT handset can be personalized to English, French, or Spanish. A checkmark beside the language indicates the currently selected language prompt. English is the default language.

Step	Action	Result
1.	Go to the Language option.	
2.	Press the Change  softkey on the right.	
3.	Use the scroll keys  and  to scroll to the language you want to set on the handset.	
4.	Press the Select  softkey on the right.	The -Confirmed- message displays when the selection is changed. Note The language in use is identified with a check mark.
5.	Press  when done.	The language you select is immediately applied to the handset display.

8.5 Ring Tone












There are 4 ring tones available. Ring tone 1 is the default.

Step	Action	Result
1.	Go to the Ring Tone option.	
2.	Press the Change  softkey on the right.	Hear the current ring tone.
3.	Press  or  .	Hear a different ring tone each time you press a key.
4.	Press Select when you find the ring tone that you want to hear.	 The ring tone is changed and confirmed. Ring Tone -Confirmed-

8.6 Custom Name

You can personalize the name/label for each cordless handset. In a multi-handset environment, this is an ideal option to personalize each handset to its user or extension number.

8.6.1 Create the Name


Step	Action	Result
Create the Name:		
1.	Go to the Custom Name option.	
2.	Press the Change  softkey on the right.	
3.	Press the Edit  softkey on the left.	If a custom name already exists, the Delete softkey displays.
4.	<p>Use these keys to create or edit what is already there:</p> <ul style="list-style-type: none"> • Use  to backspace/erase. • Use  to forward space. • Use the ChCase softkey  on the left to alter the case. • No matter what case is chosen, the last time the key is pressed changes to a number so that you can enter numbers. (Example: Press the 2 key on the keypad four times. The fourth time it is pressed, it becomes the number 2.) <p>Note</p> <p>In edit mode, the Volume Bar can be also be used in place of the  or  keys to control the screen cursor. Press the Lower end volume bar for Backspace/Erase; and press the Higher end volume bar to add a Space.</p>	
5.	Press the Save softkey  .	Name Saved is displayed.
Delete the name:		
1.	Press the Change  softkey on the right.	The current name displays if assigned and the Delete softkey displays.
2.	Press the Delete  softkey on the right.	"Press Delete to Confirm" displays.
3.	Press the Delete  softkey on the right.	The name is deleted.

8.7 Timer

When the Timer option is enabled, the timer starts from the first call and continues until all calls have been released.




Note

The call timer is not usable for call accounting since the timer continues to increment even when the call is on hold.

Step	Action	Result
1.	Go to the Timer option.	
2.	Press the Change  softkey on the right to toggle between Off and On.	The screen displays: <div> <div>Timer Off</div> <div>-Confirmed-</div> </div> Or <div> <div>Timer On</div> <div>-Confirmed-</div> </div>


8.8 Vibrate



The Vibrate option allows the handset to signal an incoming call by vibrating as well as ringing. This option is always turned off by default.

Step	Action	Result
1.	Go to the Vibrate option.	
2.	Press the Change  softkey on the right to toggle between Off and On.	The screen displays: <div> <div>Vibrate Off</div> <div>-Confirmed-</div> </div> Or <div> <div>Vibrate On</div> <div>-Confirmed-</div> </div>
3.	Press  .	The main screen displays. With Vibrate ON, the  displays beside the ringer icon on the top right line of the display.

8.9 Key Lock


The Key Lock option allows you to lock the keypad keys to prevent accidental activation of the phone.

Step	Action	Result
1.	Go to the Key Lock option.	
2.	Press the Change  softkey on the right to toggle between Off and On.	The screen displays: <div> <div>Key Lock ON</div> <div>-Confirmed-</div> </div> Or <div> <div>Key Lock OFF</div> <div>-Confirmed-</div> </div>

Step	Action	Result
3.	<p>Note</p> <p>You can also turn the Key Lock Off or On by pressing only the , then the .</p>	


 

 
8.10 Backlight

The Backlight option allows you to turn on or off the backlit light on the LCD display.

Step	Action	Result
1.	Go to the Backlight option.	
2.	Press the Change  softkey on the right to toggle between Off and On.	<p>The screen displays:</p> <p>Backlight ON</p> <p>-Confirmed-</p> <p>Or</p> <p>Backlight OFF</p> <p>-Confirmed-</p>

8.11 Silent Alert

The Silent Alert option activates an internal hardware vibrator instead of a regular ringer for incoming calls. Silent Alert is set to OFF by default.

Step	Action	Result
1.	Go to the Silent Alert option.	
2.	Press the Change  softkey on the right to toggle between Off and On.	<p>The screen displays:</p> <p>Silent Alert OFF</p> <p>-Confirmed- Or</p> <p>Silent Alert ON</p> <p>-Confirmed-</p> <p>When the Alert is On, the  icon is shown on the top line of the display.</p>
3.	<p>Note</p> <p>You can also activate and deactivate by pressing the  key and the  key. The Ringer Icon does not appear on the display when the Silent Alert is On.</p>	

8.12 Handset Pairing

All handsets must be paired to a 6757i CT base before they can be used. See the chapter on pairing handsets with a base. See [Chapter 10](#).






9 Call Handling on the 6757i CT Cordless Handset

9.1 Place Calls from the Handset

9.1.1 Dial a Number


You can place a call using one of the following methods:

Step	Action	Result
1.	Press the  key.	
2.	Use the Keypad to dial the number.	The number is dialed.
Pre-dial the number: You can enter the number and edit it before dialing.		
1.	Enter the number.	
2.	If the number is incorrect: <ul style="list-style-type: none"> Use the  key. Or <ul style="list-style-type: none"> Press down on the volume key to erase digits from right to left. 	
3.	Press the  key	The number is dialed.

9.2 Receive Calls on the Handset

9.2.1 Answer an Incoming Call

When a call is ringing at your extension, you will see the Inbound Call screen.

Step	Action
Hands-free operation:	
1.	<ul style="list-style-type: none"> Press the  key Or <ul style="list-style-type: none"> Lift the handset out of the charging cradle. Or <ul style="list-style-type: none"> Press the Line n softkey.


9.3 Call Privacy

In the 6757i CT multi-handset system, it is possible to connect 4 cordless handsets together with each other or with the base as extensions to a call. This is just like an analog system with extension phones going off hook to join a call in progress.


However, because this system is used in an enterprise environment, a method of call privacy is required. The following applies:

- All calls, on the base or handset, begin in the "Private" mode. No other extensions are allowed to join the call.
- If the handset has placed the call, the base station display shows the line number of the connected call, and displays "Private Line".
- If the base station has placed the call, the handset displays "Private Line" if you attempt to access the same line the base station is using.
- Any local caller on the call can convert the call state. For instance, if one cordless caller is on an external call, he can press the **Public** feature key to make the call public. At that point up to three other handsets can join in on the call. If *any* of those joined handsets presses the **Private** soft key, the call is again made private and no other users can join the call unless the call is made public again.





Note





If the base station is already using a line, you can choose another line from the Features List  to make your call.

9.4 Private and Public Keys

- Handset - The **Public** feature is an option in the Features List . When a call is connected and the feature is invoked, the **Private** softkey displays on the handset screen to turn off the Public feature and the triangle ► indicator displays next to the Public option in the Features List.
- Base Station – When a call is connected, the **Public** softkey is available to invoke the feature and the **Private** softkey turns it off.

9.4.1 Use the Public Feature on the Handset

Step	Action	Result
Activate the Public feature:		
1.	Press the  key.	The features list opens.
2.	Use  or  to find the Public option.	
3.	Press the Select softkey.	<p>The call is made public. The Private softkey displays on the handset screen.</p> 

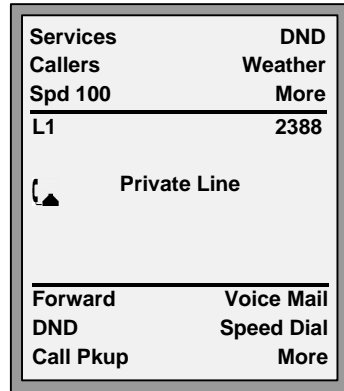
Deactivate Public to go back to a private call:		
1.	Press the  key.	The features list opens.
2.	Use  or  to find the Public option.	
3.	Press the Select softkey.	<p>The call is now private again.</p>  <p>Private Call in Progress</p>

9.5 Access the Public Feature on the Base Station

Step	Action	Result
1.	From a connected call: Press the Public softkey.	<ul style="list-style-type: none"> The call is made public. The Private softkey displays on the screen.

9.5.1 Base Station Display when the Cordless Handset is Used

The 6757i CT base station displays the following when a handset is in use. If the handset is set to Public mode, you can pick up the call on the base station to join the call.

State	Display
The handset is connected to a call.	 <p>The display shows a menu with the following options:</p> <ul style="list-style-type: none"> Services Callers Spd 100 L1 Private Line Forward DND Call Pkup DND Weather More 2388 Voice Mail Speed Dial More



State	Display
The handset set the call to Public mode.	<div> <div> Services Callers Spd 100 L1 <div> 2388 2333 </div> </div> <div> DND Weather More 2388 12:24 <div> Pickup Private Conf </div> <div> Xfer More </div> </div> </div>

9.6 Hold and Auto-hold



Step	Action	Result
Normal Hold		
1.	Press the Hold key while on a call	<ul style="list-style-type: none"> The call is on hold. The green LED will flash at the hold rate. The display reads: <div>Call is on Hold</div> A short ring burst reminder tone plays (flash ring).
Auto-Hold		
1.	Press any other line key while on an active call.	<ul style="list-style-type: none"> The current line is placed on hold. The new line is connected.

9.6.1 Retrieve a Held Call

Step	Action	Result
1.	Press the Line n softkey ().	You are reconnected to the call.



9.7 Transfer


You can transfer the call to another extension with the 6757i CT cordless handset.

Step	Action	Result
1.	While on a call: Use  to scroll up to the Transfer feature.	
2.	Press the Select softkey.	You hear dial tone.
3.	Dial the extension number of the destination party.	<ul style="list-style-type: none"> The destination rings. The Transfer softkey displays on the screen.
Unannounced transfer:		
1.	Press the Transfer softkey again while the destination is still ringing.	The transfer is complete.
Announced transfer:		
1.	Wait until the destination party answers the call.	
2.	Talk to the destination party to announce the transfer.	
3.	Press the Transfer softkey again.	The transfer is complete.
Cancel the Transfer:		
1.	Press the  key while the destination is still ringing.	The original caller is still on hold.
2.	Press the Line n key of call on hold.	You are reconnected to the original call.


9.8 Conference

You can establish a 3-way conference using the 6757i CT cordless handset.


Step	Action	Result
1.	Establish a call to another party.	
2.	Press  to scroll up to the Conference feature.	
3.	Press the Select softkey.	You hear dial tone.
4.	Dial the number of the third party.	<ul style="list-style-type: none"> The destination rings. The third party answers.
5.	Press  to scroll up to the Conference feature.	
6.	Press Select .	The conference is established.

Step	Action	Result
If you do not wish to add the third party to the conference:		
1.	Press the  key while the destination is still ringing.	The first party is still on hold.
2.	Press the Line n softkey.	You are reconnected to the party on hold.

9.8.1 Release the Conference

Step	Action	Result
1.	Press the  key.	The conference is dropped.

9.9 End a Call

Step	Action	Result
1.	<ul style="list-style-type: none"> Press the  key. <p>Or</p> <ul style="list-style-type: none"> Place the handset back on the charging cradle. 	The call is disconnected.

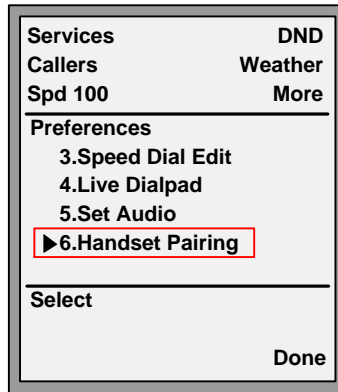
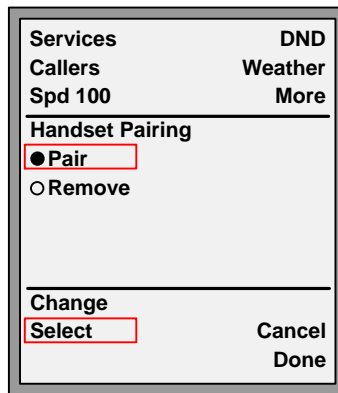
10 Pair and Unpair the Cordless Handset to the Base Station


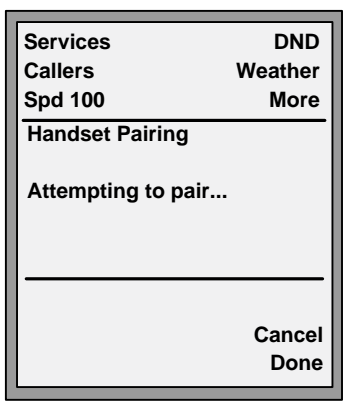


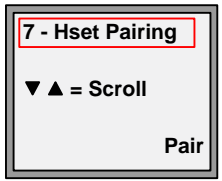
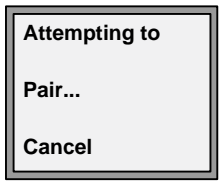
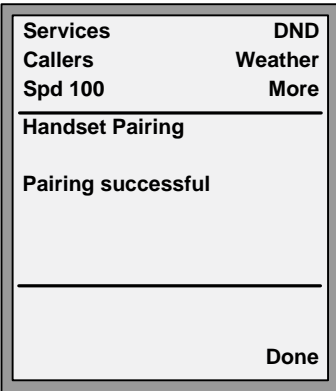
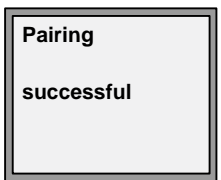
10.1 Pair a Handset

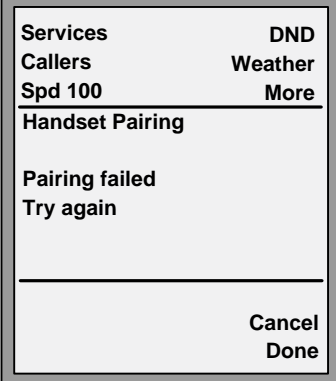

All handsets must be paired to a base station. This function can be performed from both the base and the cordless handset. A total of 4 handsets can be paired to a single 6757i CT base.

Note

- The cordless handset should be within 3 feet of the 6757i CT base station for handset pairing.
- Both units must attempt the pairing at the same time.

Step	Action	Result
On the 6757i CT base station:		
1.	Go to Options > Preferences > Handset Pairing .	 <p>The screenshot shows a menu with the following items: Services, Callers, Spd 100, DND, Weather, More, Preferences, 3.Speed Dial Edit, 4.Live Dialpad, 5.Set Audio, and 6.Handset Pairing (highlighted with a red box). Below these items is a 'Select' button and a 'Done' button at the bottom right.</p>
2.	Press Select or ►.	<p>The Handset Pairing screen displays.</p>  <p>The screenshot shows a 'Handset Pairing' screen with the following items: Services, Callers, Spd 100, DND, Weather, More, Handset Pairing, Pair (highlighted with a red box), Remove, Change, Select (highlighted with a red box), Cancel, and Done.</p>

Step	Action	Result
3.	Press Select or  . <div> <div>Note</div> <p>If there are already 4 handsets paired to the base, you will not be able to select the Pair option.</p> </div>	
On the 6757i CT cordless handset:		
1.	Press the Menu  key.	
2.	Use the Menu  key to scroll down to the Hset Pairing option. <div> <div>Note</div> <p>If the handset has already been paired, the softkey will be labeled as Remove instead of Pair.</p> </div>	
3.	Press Pair .	
If the pairing is successful, the following displays on each unit: <div>   </div>		

Step	Action	Result
If the pairing is unsuccessful, the following displays on each unit:		
		


10.2 Unpair a Handset

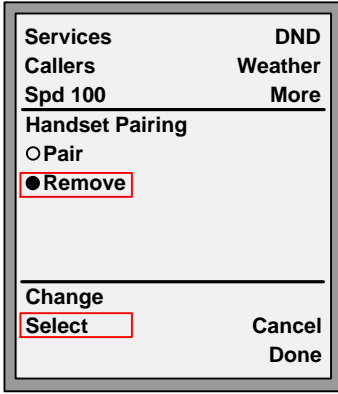
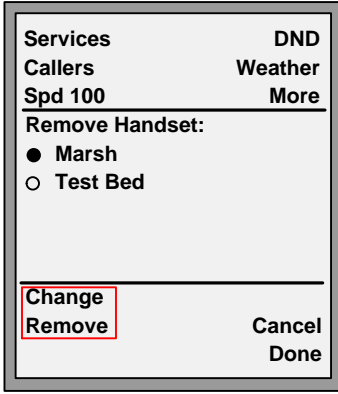
Unpairing the handset can be done from either the cordless handset or the base. However, if the handset being removed is out of range from the base, the unpairing is only performed local to the unit where the process was initiated.

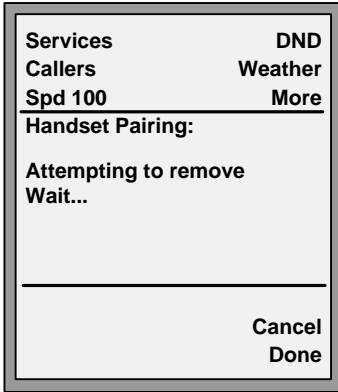
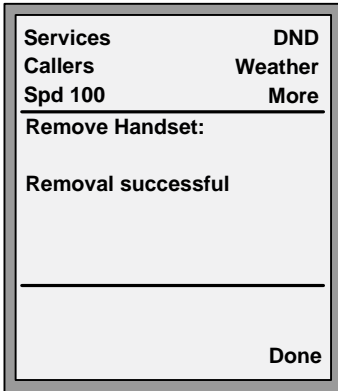
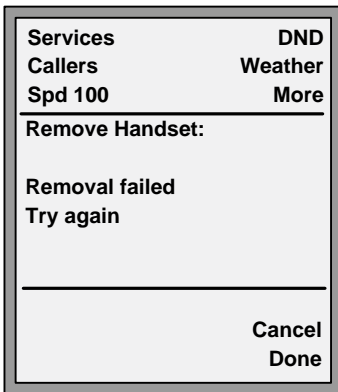
If the unpairing is only successful from the local device, the unpairing procedure must be completed from the other unit.




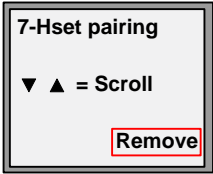
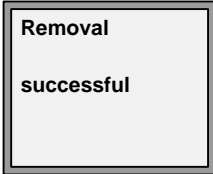
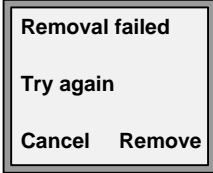
Note

Unpairing the handset will deactivate the features. The features are restored when the handset is paired again with the base station.

Step	Action	Result
On the 6757i CT base station:		
1.	Go to Options > Preferences > Handset Pairing .	

Step	Action	Result
2.	Press Select or ►.	 <p>The screenshot shows a phone menu with options: Services, Callers, Spd 100, Handset Pairing, Change, and softkeys: DND, Weather, More, Select, Cancel, Done. Under 'Handset Pairing', there are two options: 'Pair' (unselected) and 'Remove' (selected and highlighted with a red box).</p>
3.	Use ▲ or ▼ to select Remove .	
4.	Press Select or ►.	<p>The list of handsets for this phone display:</p>  <p>The screenshot shows a phone menu with options: Services, Callers, Spd 100, Remove Handset, Change, and softkeys: DND, Weather, More, Remove, Cancel, Done. Under 'Remove Handset', there are two options: 'Marsh' (selected) and 'Test Bed' (unselected). The 'Change' and 'Remove' softkeys are highlighted with red boxes.</p>
5.	<ul style="list-style-type: none"> Use ▲ or ▼ to select the handset to remove. <p>Or</p> <ul style="list-style-type: none"> Use the Change softkey. 	

Step	Action	Result
6.	Press the Remove softkey.	<p>The following message displays:</p>  <p>If the removal was successful the following displays on the phone.</p>  <p>If the removal was not successful the following displays on the phone.</p> 

Step	Action	Result
7.	Press the Done softkey.	<p>This display shows the status:</p> 
If the removal is not successful on the base station, do the removal on the <u>cordless handset</u>:		
1.	Press  .	
2.	<p>Use  to scroll down to HSet pairing or Press 7.</p> <p>Note</p> <p>If the handset is not paired, the softkey will be labeled as Pair instead of Remove.</p>	
3.	Press the Remove softkey.	<p>Attempting to</p> <p>Remove...</p> <p>Cancel</p> <p>Successful removal:</p>  <p>Unsuccessful removal:</p> 

Appendix A - Optional Expansion Modules

Expansion Modules

The 6757i CT IP Phone offers optional M670i and M675i Expansion Modules that attach to the right side of the phone to provide additional keys. The keys support a variety of features including:

- Busy Lamp Fields (BLFs) (maximum of 50)
- Speeddial
- Shared Call Appearance
- Phone Lock

M670i

The M670i provides 18 keys in each column (totaling 36 keys) on the keypad. Each key provides an LED for indicating call status. The M670i provides a paper label for convenient key labeling.

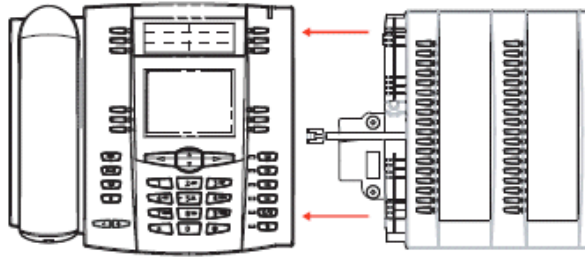


Figure 13 M670i Expansion Module

M675i

The M675i provides 10 softkeys in each column (totaling 20 keys) on the keypad. The M675i also provides 3 keys at the bottom left of the unit. These keys represent "Page 1", "Page 2", and "Page 3" of the LCD display. The M675i has 20 keys available on each page (totaling 60 softkeys). Each key provides an LED for indicating call status. The M675i provides an LCD screen for displaying key labels.

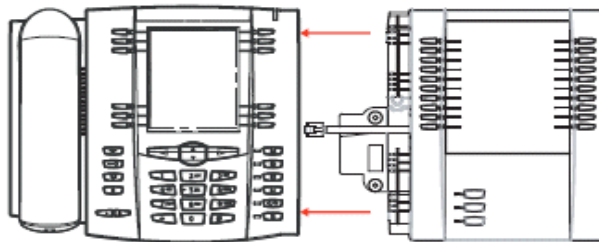


Figure 14 M675i Expansion Module

Using the Expansion Modules

M670i Expansion Module

After configuring the softkeys on the M670i Expansion Module, you can record the name of the softkey on the paper labels provided with the Expansion Module. Press the softkey you want to use when applicable.

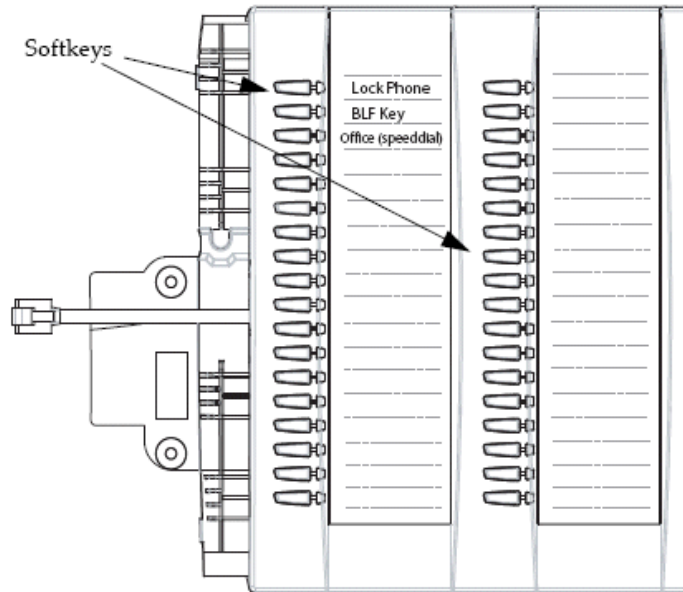


Figure 15 M670i Expansion Module Drawing

M675i Expansion Module

The M675i Expansion Module screen displays softkeys in column format. The function keys on the bottom left of the Module allow you to display 3 full screens of softkeys. Each screen consists of 2 columns with the following default headings on each page:

- Page 1 "List 1" and "List 2"
- Page 2 "List 3" and "List 4"
- Page 3 "List 5" and "List 6".

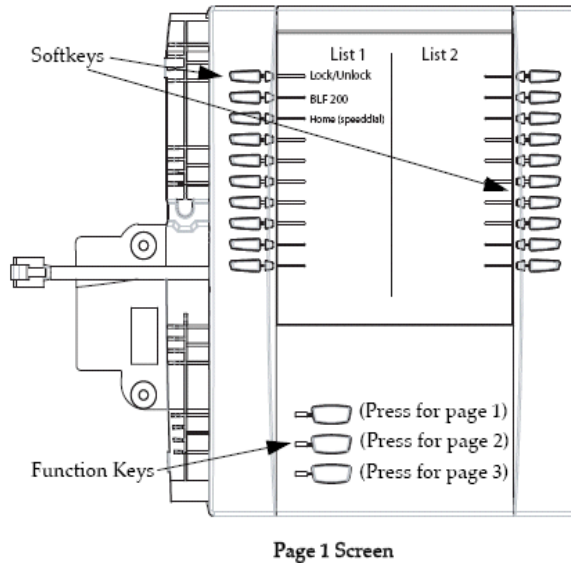


Figure 16 M675i Page 1 Screen

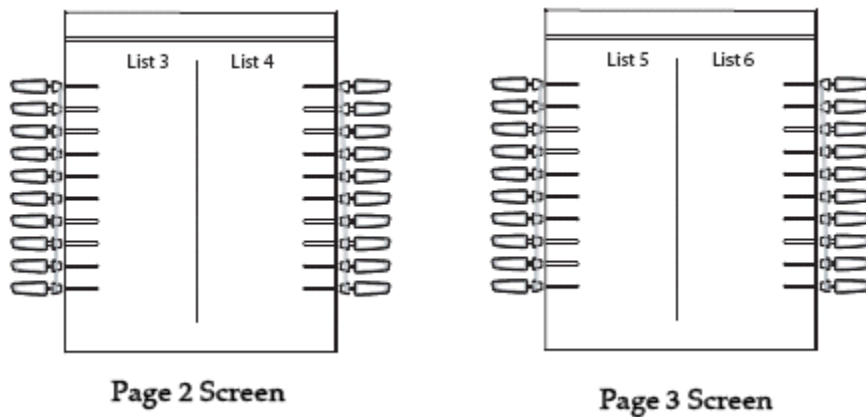


Figure 17 M675i Page 2 and 3 Screens

To use the M675i, press the function key for the page you want to display on the LCD screen (page 1, page 2, or page 3), and press the applicable softkey.

Note

Your System Administrator can customize the headings on each M675i Expansion Module screen. Contact your System Administrator for more information.



Figure 18 M675i Extensions on a 6757i CT

Appendix B – Clearspan Feature Access Codes

Feature Access Codes (FACs) can be set up as Speed Dial numbers and assigned to keys, or dialed directly from the keypad.

Note

The following are the default feature access codes. If the codes are customized for your site, contact your system administrator for information. Because Clearspan features are available by license only, you may not have access to all of them.

Code	Name	Definition
*34	Advice Of Charge Activation	Activates the Advice of Charge service for the next call when the service is not enabled for all calls.
*77	Anonymous Call Rejection Activation	Activates the Anonymous Call Rejection service. After the user dials the feature access code, the system plays an announcement to inform the user that the service has been successfully activated. If the service was already active, the user still receives the announcement.
*87	Anonymous Call Rejection Deactivation	Deactivates the Anonymous Call Rejection service. After the user dials the feature access code, the system plays an announcement to inform the user that the service has been successfully deactivated, even if the service was never activated.
#8	Automatic Callback Deactivation	Cancels all current pending callbacks.
#9	Automatic Callback Menu Access	Provides access to an Interactive Voice Response (IVR) menu that lists the current pending callbacks and allows the user to cancel individual callbacks.
*14	Clearspan Anywhere E.164 Dialing	Allows users to dial E.164 numbers. The user dials the feature access code as an alias to the “+” sign. The system replaces the feature access code digits with the “+” sign and resumes the call with an E.164 number.

Code	Name	Definition
*15	Call Bridge	<p>Allows a Shared Call Appearance (SCA) location to initiate or join an SCA-Bridge, upon which the Application Server automatically selects an appropriate call appearance to bridge on.</p> <p>The Call Bridge FAC becomes visible when one or more of the following services are authorized (service provider or group) or assigned (user):</p> <ul style="list-style-type: none"> Clearspan Anywhere Shared Call Appearance Shared Call Appearance 5 Shared Call Appearance 10 Shared Call Appearance 15 Shared Call Appearance 20 Shared Call Appearance 25 Shared Call Appearance 30 Shared Call Appearance 35
*72	Call Forwarding Always Activation	Redirects incoming phone calls to another number, such as a mobile phone or administrative assistant. After dialing the feature access code, the user dials the phone number where they want their calls to be redirected.
*73	Call Forwarding Always Deactivation	Deactivates the Call Forwarding Always service. Upon deactivation, calls ring on the user's phone unless the user has another service set up, such as Call Forwarding Busy, Call Forwarding No Answer, or Do Not Disturb.
21	Call Forwarding Always Interrogation	Allows the user to get the current status and destination of the Call Forwarding Always service. The status is active or inactive and the destination is voice mail or the current forwarding number.
*21	Call Forwarding Always to Voice Mail Activation	Redirects incoming phone calls to the user's voice mail.
#21	Call Forwarding Always to Voice Mail Deactivation	Deactivates the Call Forwarding Always To Voice Mail service. Upon deactivation, calls ring on the user's phone unless the user has another service set up, such as Call Forwarding Busy, Call Forwarding Busy To Voice Mail, Call Forwarding No Answer, or Do Not Disturb.
*90	Call Forwarding Busy Activation	Redirects incoming phone calls to another number, such as a mobile phone or administrative assistant, when the user is on the phone. After dialing the feature access code, the user dials the phone number where they want their calls to be redirected.
*91	Call Forwarding Busy Deactivation	Deactivates the Call Forwarding Busy service. Upon deactivation, calls ring on the user's phone unless the user has another service set up, such as Call Forwarding Always, Call Forwarding No Answer, or Do Not Disturb.

Code	Name	Definition
67	Call Forwarding Busy Interrogation	Allows the user to get the current status and destination of the Call Forwarding Busy service. The status is active or inactive and the destination is voice mail or the current forwarding number.
*40	Call Forwarding Busy To Voice Mail Activation	Redirects incoming phone calls to voice mail when his user is on the phone.
#40	Call Forwarding Busy To Voice Mail Deactivation	Deactivates the Call Forwarding Busy To Voice Mail service. Upon deactivation, calls ring on the user's phone unless they have set up another service such as Call Forwarding Always, Call Forwarding Always To Voice Mail, Call Forwarding No Answer, or Do Not Disturb.
*92	Call Forwarding No Answer Activation	Redirects incoming phone calls to another number, such as a mobile phone or administrative assistant, when the user does not answer the phone. After dialing the feature access code, the user dials the phone number where they want their calls to be redirected.
*93	Call Forwarding No Answer Deactivation	Deactivates the Call Forwarding No Answer service. Upon deactivation, calls ring on the user's phone unless they have set up another service such as Call Forwarding Busy, Call Forwarding Always, or Do Not Disturb.
61	Call Forwarding No Answer Interrogation	Allows the user to get the current status and destination of the Call Forwarding No Answer service. The status is active or inactive and the destination is voice mail or the current forwarding number.
*41	Call Forwarding No Answer To Voice Mail Activation	Redirects incoming phone calls to voice mail when the user does not answer the phone.
#41	Call Forwarding No Answer To Voice Mail Deactivation	Cancels the Call Forwarding Busy To Voice Mail service. Upon deactivation, calls ring on the user's phone unless they have set up another service such as Call Forwarding Busy, Call Forwarding Busy To Voice Mail, Call Forwarding Busy, or Do Not Disturb.
*94	Call Forwarding Not Reachable Activation	Redirects incoming phone calls to a different number when the user's device is not accessible by Clearspan. After dialing the feature access code, the user dials the phone number where they want their calls to be redirected.
*95	Call Forwarding Not Reachable Deactivation	Deactivates the Call Forwarding Not Reachable service. After deactivation, should the user's phone become unreachable, calls are no longer rerouted to an alternate device through the Call Forwarding Not Reachable service.
63	Call Forwarding Not Reachable Interrogation	Allows users to get the status of the Call Forwarding Not Reachable service.

Code	Name	Definition
#76	Call Forwarding Selective Activation	The Selective Call Forwarding service can be activated only if the service is configured with the following minimum requirements: The Default Call Forward to phone number/SIP URI is configured. At least one selective criterion is configured and active.
#77	Call Forwarding Selective Deactivation	Deactivates the Call Forwarding Selective service. After the service has been deactivated, no criteria are used when a call is being redirected.
*67	Calling Line ID Delivery Blocking per Call	Hides the user's calling line ID for the next call. Before placing a call, the user dials the feature access code; then places the call as usual.
*31	Calling Line ID Delivery Blocking Persistent Activation	Prevents display of the user's calling line ID for all calls.
#31	Calling Line ID Delivery Blocking Persistent Deactivation	Displays the user's calling line ID for all calls.
*65	Calling Line ID Delivery per Call	Displays the users calling line ID for the next call.
*68	Call Park	Places a call on hold with the intent of retrieving it from another extension. The call can be parked on the user's own extension or on another extension within the same group.
*88	Call Park Retrieve	Retrieves a call that has been parked.
*98	Call Pickup	Answers the ringing phone within the assigned call pickup group. If more than one phone in the assigned call pickup group is ringing, the phone that has been ringing the longest is answered. Pickup groups are defined by the group administrator.
*11	Call Retrieve	Retrieves an existing active call from another endpoint. The user dials the feature access code from the location where the call is to be retrieved. This feature can be used from the primary location, from a Shared Call Appearance alternate location, or from a Clearspan Anywhere location.
*69	Call Return	Call the phone number of the last received call. Calls can be returned only to numbers that are acceptable according to the user's Outgoing Calling Plan.
#92#	Call Return Number Deletion	Allows the user to delete the last incoming number for the Call Return service.
*43	Call Waiting Persistent Activation	Turns on the Call Waiting service for all calls.
#43	Call Waiting Persistent Deactivation	Turns off the Call Waiting service for all calls.
*70	Cancel Call Waiting	Turns off the Call Waiting service for the next call.

Code	Name	Definition
*99	Clear Voice Message Waiting Indicator	Clears the audible (and visible for some devices) message waiting indicator on the user's phone.
33	Communication Barring User-Control Activation	Activates the user's current communication barring profile.
#33*	Communication Barring User-Control Deactivation	Deactivates the user's current communication barring profile.
*#33#	Communication Barring User-Control Query	Provides information about the user's current communication barring profile.
*57	Customer Originated Trace	Places a trace on the last number that called the user.
*97	Directed Call Pickup	Answers a call at a specific extension within the assigned call pickup group. To answer the ringing call at an extension, the user dials the feature access code followed by that extension. Call pickup groups are defined by the group administrator.
*33	Directed Call Pick-up with Barge-in	Dials an allowed prefix, followed by the assigned code and an extension to either pick up a ringing call in the user's group or to join an ongoing call with someone in the group.
*55	Directed Voice Mail Transfer	Transfers a caller on hold to voice mail.
*80	Diversion Inhibitor	Prevents redirection services from being activated on the terminating side of an unanswered call.
*78	Do Not Disturb Activation	Activates the Do Not Disturb service. When the service is active, the user's phone does not ring and all calls receive busy treatment, such as a voice message.
*79	Do Not Disturb Deactivation	Turns off the Do Not Disturb service.
#83	Escalate Call Supervision	Call center agents can use this code to escalate calls to a supervisor. A supervisor who is not on a call and who does not have the Do Not Disturb service enabled is considered available and the call is routed to that supervisor. The caller is put on hold by the agent when the escalation to the supervisor is initiated. The feature access code is available to agents with Call Center – Standard or Call Center – Premium service assigned.
*22	Flash Call Hold	Places a call on hold with the flash hook to place another call. Users can toggle between the two calls by pressing the flash-hook.
#72	Forced Forwarding Activation	Activates forced forwarding for a call center queue.
#73	Forced Forwarding Deactivation	Deactivates forced forwarding for a call center queue.
#58	Group Call Park	Hunts for the first available user in the assigned call park group and parks the call there.


Code	Name	Definition
#82	Initiate Silent Monitoring	A supervisor can use this code to silently listen in on a call handled by an agent that they are monitoring. This feature access code is available to supervisors with the Call Center Monitoring service assigned.
*66	Last Number Redial	Dials the most recently dialed phone number called from the user's extension.
*96	Legacy Automatic Callback Invocation	Allows users to camp on a busy called party. When the user dials the feature access code after a call to a busy destination, a callback request is created and the user is automatically called back when the called party hangs up.
#96	Legacy Automatic Callback Cancelation	Cancels all active Legacy Automatic Callback requests.
*12	Location Control Activation	Allows users to activate a location. The feature access code has to be dialed from the location to activate. This feature can be used from a Shared Call Appearance alternate location or a Clearspan Anywhere location.
*13	Location Control Deactivation	Deactivates a location. The feature access code has to be dialed from the location to deactivate. This feature can be used from a Shared Call Appearance alternate location or a Clearspan Anywhere location.
#80	Make Outgoing Call as Call Center	Allows users working as call center agents to make calls using a call center phone number. Users can thus override the default setting configured by the administrator.
#81	Make Personal Outgoing Call	Allows users working as call center agents to make calls using their own phone number. Users can thus override the default setting configured by the administrator.
*60	Music On Hold Per-Call Deactivation	Deactivates the Music On Hold service for the current calls.
#70	Night Service Activation Manual Override	Activates Night Service for a specified call center at the time of activation. Calls incoming to the queue are provided with the Night Service Manual Override announcement and transferred to the queue configured for the regular Night Service. The queue remains in that state until the Night Service Manual Override service is deactivated.
#71	Night Service Deactivation Manual Override	Deactivates Night Service Manual Override and the call center returns to its configured behavior.
*610	No Answer Timer	Sets the numbers of rings before No-Answer handling is applied to the Voice Messaging, Third-Party Voice Mail Support, Call Forwarding No Answer, Call Forwarding No Answer To Voice Mail, and Sequential Ringing services.

Code	Name	Definition
*71	Per Call Account Code	Charges a call to an account code assigned to the user.
*50	Push to Talk	Provides an intercom-like functionality where the user can call another party and be instantly connected.
*75	Speed Dial 100	Calls the two-digit speed dial number.
*74	Speed Dial 8	Calls the two to nine-digit speed dial number.
*47	Sustained Authorization Code Activation (calls unlocking)	Unlocks user's calls. When the user is required to provide authorization codes for outgoing calls, this code allows them to "unlock" this requirement. Having unlocked code activation, the user is no longer prompted for an authorization code and their calls proceed without interruption.
*37	Sustained Authorization Code Deactivation (calls locking)	Locks user's calls. When the user dials this feature access code, the services that require authorization codes for outgoing calls return to their normal behavior and prompt the user for an authorization code.
*86	Voice Mail Retrieval	Allows users to retrieve Clearspan and third-party voice mail.
*62	Voice Portal Access	Allows users to access their Voice Portal.



Appendix C - Troubleshooting

The following are common problems associated with the phone and possible solutions.

Problem	Possible Solution(s)
Network Disconnected message	<p>The Network Disconnected prompt appears on the display and the telephone status lamp turns on if phone is not properly connected to the network. The phone also displays the default time and date of 12:00 am Jan 1st, 2005 or the equivalent. Check that the cables are tightly connected to the phone and to the wall jack. The phone should automatically detect when it is reconnected and will display the "Network Connected" prompt for a few seconds.</p> <p>However, if changes have been made to your phone's network settings, you may need to restart your phone.</p> <p>Contact your system or network administrator for assistance.</p>
Why is my display blank?	<p>Ensure that power is being provided to your phone. If your network does not provide inline power over Ethernet, you can obtain an additional accessory, the Aastra PoE (Power over Ethernet) inline power supply, to provide power over Ethernet locally to your phone.</p> <p>See the section "Connecting to the Network and to Power" in the <i>Aastra Model 6757i CT Installation Guide</i> for details.</p>
Why is my speaker not working?	<p>If you press the Speaker key and the speaker lamp flashes and you do not hear dial tone through the speaker, the Set Audio option in the phone's Options list has been set up for headset use.</p> <p>Press the Speaker key a second time and if the lamp goes out, the phone has been set up to be used only with a headset or handset. If the lamp stays on steady and you hear dial tone, the phone has been set up so that you can alternate between the speaker and the headset by pressing the Speaker key.</p>
Why can't I get dial tone?	<p>Check for any loose connections and that the phone has been installed properly. For installation instructions, refer to the "Installation and Setup" section in the <i>Aastra Model 6757i CT Installation Guide</i> provided with your phone.</p>
Why doesn't my phone ring?	<p>Check the ring volume on your phone. It may be turned down or turned off. To adjust the ringer volume setting, press the volume key when the phone is on-hook and idle.</p>
Why is the lamp not coming on when I have a new Voicemail Message?	<p>Your phone system or service provider must provide a Visual Message Waiting service for this function to work. Contact your system administrator.</p>
Why is my handset not working?	<p>Check to ensure that the handset cord is fully connected to both the phone and handset. The handset connection on the bottom of the phone is marked with the handset symbol .</p>
How do I find the IP address of my phone?	<p>This setting is in the Options list. See IP and MAC Addresses.</p>
How do I change my User Password?	<p>This setting is in the Options list. See User Password.</p>

Problem	Possible Solution(s)
Why does my phone display the “No Service” message?	The phone displays the “ No Service ” message if the SIP settings have not been set up correctly. You can still use the phone but it is not registered with the Registrar. For more information about registering your phone, see your system administrator.
How do I restart the IP phone?	This setting is in the Options list. See Restart Phone .

Index

6

6757i CT IP phone	
base station keys and functions	24

A

administrator menu	36, 53
answer call	58
automatic callback	27
automatic hold	64

B

backlight	110
handset	110
backlight option	41
barge-in	73
base station	119
privacy	113
battery	
handset	94
blank display	137
bottom softkeys	25, 28

C

call	
end	61
receive	57
call forward	35, 37
call forwarding	71
call park	70
call pickup	70
directed	72
call return	72
call timer	32, 109
call waiting	72
callers list	
delete entry	78
dial from	76
display	76
functions	76
handset	100
missed calls	77, 78
calls	
answer	113
place	57
receive on handset	113
transfer	65, 66
conference	68
handset	117
configuration update	21
connected call	59
connected call display	59

connection	
handset and headset	18
contrast level	41
custom name	108

D

date format	48
daylight savings time	47
Details softkey	80
directed call pickup	72
barge-in	73
feature interactions	73
directory	
handset	98
display	35
display options	40

E

end call	61
Expansion Modules	125

F

feature access codes	28
features	25
firmware info	35, 51

H

handset	18
add record to directory	98
battery charge	94
battery indicator	95
callers list	100
conference	117
custom name	108
dial number	113
edit directory	97
feature keys	96
idle display	91
intercom	106
key lock	109
language	107
live dialpad	113
options list	105
pair	119
pairing	111
privacy	113
private	115
public	114
ring tone	107
silent alert	110
timer	109
transfer	117

vibrate	109
volume control	95
handset not working.....	137
handset options list	
access.....	105
handset	105
select.....	106
handset pair.....	119
handset redial list	
redial from	103
handset unpair	121
handset volume.....	31
headset.....	19, 44, 94
place and receive calls	61
headset connection.....	18
headset volume.....	31, 44
headset/speaker	44
hold	
retrieve	64

I

icons	
line/call appearance.....	30
ignore call	58
Ignore softkey.....	58
IP address	35, 50, 137

K

key description	24
key lock.....	109

L

labels	25
lamp	
hard keys	30
message waiting indicator	31
speaker	31
LAN port	35, 51
language.....	35, 50
last number redial.....	79
line/call appearance	
status lamp.....	30
line/call appearance icons	30
line/call appearance softkeys	30
live dialpad.....	35, 43
handset	113
lock phone	54

M

M670i.....	125
M670i Expansion Module	126
M675i.....	125
M760i Expansion Module	127
MAC address	35, 50
message waiting	137
message waiting indicator	31

missed calls indicator	77, 78
More softkey	28
mute	32
Mute key	32
MWI.....	31

N

network disconnect message	137
network disconnected	23
no dial tone	137
no service.....	23, 138
no voicemail lamp.....	137

O

options list	35
access	36
administrator menu	53
call forward	37
phone lock	54
phone status.....	50
preferences	39
restart phone	53
user password.....	53

P

pair handset.....	119
Pair softkey	120
park	70
Park softkey	70
password	53
PC port.....	35
PC Port	51
phone lock	36, 54
phone status	35, 50
firmware info.....	35
IP and MAC address.....	35
LAN port	35
PC port	35
pickup.....	70
Pickup softkey.....	64
place call	57
power	137
power supply	137
preferences.....	35
display.....	35
display options.....	40
language.....	35, 50
live dialpad.....	35, 43
set audio.....	35, 44
speed dial edit	35, 43
time and date.....	35, 46
tones	35, 39
privacy.....	113
base station	113
handset.....	113
Private softkey	114
Public softkey.....	114

R

receive call.....	57
Redial key.....	79
redial list.....	79
delete entry	79, 103
view entry	80
Remove softkey	122
replication bandwidth requirements	
Clearspan.....	63
restart phone	36, 53
retrieve held call	64
ring tone.....	39
ring volume.....	137
ringer volume	31

S

SCA	85
set audio	35, 44
set date	49
set time option	49
shared call appearance	85
silent alert	110
softkeys	
call appearance	30
line appearance	30
speaker.....	44, 137
place and receive calls	60
speaker lamp.....	31
speaker volume.....	31
speaker/headset	44
speed dial 100.....	84
speed dial 8.....	84
speed dial edit	35, 43
speeddial	80
edit.....	80
on unassigned key.....	83
startup sequence	21
state-based softkeys	29
status icons	30

status lamp	30
stuttered dial tone	75

T

time and date.....	35
time format.....	47
time server	46
time zone	48
timer	32
tone sets	39
Tones	35
transfer	65, 66
handset.....	117

U

unlock phone	54
unpair handset.....	121
user password	36, 53, 137

V

vibrate	109
visual message waiting	137
volume	
handset.....	31
headset.....	31
ringer.....	31
speaker.....	31
volume control	
handset.....	95
Volume key	31

X

xfer	65, 66
cancel	67
XML keys	87

