

Mitel Gateway Installer V1.0

12/2021

AMT/PTD/PBX/0007/1/1/EN

USER GUIDE



Warning

Although the information contained in this document is considered as pertinent, Mitel Networks Corporation (MITEL ®) cannot guarantee the accuracy thereof.

The information may be changed without notice and should never be interpreted as a commitment on the part of Mitel, its affiliates or subsidiaries.

Mitel, its affiliates and subsidiaries shall not be held liable for any errors or omissions made in this document. This document may be reviewed or re-edited at any time in order to add new information.

No part of this document may be reproduced or transmitted in any form whatsoever or by any means - be it electronic or mechanical - no matter the purpose thereof, without the prior written consent of Mitel Networks Corporation.

© Copyright 2021, Mitel Networks Corporation. All rights reserved.

Mitel ® is a registered trademark of Mitel Networks Corporation.

Any reference to third-party trademarks is made for information only, and Mitel does not guarantee the ownership thereof.

Content

- 1 OVERVIEW2
- 2 UPDATE / VM OR NETWORK MANAGEMENT3
- 3 SCANNER TOOL3

1 OVERVIEW

The Mitel GW Installer is a tool to manage your EX Controller, GX Gateway and TA.

It runs on Windows 10 with .NET 5.0 . You must install the .NET Desktop Runtime 5.0.X available at <https://dotnet.microsoft.com/download/dotnet/5.0> .

The tool is available in French and English depending on the language of the browser used.

The Mitel GW Installer tool allows the following actions:

- Update of EX / GX / TA systems,
- Network configuration,
- Management of VMs integrated into the EX Controller.

The tool is available in the SWDL area at Mitel.com.

Mitel GW Installer for EX/GX/TA - V1.2

Web Server

URL

http://10.140.100.100/

Server is running ...

Port

8080

Change port

Login

exdeployuser

Disable authentication

Password

exdeploypassword

Change password

EX Controller / GX Gateway / TA

FQDN / IP Address

10.140.100.1

Refresh

Clear

Scan new hardware (snmpv1)

SNMP version

V3

Community

public

SNMPv3 login

mv5000

SNMPv3 password

8888888888888888

Gateway

EX

EX Controller - 040000000000

Firmware

Dgw 48.2.2567

MediatricSentinel_Dgw_48.2.2567_STNL-MT-D20

Upgrade

Deploy

Network interfaces

Name	Interface	Type	IP Address	Gateway	State	VLAN
ExLan	eth2-5	IpStatic	10.140.100.2	10.140.100.1	Active	disable
Uplink	eth1	IpDhcp			LinkDo...	disable
Default ...	-	IpStatic	10.140.100.29			

Virtual machines

Name	State	Start	Cpu	RAM(Mo)	Storage(Go)	MAC Address	Network	Format	VNC Id
MIV5000	Started	Auto	1	1024	10	12:d9:ce:0e:...	Virtio	Qcow2	-1
Cloudlink	Started	Auto	1	1024	13	12:48:4b:0e:...	Virtio	Qcow2	-1

Important note for URL in the “Web Server” box:

- The URL at the top must use an IP address reachable by the EX/GX/TA (it depends of the number of active network cards in your system). Use the dropdown to change if needed.

2 UPDATE / VM OR NETWORK MANAGEMENT

- Enter the IP address or FQDN of the gateway in the “EX Controller / GW Gateway / TA” box
- Select the correct SNMP release and the associated SNMP credential (community for SNMPv1/v2c or the SNMPv3 Login/Password for SNMPv3)
- Click the **Refresh** button
- The EX/GX/TA information are displayed:
 - **To upgrade :**
If multiple target releases are available use the dropdown to select the desired release.
Click on the **Upgrade** button.



Note : Only the last release is available by default, if you want to add your own EX/GX/TA release copy the firmware to the correct “www/firmwares” directory.

- **To deploy a new MiVoice 5000 system**, use the **Deploy** button (EX only)
Copy the disk image (.img) file to “www/images” before starting the deployment. They are not embedded by default for size consideration.



Note : Extract the MiVoice 5000 disk from the EX image available at SWDL server (example : EX_A5000_R7.1_SP2_C100.zip).

For the first deployment you must connect to the EX using the eth2-5 interface.

3 SCANNER TOOL

A scanner is also available :

- Enter the range start / end of your subnet to scan
- Click **Start** to launch the scan .
- Use **Stop** to cancel the current scan.



Note : All servers responding in SNMPv1 will be listed.