

Mitel Revolution

Configuration Guide for Mitel MiVoice Connect

V2019.3

January 2020



NOTICE

The information contained in this document is believed to be accurate in all respects but is not warranted by Mitel Networks™ Corporation (MITEL®). Mitel makes no warranty of any kind with regards to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information is subject to change without notice and should not be construed in any way as a commitment by Mitel or any of its affiliates or subsidiaries. Mitel and its affiliates and subsidiaries assume no responsibility for any errors or omissions in this document. Revisions of this document or new editions of it may be issued to incorporate such changes.

No part of this document can be reproduced or transmitted in any form or by any means - electronic or mechanical - for any purpose without written permission from Mitel Networks Corporation.

TRADEMARKS

The trademarks, service marks, logos and graphics (collectively "Trademarks") appearing on Mitel's Internet sites or in its publications are registered and unregistered trademarks of Mitel Networks Corporation (MNC) or its subsidiaries (collectively "Mitel") or others. Use of the Trademarks is prohibited without the express consent from Mitel. Please contact our legal department at legal@mitel.com for additional information. For a list of the worldwide Mitel Networks Corporation registered trademarks, please refer to the website: <http://www.mitel.com/trademarks>.

Mitel Revolution Configuration Guide for Mitel MiVoice Connect January 2020

®,™ Trademark of Mitel Networks Corporation
© Copyright 2020 Mitel Networks Corporation
All rights reserved

| | |
|---|----|
| Introduction | 5 |
| About this Guide..... | 5 |
| Documentation | 5 |
| Configuration Overview | 6 |
| Mitel Revolution Overview..... | 7 |
| MiVoice Connect Communication Manager Configuration | 8 |
| Configuring SIP Users..... | 8 |
| Creating SIP Profiles | 8 |
| Creating SIP Servers | 9 |
| Creating SIP Trunks | 11 |
| Here's what you need to know | 11 |
| Create Trunk Groups..... | 11 |
| Create Individual SIP Trunks..... | 14 |
| Configuring Switch Settings | 15 |
| Configuring Emergency Numbers to Monitor | 16 |
| Enabling Phone API for User Accounts..... | 16 |
| Authorized Server..... | 17 |
| Configuring 6900 IP phones..... | 18 |
| Mitel Revolution Configuration | 19 |
| Installation and Configuration..... | 19 |
| Network Requirements..... | 20 |
| Firewall Requirements/Port Usage..... | 20 |
| Multicast Requirements: | 20 |
| Configuring the Communication Manager..... | 21 |
| SIP Activator Configuration | 21 |
| Creating SIP Lines..... | 22 |
| Authenticating the SIP lines..... | 23 |
| Creating Notifications | 24 |
| Configuring Emergency Number | 28 |
| Disable Using Mitel Call Monitoring..... | 28 |
| Triggering Emergency Notification | 29 |

| | |
|---|----|
| Third-Party Troubleshooting..... | 31 |
| Mitel Revolution Technical Support..... | 31 |

Introduction

The Mitel Revolution interface provides a way to centrally manage creating and sending notifications. This interface can be used to send emergency and non-emergency notifications such as Live or Stored Audio Notifications, Weather Alerts, AMBER Alerts, IPAWS Alerts, and Text Messages to supported devices.

Notifications can be sent to endpoints such as Mitel XML IP Phones; iOS and Android smartphones; Instant Messaging clients, SMS clients, and Mitel Revolution Desktop Notification Client; Paging Relay; Legacy Paging and Analog Systems; IP Speakers; Clocks; Message Boards; Social Media accounts; and more. Visit us on the web at [Mitel Revolution Web Help](#) to learn more about Mitel Revolution product.

Users can quickly send notifications and get real-time status and view scheduled notifications and a list of recently sent notifications from their dashboard. Users can also view sent notification details to see which endpoints received notifications. They can manage notifications from a single location, viewing all notifications, endpoints assigned, and the type of notification.

About this Guide


This document describes the configuration of Mitel Revolution for Mitel MiVoice Connect.

Documentation


- Mitel MiVoice Connect Planning and Installation Guide: The Mitel MiVoice Connect Planning and Installation Guide describes how to plan and install a MiVoice Connect system. The Installation Guide can be downloaded from [Mitel MiVoice Connect Planning and Installation Guide](#).
- Mitel MiVoice Connect System Administration Guide: The Mitel MiVoice Connect System Administration Guide explains how to use Connect Director to configure, administer, and maintain all features of the Mitel MiVoice Connect system. The Mitel MiVoice Connect System Administration Guide can be downloaded from [Mitel MiVoice Connect System Administration Guide](#).
- Mitel Revolution webhelp: The Mitel Revolution webhelp contains the information required to install Mitel Revolution, initial setup, feature configuration, maintenance and troubleshooting, end-user tasks, system monitoring, and upgrade related details. You can access the webhelp at [Mitel Revolution Web Help](#).

Overview

The Mitel Revolution interface provides a Dashboard for quick access to frequently used notifications, status of send notifications, and scheduled notifications. The Dashboard can be configured for each user. Users having the required permission can maintain their dashboard themselves. Access to configuring the Revolution modules is denied to all user roles except the administrator.

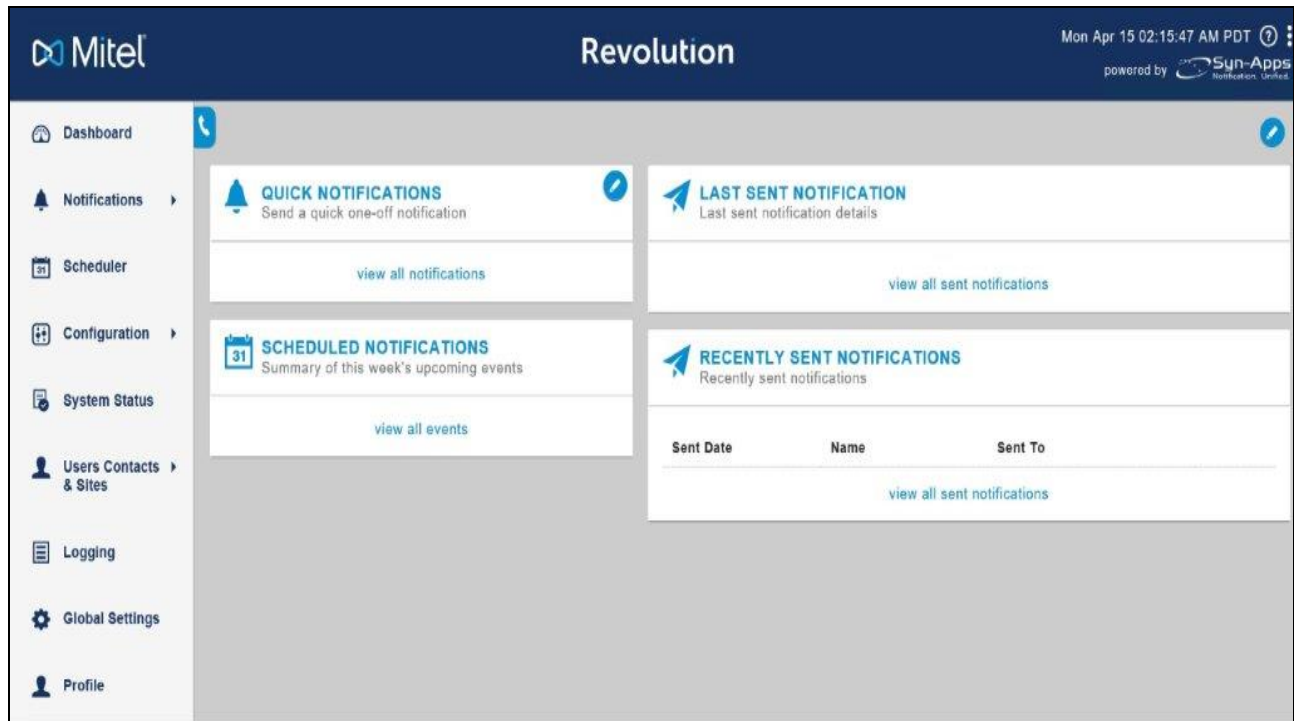

Mitel Revolution Overview

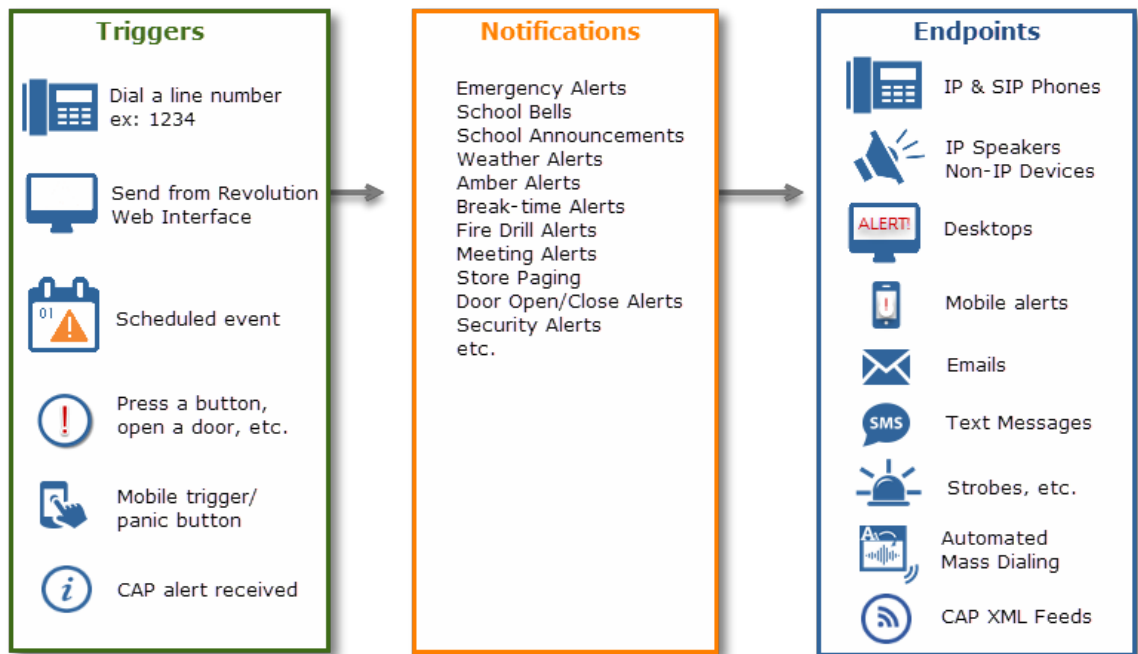

Creating notifications involve the following three main steps:

- Assigning the triggers for sending notifications.
- Creating the content (image, audio, or text) to be sent.
- Assigning the endpoints that receive the notifications.

For more information about creating notifications on the Mitel Revolution interface, see [Creating Notifications](#).

MiVoice Connect Communication Manager Configuration

This section outlines the steps to configure a Mitel MiVoice Connect Communication Manager for Mitel Revolution.

The user must configure the general MiVoice Connect settings. These configuration settings include the following:

- Creating generic SIP profiles and SIP servers – See [Configuring SIP Users](#)
- Setting switches – See [Creating SIP Trunks](#)

Configuring SIP Users

This section describes how to create a SIP profile and a SIP server in the MiVoice Connect Communication Manager.

Creating SIP Profiles

Perform the following steps to create a new SIP profile:

1. Click **Administration > Appliances/Servers > Integrated Servers > SIP Profiles**.
2. Click **New** to create a new SIP Profile.
3. In the **settings** tab, enter the values for the following fields:

| Field | Value |
|-------------------|---|
| Name | Enter a descriptive Name for the profile. |
| User agent | Used to identify devices covered by this profile. This field is not used for SIP servers. |
| Priority | Leave at default of 100. |
| Enable | Select the check box to make the profile available for use. |

- a. **System parameters** – List of device characteristics and their default settings.
 - b. **Custom parameters** – (Optional) Additional device settings or overrides for default settings listed in System parameters field.
4. Click **Save**.

SIP Profiles

| NAME | ENABLED | USER AGENT | PRIORITY |
|------------------------------|-------------------------------------|------------------------|----------|
| Microsoft Exchange | <input checked="" type="checkbox"/> | . | 50 |
| Mitel Revolution SIP Profile | <input checked="" type="checkbox"/> | Mitel Revolution Agent | 100 |

Mitel Revolution SIP Profile

GENERAL

Name: Mitel Revolution SIP Profile

User agent: Mitel Revolution Agent

Priority: 100

☒ Enable

System parameters:

```
acceptMWI=notify
Accept302=sip
HoldSupport=no
AddrSupport=diversion
EnableSymmetricDtmf=yes
UseSipProxyOut=yes
OAEMedialessPort=8600
AllowedCodecs=PCMU/8000
OptionsPing=1
```

Creating SIP Servers

Perform the following steps to create a new SIP server:

1. Click **Administration > Appliances/Servers > Integrated Servers > SIP Servers**.
2. Click **New**.
3. Enter the values for the following fields:
 - a. **Name** – Enter a descriptive **Name** for the server.
 - b. **Site** – From the **Site** drop-down list, select an appropriate site location.
 - c. **Protocol** – From the **Protocol** drop-down list, select TCP. (We recommend TCP, but UDP is also acceptable.)
 - d. **Host (name / address / domain)** – Enter Mitel Revolution server IP address.
 - e. **Override default port** – Leave the field blank.
 - f. **Allow external voice mail for Extension-Only user** – By default, the field is disabled. Do not change the selection.
 - g. **Allow fax redirect to this server** – By default, the field is disabled. Do not change the selection.
 - h. **Extension** – System automatically assigns next available number. You can enter a different extension.
 - i. **Assigned user group** – Select appropriate group that has access to the necessary trunks. For example, Executives.

- j. **SIP Profile** – Select the new SIP profile you created.
- k. **Digest Authentication** – By default, **None** is selected. Do not change the selection.
- l. **Username** – Leave the field blank.
- m. **Password** – Leave the field blank.

Mitel Connect Director Help | admin

Search

ADMINISTRATION

- Users
- Trunks
- Telephones
- Appliances/Servers
 - Platform Equipment
 - Spare Equipment
 - Integrated Servers
 - SIP Servers**
 - SIP Profiles
 - Options
- Features
- System

SIP Servers NEW | COPY | DELETE | BULK DELETE

| | NAME | EXTENSION | SITE | HOST | OVERRIDE DEFAULT PORT | PROFILE NAME | PROTOCOL | VOICE MAIL | FAX |
|-------------------------------------|-----------------|-----------|-------|---------------|-----------------------------|-----------------|----------|------------|-----|
| <input checked="" type="checkbox"/> | Mitel Revolu... | 200 | Site1 | 10.211.20.111 | | Mitel Revolu... | TCP | | |

Page 1 of 1 Rows / page: 50 View 1 - 1 of 1

Mitel Revolution SAVE RESET CANCEL

GENERAL

Name:

Site:

Protocol:

Host (name / address / domain):

Override default port:

☐ Allow external voice mail for Extension-Only user

☐ Allow fax redirect to this server

Extension: SHOW REFERENCES

Assigned user group:

SIP profile:

Digest authentication:

Username:

Password: (6 - 26 characters)

Creating SIP Trunks

Here's what you need to know

- SIP Trunks are utilized to call analog paging systems.
- Trunks cannot be used for inter-site calls.
- Each site must have its own Trunk Group configured with at least one SIP Trunk, or as many trunks as the desired amount of simultaneous calls to the Mitel Revolution Server. *For example: If there are two trunks in a trunk group for a specific site, then two groups can be called at the same time.*


Notes:

- Allocating SIP Trunk ports on Mitel switches also requires valid Mitel SIP Trunk licenses. Contact your Mitel representative for details.
- Mitel trunk groups only support Static IP Addresses for Individual Trunks.

Create Trunk Groups

Perform the following steps to create a SIP trunk group:

1. Click **Administration > Trunks > Trunk Groups > Trunk Groups**.
2. Click **New**.

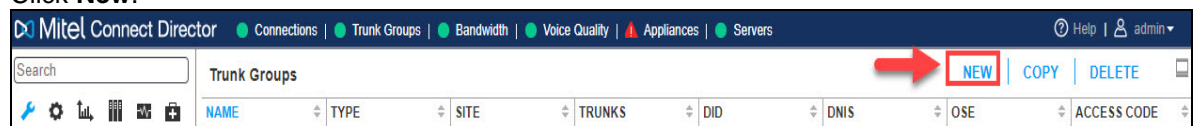

3. In the **GENERAL** tab, enter the values for the following fields:
 - a. **Name** – Enter a descriptive **Name** for the trunk. (*Our example uses Syn- Apps Trunk Group.*)
 - b. **Site** – From the Site drop-down list, select an appropriate site location.
 - c. **Trunk type** – From the **Protocol** drop-down list, select **SIP**.
 - d. **Language** – From the drop-down list, select the appropriate language.
 - e. **Enable SIP info for G.711 DTMF Signaling** – Select the check box to enable this option.
 - f. **Profile** – From the drop-down list, select **Default Tie Trunk**.
 - g. **Digest Authentication** – By default, **None** is selected. Do not change the selection.
 - h. **Username** – Leave the field blank.
 - i. **Password** – Leave the field blank.

Revolution Trunk Group

SAVE RESET CANCEL

GENERAL INBOUND OUTBOUND

Name: Revolution Trunk Group

Site: Headquarters ▾

Trunk type: SIP ▾

Language: English(US) ▾

☐ Enable SIP info for G.711 DTMF signaling

Profile: Default Tie Trunk ▾

Digest authentication: -None- ▾

Username:

Password:

(6 - 26 characters)

Note:

4. In the **INBOUND** tab, enter the values for the following fields:
 - a. **Number of digits from CO** – Enter a number that matches your system extension length. (Mitel Revolution does not use this setting.)
 - b. **DNIS** – By default, the field is disabled. Do not change the selection.
 - c. **DID** – By default, the field is disabled. Do not change the selection.
 - d. **Extension** – Select the check box to enable this option. Select **Translation Table** check box and keep default of None.
 - e. **Tandem trunking** – If your Mitel Revolution license includes SIP Notifier, select the check box to enable trunking; otherwise leave disabled.
 - f. **User group** – Select group that contains analog paging system lines, if applicable.
 - g. **Prepend dial in prefix** – Leave the field blank.
 - h. **Destination** – User the default value or select one of your choice.

Revolution Trunk Group

SAVE RESET CANCEL

GENERAL INBOUND OUTBOUND

Number of digits from CO: 2

☐ DNIS [Edit DNIS](#)

☐ DID [Edit DID Range](#)

☐ Extension

☒ Translation table: <None> ▾
 ☐ Prepend dial in prefix:
 ☐ Use site extension prefix

☐ Tandem trunking

User group: Executives ▾

Prepend dial in prefix:

Destination: 700 : Default

5. In the **OUTBOUND** tab, enter the values for the following fields:
 - a. **Outbound** – Select the check box to enable outbound feature.
 - b. **Network call routing** – Specify appropriate access code and local area code.
 - c. **Trunk services** – Access to the Mitel Revolution server is via Off System Extensions (OSE). Therefore, most trunk services can be disabled except:

- i. Local
- ii. Caller ID not blocked by default
- iii. Enable caller ID name

Mitel Revolution Trunk Group SAVE RESET CANCEL

GENERAL INBOUND **OUTBOUND**

☒ Outgoing:

Network call routing:

Access code:

Local area code: *must be between 2 and 4 digits*

Additional local area codes: [Add](#)

Nearby area codes: [Add](#)

Billing telephone number: (e.g. +91 11-2419-8000)

Trunk services:

☒ Local

☐ Long distance

☒ National mobile

☒ International

☐ Enable original caller information

☒ Caller ID not blocked by default

☒ Enable caller ID name (Please confirm with the carrier(s) or the service provider(s) on how the end-to-end caller name is delivered)

When Site Name is used for the Caller ID, overwrite it with:

☒ Emergency

Trunk digit manipulation:

☒ Dial local numbers in national form

☐ Dial in E.164 format

Prepend dial out prefix:

Translation table: <None> [Edit OSE](#)

6. Configure OSE:

☒ Emergency

Trunk digit manipulation:

☒ Dial local numbers in national form

☐ Dial in E.164 format


Prepend dial out prefix:

Translation table: <None> [Edit OSE](#)

OSE defines the SIP extension range that can be configured as SIP lines in Mitel Revolution SIP Activator. This can be any extension that is currently not used on the Mitel system.

- a. Click **Save** before proceeding to set OSE.
- b. Click the **Edit OSE** link in the Trunk digit manipulation section.

- c. Click **New**.



- d. From the **Trunk Group** drop-down list, select the trunk group you created and define an **extension range** within your Mitel PBX extensions.

Trunk group: Mitel Revolution Trunk Group

From: 201


To: 210

- e. Click **Save**.

Create Individual SIP Trunks

Perform the following steps to create an individual SIP trunk:

1. Click **Administration > Trunks > Trunks**.
2. Click **New**.

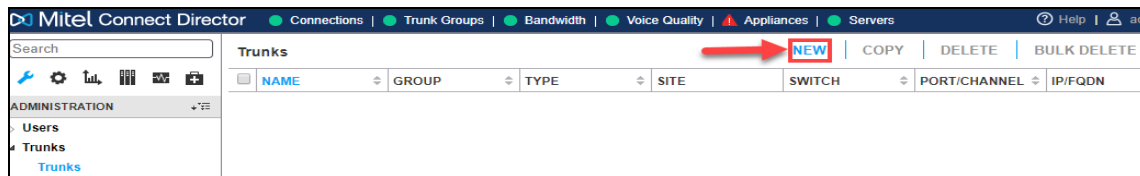

3. Enter values for the following fields:
 - a. **Site** – From the drop-down list, select the appropriate **Site**.
 - b. **Trunk group** – From the drop-down list, select the appropriate group.
 - c. **Name** – Enter a descriptive **Name** for the trunk.
 - d. **Switch** – From the drop-down list, select a **Switch** that is configured for this site.
 - e. **IP address or FQDN** – Enter the Mitel Revolution server IP address.

Site: Headquarters

Trunk group: Revolution Trunk Group (SIP)

Name: Syn-apps (1)

Switch: SG90_HQ

IP address or FQDN: 10.211.46.72

Configuring Switch Settings

Perform the following steps to configure a switch:

1. Click **Administration > Appliances/Servers > Platform Equipment**.

| NAME | DESCRIPTION | SITES | SERVER | DATABASE SERVER | TYPE | IP ADDRESS | SECONDARY ADDRESS | MAC ADDRESS |
|--------------|-------------|--------------|--------------|-----------------|----------|--------------|-------------------|-------------------|
| collab | SoftSwitch | Site1 | Headquarters | Headquarters | vCollab | 10.211.18.68 | | 00-50-56-93-F7-AF |
| Headquarters | SoftSwitch | Headquarters | Headquarters | Headquarters | WinHQ | 10.211.18.55 | | |
| site | SoftSwitch | Site1 | Headquarters | Headquarters | vPhone | 10.211.18.69 | | 00-50-56-93-06-19 |
| Site1 | SoftSwitch | Site1 | Headquarters | Headquarters | WinDVS | 10.211.18.57 | | |
| Site2 | SoftSwitch | Site1 | Headquarters | Headquarters | LinuxDVS | 10.211.18.66 | | 00-50-56-93-EB-3A |

2. Click the **Name** of the switch to configure.
3. Define one of the **Port Type** settings from the available ports to **100 SIP Proxy**.

G90: SG90_HQ - 10.211.45.70

GENERAL SWITCH

IP phone + SIP trunks = Total
15 10 25 of 30 (100 SIP proxy ports)

☐ Enable Jack based Music on hold
Jack based Music on hold gain: 0 dB (-49 to 13)

☐ Use analog extension port as DID trunks

| Port | Port Type | Trunk Group | Description | Jack Number | Tx Gain (dB) | Rx Gain (dB) | Location |
|------|---------------|-------------|-------------|-------------|--------------|--------------|----------|
| 1 | 100 SIP Proxy | P01 | | 0 | 0 | 0 | |
| 2 | Available | P02 | | 0 | 0 | 0 | |
| 3 | 5 IP Phones | P03 | | 0 | 0 | 0 | |
| 4 | 5 SIP Trunks | P04 | | 0 | 0 | 0 | |
| 5 | 100 SIP Proxy | P05 | | 0 | 0 | 0 | |

FILL DOWN

4. Select the desired number of SIP trunks from the ports available and click Save. Each port designated as a SIP trunk port type supports 5 individual SIP trunks.

G90: SG90_HQ - 10.211.45.70

GENERAL SWITCH

IP phone + SIP trunks = Total
15 10 25 of 30 (100 SIP proxy ports)

☐ Enable Jack based Music on hold
Jack based Music on hold gain: 0 dB (-49 to 13)

☐ Use analog extension port as DID trunks

| Port | Port Type | Trunk Group | Description | Jack Number | Tx Gain (dB) | Rx Gain (dB) | Location |
|------|---------------|-------------|--------------|-------------|--------------|--------------|----------|
| 1 | 5 IP Phones | P01 | Analog trunk | 0 | 0 | 0 | |
| 2 | 100 SIP Proxy | P02 | | 0 | 0 | 0 | |
| 3 | 5 SIP Trunks | P03 | | 0 | 0 | 0 | |
| 4 | 5 IP Phones | P04 | | 0 | 0 | 0 | |
| 5 | Trunk | P05 | | 0 | 0 | 0 | |
| 6 | 5 IP Phones | P06 | | 0 | 0 | 0 | |
| 7 | 5 SIP Trunks | P07 | | 0 | 0 | 0 | |
| 8 | 100 SIP Proxy | P08 | | 0 | 0 | 0 | |

FILL DOWN

Configuring Emergency Numbers to Monitor

Perform the following steps to configure the numbers you want to monitor:

1. Click **Administration > System > Sites** [select your site] > **General**.
2. Add the numbers you want to monitor to the **Emergency Number List**. 911 is included by default in the **Emergency number list** section.
3. Use default values for the other fields.

The number is configured to the Mitel Revolution Notifier page during the next phone refresh, which occurs every 15 minutes, or you can refresh the data for the Mitel notifier from the system status. This creates a new trigger that you can now add to notifications. Create notification and select trigger corresponding to 911. Any time the number being monitored is dialed; the notification is triggered.

For more details about configuring emergency number and triggering notification in the Mitel Revolution interface, see [Creating Notifications](#).

Enabling Phone API for User Accounts

For an IP Phone to receive notifications, the associated user account must have the Allow Phone API checkbox enabled. If this setting is not enabled, the IP phone will not be able to receive any notifications.

1. Click **Administration > Users > Users**.
2. Click on a **username**.
3. In the **Telephony** tab, select the **Enable phone API (PAPI)** check box.

The screenshot shows the configuration page for 'Extension 122: admin'. At the top, there are links for 'View Escalation Profile' and 'View Programmable Buttons', and buttons for 'SAVE', 'RESET', and 'CANCEL'. Below these are tabs for 'GENERAL', 'TELEPHONY' (which is selected), 'VOICE MAIL', 'ROUTING', 'MEMBERSHIP', 'APPLICATIONS', and 'DNIS'. The 'TELEPHONY' tab contains several settings: 'Enable handsfree mode' (unchecked), 'Enable call waiting tone' (checked), 'Trunk access code' (set to 9), 'Mailbox for recorded calls' (empty field), 'Fax support' (set to 'User - Redirect'), 'Enable video calls' (unchecked), 'Enable telephony presence' (checked), 'Enable shared call appearances' (unchecked), 'Enable use of soft phone' (unchecked), and 'Enable phone API (PAPI)' (checked). There is also a 'Standard' dropdown menu and an empty text field.

4. Click **Save**.

Authorized Server

Trusted server entries must be entered in the custom text file for each IP phone model.

IP400 series phones custom files are in `C:\Inetpub\ftproot\phoneconfig`.

| Mitel IP Phones | Custom File Name |
|-----------------|-------------------|
| 485g | custom_IP485g.txt |
| 480g | custom_IP480g.txt |
| 480 | custom_IP480.txt |
| 420 | custom_IP420.txt |


IP655 and IP5xx series phones series custom files are in `C:\Inetpub\ftproot`.

| Mitel IP Phones | Custom File Name |
|-----------------|------------------|
| 655 | swecustom.txt |
| 565 / 565g | s6ccustom.txt |
| 560g | s6gcustom.txt |
| 560 | s6custom.txt |

Rules:


- Edit each custom text file for your phones to add the Mitel Revolution server IP address as a trusted server. For example, if you have both 480g and 485g phones, add Mitel Revolution as a trusted server to both `custom_IP480g.txt` and `custom_IP485g.txt`.
- For IP400 series phones, it is not recommended to add the trusted server to the global `custom.txt` file. You should add the trusted server to each phone model's custom file.
- Place the entry on a separate line.

For **IP400 series** phones:

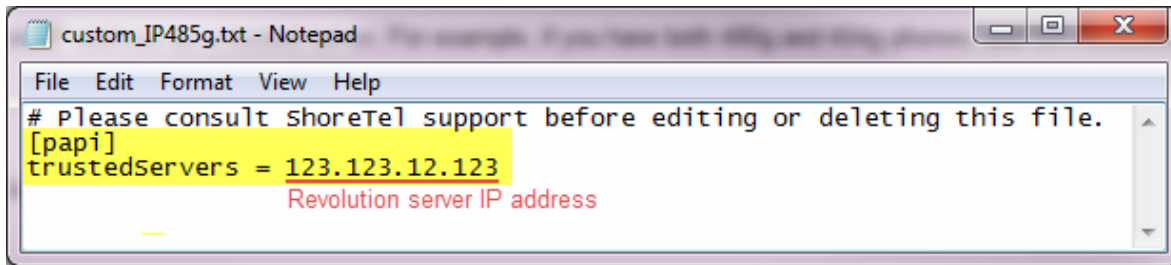

Note: Use uppercase S in servers – trustedServers.

For **IP655 and IP5xx series** phones:

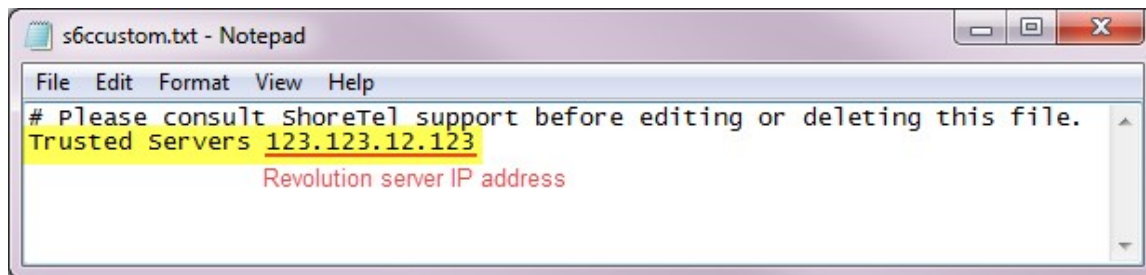

Configuring 6900 IP phones

To configure 6900 series IP phones with Mitel Revolution, add the following configuration parameters in the IP phone configuration file (*startup.cfg*, *<model>.cfg* or *<mac>.cfg*) which registers the phones on the Mitel Revolution server:

xml application post list: <<revolution server IP>>

action uri poll: http://<<revolution server IP>>/MitelRegistrar/?dn=\$\$SIPUSERNAME\$\$&ip=\$\$LOCALIP\$\$

action uri poll interval: 60

where,

- *xml application post list* is the HTTP server that is pushing XML applications to the IP phones and revolution server IP is the IP address of the Mitel Revolution server.
- *action uri poll* is the URI to be called every *action uri poll interval* seconds
- *action uri poll interval* is the interval, in seconds, between calls from the phone to the *action uri poll*. The interval between 60 and 300 seconds depending on how frequently you want the phone to register.

Notes:

- Ensure to reboot the phone after the parameters are included in the configuration file.
- The IP phones display the “**Cannot display**” error message when the Mitel Revolution server is not reachable.
- The 6900 series IP phones do not support two-way and direct two-way notification types.

Mitel Revolution Configuration

This section describes how to configure Mitel Revolution with the MiVoice Connect communication manager.

Communication with Mitel IP phones is done based on the following settings:

- Adding the Mitel Revolution server IP address as a trusted server in each phone model custom file
- Enabling Allow Phone API for users in Mitel MiVoice Connect.

If you are using Mitel Revolution SIP Activator, so you can trigger notifications by dialing an extension number, you also need to setup a SIP trunk in your Mitel communications manager.

Note: SIP Activator is required to trigger live broadcast notifications.

Refer to the [Revolution WebHelp](#) for comprehensive details on configuring Mitel and Revolution functionality. The following sections are setup requirements specific to Mitel Revolution communicating with a Mitel system.

Installation and Configuration

Refer to the following topics in the Mitel Revolution WebHelp to install Mitel Revolution on Windows Server 2008, 2012/2012r2, or 2016 and configure it with your Mitel system:

- [System Requirements](#)
- [Installation](#)
- [Configure Your Mitel Phone System](#)
- [Mitel SIP Trunk](#)

Network Requirements

Firewall Requirements/Port Usage

| Port | Description |
|---|---|
| Mitel Revolution to Mitel Connect Director | Protocol Description |
| 5060 | UDP, SIP |
| 3306, 4308 | TCP, MySQL – 3306 (Mitel v9), 4308 (Mitel v10+) |
| 20480 – 32767 | RTP, UDP |
| 2748 | TCP |
| Mitel Revolution Server to IP Phones IP Phones to Mitel Revolution Server | |
| 80 | TCP, HTTP |
| 20480 – 32767 | RTP, UDP – unicast and multicast |
| Mitel Revolution to IP Speakers and Paging Relays | |
| 80 | TCP, HTTP |
| 6789 | UDP, Mitel Revolution IP device protocol |
| 20480 – 32767 | RTP, UDP – unicast and multicast |

Multicast Requirements:

If users choose to use multicast, which is strongly suggested with over 100 endpoints, then multicast must be enabled on the network. All interfaces between the Mitel Revolution server and the destination endpoints need to have IP PIM enabled. The switches should have IGMP/CGMP enabled.

If the entire network cannot be multicast enabled or enabling multicast would require a large or recurring investment, the Mitel Revolution Paging Relay should be deployed at the remote site. This allows Mitel Revolution to send a single unicast stream over the WAN connection. The Paging Relay converts the unicast stream into a multicast stream at the remote site. See the Mitel Revolution WebHelp or contact Mitel Revolution Sales for more information. Refer to your network support or your telephony partner for the best approach for implementing multicast on your network.

Configuring the Communication Manager

Perform the following steps to configure the MiVoice Connect Communication Manager in Mitel Revolution:

1. Go to **Configuration > Notifiers > Mitel**.
2. Click **New Communications Manager**.
3. Enter a descriptive **Name** to the MiVoice connect server.
4. Enter the MiVoice Connect Server address in the **IP Address** field.
5. Enter the Mitel server port or username/password in the **Advanced Settings** section if you are not using the default Mitel server port and credentials.

Note: By default, the Mitel port is set as 4308.

Do the following to change the advanced settings:

- a. Click **Show Advanced Settings**.
 - b. Change the **Port**, **Username**, or **Password**.
6. Click **Save**.

The screenshot shows the Mitel Revolution web interface. The sidebar on the left contains the following navigation items: Dashboard, Notifications, Scheduler, Configuration, System Status, Users Contacts & Sites, Logging, Global Settings, Profile, and Logout. The main content area is titled "COMMUNICATIONS MANAGER GENERAL SETTINGS". It contains the following fields and sections:

- Name ***: MiVoice Connect 44.50
- IP Address ***: 10.211.44.50 (with a note: "A hostname or FQDN may also be used")
- Advanced Settings**:
 - Warning:** Editing advanced settings may make Revolution stop functioning properly. If you are unsure of your changes please copy down the settings before editing.
 - Port ***: 4308
 - Username ***: st_configread
 - Password ***: masked with asterisks and a toggle icon
- Hide advanced settings**: A link to collapse the advanced settings section.
- Buttons**: CANCEL and SAVE buttons at the bottom.


SIP Activator Configuration

This section describes the Mitel Revolution configurations for MiVoice Connect Communication Manager.

Creating SIP Lines

Perform the following steps to create a new SIP line:

1. Go to **Configuration > Activator > SIP**.
2. Click **NEW** and select **NEW SIP LINE**.
3. Enter a descriptive **Name** for the SIP line.
4. In the **Extension** field, enter one of the SIP line number you defined in your communications manager.
5. (Optional) Enter a numeric security code of your choosing. Security codes contain at least 3 digits. Leave the field with the default value 0 if you do not want to have a security code. Security codes can be repeated.
6. (Optional) Enter **Activator Text Title** and **Activator Text Body** text that can be used with, or in place of, a notification title and body text.
7. Click **Save**.

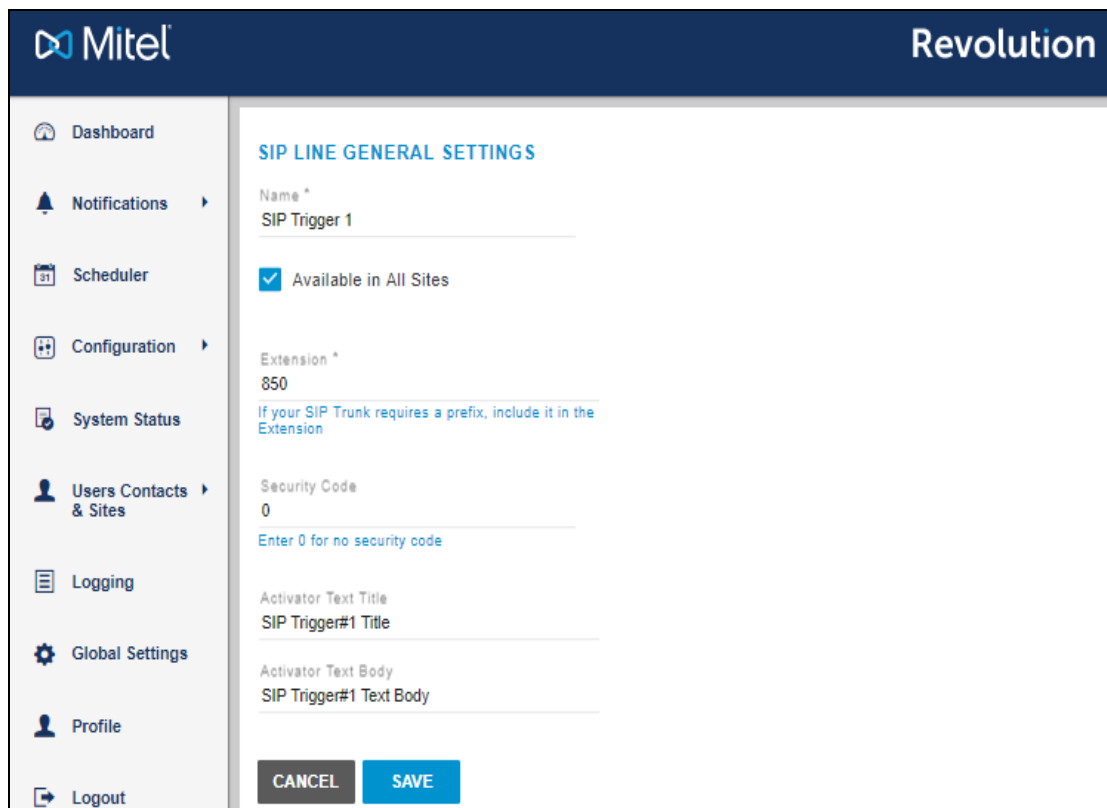

The screenshot shows the Mitel Revolution web interface. On the left is a navigation menu with icons and labels: Dashboard, Notifications, Scheduler, Configuration, System Status, Users Contacts & Sites, Logging, Global Settings, Profile, and Logout. The main content area is titled 'SIP LINE GENERAL SETTINGS'. It contains several input fields: 'Name *' with the value 'SIP Trigger 1', a checked checkbox for 'Available in All Sites', 'Extension *' with the value '850' and a note 'If your SIP Trunk requires a prefix, include it in the Extension', 'Security Code' with the value '0' and a note 'Enter 0 for no security code', 'Activator Text Title' with the value 'SIP Trigger#1 Title', and 'Activator Text Body' with the value 'SIP Trigger#1 Text Body'. At the bottom are 'CANCEL' and 'SAVE' buttons.

SIP lines entered here can be assigned to notifications as actions that trigger sending the notifications.

SIP ACTIVATOR

NEW SIP LINE

First, configure your SIP trunk and define a range of SIP lines in your phone system communications manager. Then add SIP lines here, which are made available to assign to notifications to allow end users to send those notifications by dialing extension numbers on their IP phone.

ACTIONS
SETTINGS

SIP Lines

| Name | Extension | Security Code | Notification(s) | |
|----------------------|-----------|---------------|--|--|
| Line 5100 - Campus A | 5100 | 321 | All Sites - All Hands Meeting, Daily Announcements | |
| Line 5101 - Campus A | 5101 | 321 | Site 1 - Network Outage, Prison Yard Carnage | |
| Line 5102 - Campus A | 5102 | 321 | Building 102 - Maintenance | |
| Line 5103 - Campus A | 5103 | 321 | Campus A - Weather Closure, Gen Pop Melee | |
| Line 5104 - Campus A | 5104 | 321 | Campus A - Lockdown | |
| Line 5105 - Campus A | 5105 | 321 | Campus A - Remote Gate Lock | |
| Line 5106 - Campus A | 5106 | 321 | Campus C - Fire Drill | |
| Line 5107 - Campus A | 5107 | 321 | Code Blue | |
| Line 5108 - Campus A | 5108 | 321 | | |
| Line 5109 - Campus A | 5109 | 321 | | |

Authenticating the SIP lines

If you configured authentication when you created your SIP trunk in Mitel MiVoice Connect, configure Mitel Revolution with those credentials.

- Go to **Configuration > Activators > SIP**.
- Click **Settings**.
- Leave **Inbound Digest Realm** field blank. (Mitel authenticates at the trunk level. It doesn't use realms.)
- In the **Inbound Username** field, enter the Mitel MiVoice Connect username.
- In the **Inbound Password** field, enter the Mitel MiVoice Connect password.
- Enter specific values in the following fields:

| Field | Value |
|---|---|
| Pin Timeout Seconds | This is the length of time you want to allow a user to enter a security code before the system times out and ends the call. When the time limit is met, an audio message is played letting the user know that the system has timed out and the call will end. |
| STUN Server and Outbound Proxy Servers | Leave these fields blank. They do not apply to Mitel system setup. |
| SIP Port | You only need to update this field if your Mitel server is not using the default port. |
| Trusted Servers | Leave this field blank to accept connections from any IP. Your company security policies dictate whether you need to list specific servers. |

| | |
|---------------------------------|--|
| Transport Layer Security | <p>Your company security policies dictate whether you need to enable TLS for transferring data over your network. (TLS is the successor to SSL.)</p> <p>When Enable TLS is selected, Mitel Revolution checks the servers, certificate store for a certificate with the friendly name of SIPACTIVATOR. This can be a CA-signed certificate that your company has created and installed. If the friendly name is SIPACTIVATOR, it will be used. If Mitel Revolution cannot find a certification with the friendly name of SIPACTIVATOR, a self-signed certificate is created. You can replace this certificate, if necessary. Just make sure its friendly name is SIPACTIVATOR. The certificate is used to encrypt data from Mitel Revolution going across your network.</p> |
|---------------------------------|--|

7. Click **Save**.

Creating Notifications

To create and send notifications, read through the Mitel Revolution [WebHelp](#) for an overview of how the system works and how to configure other features. The Notification Overview topic provides a description of the different types of notifications that can be created.

Perform the following steps to create a Stored Audio notification:

1. Go to **Notifications > Manage**.
2. Click **NEW NOTIFICATION**.
3. Enter the following **GENERAL** Settings:
 - a. Provide a descriptive **Notification Name**.
 - b. (Optional) From the Dashboard Icon drop-down list, select an image to display with the notification.
 - c. Select a **Priority** level for the notification.
 - d. From the **Notification Type** drop-down list, select **Stored Audio**.

The screenshot displays the 'GENERAL' settings for a notification. The 'Notification Name' is 'Fire Drill' and the 'Notification Type' is 'Stored Audio'. The 'Activation Type' is 'Iteration' with 3 iterations and a repeat interval of 60 seconds. The 'Priority' is set to 5. The 'Dashboard Icon' is 'fire.png'. A red arrow points from the 'fire.png' icon in the settings to the 'Fire Drill' notification card in the 'QUICK NOTIFICATIONS' section.

GENERAL
Notification level settings

Notification Name *
Fire Drill

Notification Type
Stored Audio

Activation Type
Iteration

Iterations
3

Repeat Interval (seconds)
60

Priority
5


Dashboard Icon
fire.png

QUICK NOTIFICATIONS
Send a quick one off notification

Fire Drill
Fire Drill

[view all notifications](#)

4. Click the **TRIGGERS** settings and enter the following values:
 - a. From the **Activator** drop-down list, select **SIP Activator**.
 - b. From the Trigger drop-down list, select the SIP line you want to use.

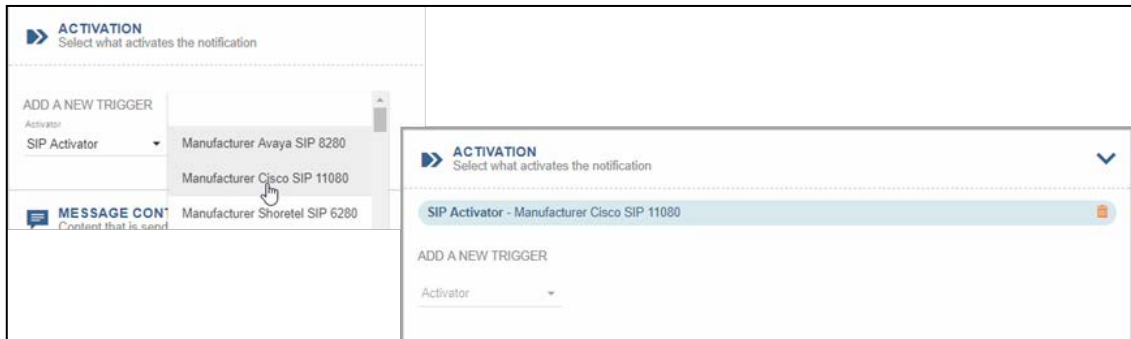

5. Click the **Message Details** settings and enter the following values:
 - a. Set **Caller ID** to Show.
 - b. Select an **Audio tone** or **prerecorded message** from the **Stored Audio** drop-down list. Repeat the process to select additional audio files, if necessary. Audios play in the order listed. Drag and drop files to rearrange the order.
 - c. Set the **Volume** for the notification. This volume overrides the volume set on the endpoint receiving the notification, such as a phone or speaker.
 - d. (Optional) Select an image from the **Stored Images** drop-down list to send with the notification. You can repeat this step to select an additional image, if desired.
 - e. Choose Font Color for the notification fonts.
 - f. Enter a **Title** for the notification.
 - g. Enter the **content** of your notification in the **Body**.
 - h. Leave '**Clear notification...**' **unchecked**. (Checking 'Clear notification...' removes the message content from a phone endpoint display once the selected audio files finish playing).

MESSAGE DETAILS
Content to send to the endpoints

Caller ID
Show

Select Audio
FV General-Test.mp3

Volume
7 ☐ Use device default

Select Image
idea_full.png

Font Color
#2222E7
Devices without font color support will use their default color

Title
Title for Notification#1

Body
Body for Notification#1

RESPONSE OPTIONS

Response 1
Short Text * Long Text *
Short Text for Notification#1 Long Text for Notification#1

+ Add Response

☒ Clear notification from display on completion

6. Select **Endpoints** to receive the notification:
Leave 'Allow users to add endpoints dynamically' at **None**.

ENDPOINT & CONTACT SELECTION
Devices & Contacts that the notification will be sent to

Allow users to add endpoints dynamically
None

Contact Methods
Check all communication methods to use for selected contacts.
☐ Mobile ☐ Email ☐ Internal

Show: Endpoints Contacts **User Tags** System Tags Search Unselect

| | | |
|--------------|----|---|
| All Sites | 33 | > |
| billy test | 9 | > |
| Building 101 | 3 | > |
| Building 102 | 3 | > |
| Building 103 | 3 | > |

SELECTED ENDPOINTS & CONTACTS

- AtlasSound - 192.168.10.68
- AtlasSound - 192.168.11.78
- Building 101

CLOSE SAVE


7. Click **Save**.

Configuring Emergency Number

There is no configuration required in the Mitel Revolution interface. The numbers to be monitored are configured in the Mitel communications manager, which is pulled into the Mitel Revolution interface, and displayed in the **Dial Monitor** section. The numbers are available as triggers to assign to notifications. Any time the number being monitored is dialed; the notification is triggered.

- All numbers are initially assigned to All Sites.
- You can edit numbers to change their display name and site assignment.
- You cannot change the number being monitored in Revolution. Changes must be made in your Mitel communications manager.
- To stop monitoring a number, remove it in your Mitel communications manager. On the next Revolution phone refresh, the Revolution Mitel Notifier page is updated, and the trigger is automatically removed from any notifications it is assigned to.

Note: If the **Dial Monitor** Service program is not installed, or is not running, on your Mitel communications manager server, notifications cannot be triggered. Emergency numbers configured to monitor in Mitel Connect Direct are still pulled into Mitel Notifier, but without the Dial Monitor Service program installed, Revolution Mitel Notifier does not know when a monitored number is dialed.

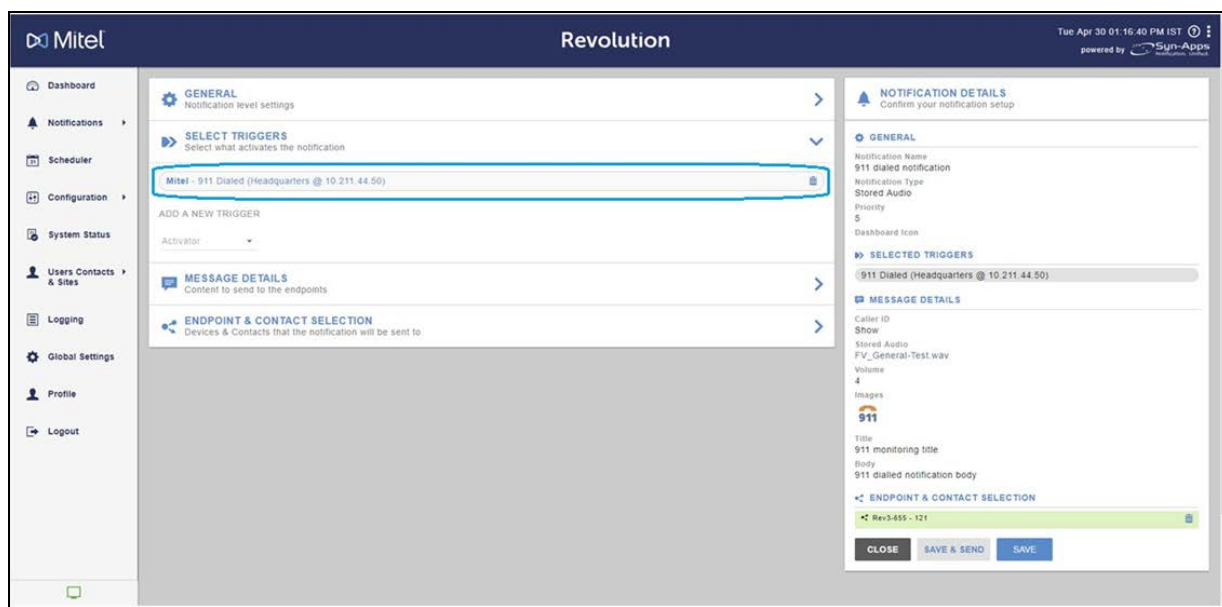

Disable Using Mitel Call Monitoring

If you do not want to use the call monitoring feature in the Mitel Revolution interface, or your security policies prevent you from installing the **Dial Monitor** Service program on your Mitel server, go to **Configuration > Notifiers > Mitel > Settings** and uncheck **Enable Emergency Number**. This prevents Mitel Notifier from displaying an error message when there is no link to the Dial Monitor Service. The emergency numbers configured in your Mitel communications manager still display on the Mitel Notifier page, but they are not monitored by the Mitel Revolution interface.

Triggering Emergency Notification

Perform the following steps to create an emergency notification in Mitel Revolution:

1. Go to **Notifications > Manage**.
2. Click **NEW NOTIFICATION**.
3. Enter **General** Setting:
 - a. Provide a descriptive name that's meaningful to your users.
 - b. (Optional) Select an image to display with the notification when it's assigned to the Dashboard.
 - c. Select a Priority level for the notification.
 - d. Select the type from the **Notification Type** drop-down list.

The screenshot shows the 'GENERAL' tab for 'Notification level settings'. The form contains the following fields and values:

- Notification Name ***: 911 Dialed
- Notification Type**: Text And Images (with a help icon and dropdown arrow)
- Activation Type**: Iteration (with a help icon and dropdown arrow)
- Iterations**: 1
- Repeat Interval (seconds)**: 60
- Priority**: A slider set to 8
- Dashboard Icon**: 911-monitoring.svg (with a help icon and 'X' icon)
- Available in All Sites**: ☒

At the bottom left, there is a '911' icon.

4. Select **Triggers**.
 - a. Select **Mitel** from the **Activator** drop-down list.
 - b. Select the emergency number from the **Trigger** drop-down list.
5. Enter **Message details**.
 - a. Set Caller ID to Show.
 - b. Select an **audio tone** or **prerecorded message** from the **Stored Audio** drop-down list. Repeat the process to select additional audio files, if necessary. Audios play in the order listed. Drag and drop files to rearrange the order.
 - c. Set the **Volume** for the notification. This volume overrides the volume set on the endpoint receiving the notification, such as a phone or speaker.
 - d. (Optional) Select an image from the Stored Images drop-down list to send with the notification. You can repeat this step to select an additional image, if desired.
 - e. Enter the **Title** for the notification.
 - f. Enter the content of your notification and select the variables from the **Body** drop-down list.

- g. Leave **'Clear notification...'** unchecked. (Checking 'Clear notification...' removes the message content from a phone endpoint display once the selected audio files finish playing.)

MESSAGE DETAILS

Content to send to the endpoints

Caller ID

Show

Select Image

911

 911-monitoring.svg

Font Color

#BE3D3D

Devices without font color support will use their default color

Title *

911 Dialed

Body

911 has been dialed from this caller {callerID} on {dateLocal}.

6. Select **Endpoints** to receive the notification.

ENDPOINT & CONTACT SELECTION

Devices & Contacts that the notification will be sent to

Allow users to add endpoints dynamically

None

Contact Methods

Check all communication methods to use for selected contacts.

☐ Mobile ☐ Email ☐ Internal

Show: Endpoints Contacts User Tags System Tags

Search

Unselect

| | | |
|--------------|----|--|
| All Sites | 33 | |
| billy test | 9 | |
| Building 101 | 3 | |
| Building 102 | 3 | |
| Building 103 | 3 | |

SELECTED ENDPOINTS & CONTACTS

AtlasSound - 192.168.10.68

AtlasSound - 192.168.11.78

Building 101

CLOSE

SAVE

7. Click **Save**.

If 911 is dialed, the Mitel Revolution interface sends notification to the contacts in the **ENDPOINT & CONTACT SELECTION** section.

Third-Party Troubleshooting

Basic troubleshooting can be done using the various SA-Announce log files. You can access them from Mitel Revolution > Logging. See the Mitel Revolution WebHelp > [Logging](#) topic for more information.

In addition, refer to the Mitel Revolution WebHelp > [Troubleshooting](#) topics.

Mitel Revolution Technical Support

Call the Mitel Revolution Support team at (866) 664-6071 (option 2 for Support), or send an email to support@syn-apps.com.

