


Wall Mount instructions

Install on the Wall

The 6730 analog phone has two pre-drilled wall mounting holes on the back of the phone.


1. Using the provided wall mount drilling template, locate and mark the position for the mounting screws on the wall. Depending on the wall type, you may need to use wall anchors. Both the screws and wall anchors are included with your phone together with a wider stronger wall mount clip.
2. Place the wall mount holes on the phone over the screw heads on the wall and pull down to lock the phone in.

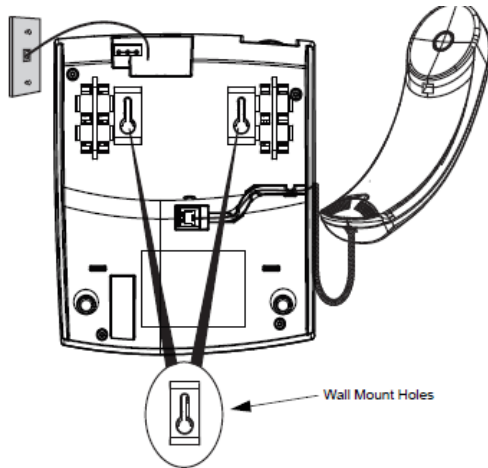

3. In the handset cradle, there is a small clip that sits flush with the cradle surface. Using a small flathead screwdriver, pull the clip up and remove it from the phone.
4. With the arms on the clip facing you and the flat side of the clip towards the phone, turn the clip 180 degrees and reinsert it back into the clip cavity in the phone's cradle. Alternatively use the extra wide clip that comes with screws/anchors inside the box. This wider clip cannot be reversed and used when phone is desktop mounted.

Installation and Setup

5. Push the clip in until it snaps into the slot flush with the surface and only the legs on the clip are sticking up.

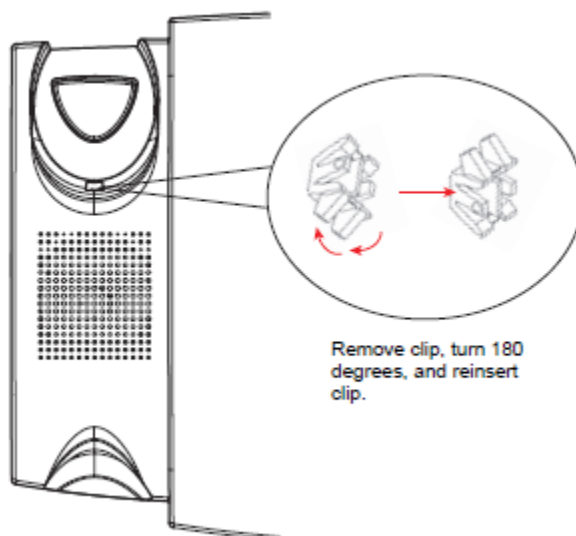

6. Place the handset into the phone's cradle, inserting the legs on the clip into the square hole on the handset. This allows the handset to rest in the cradle in a vertical position without slipping off when the phone is installed on the wall.

