



Clearspan®

AASTRA® 6753i IP PHONE

2786-003

Firmware Version 3.2.2

2811 Internet Blvd
Frisco, Texas 75034-1851
Tel +1 469 365 3000
Tel +1 800 468 3266
www.aastrausa.com





3rd Edition (September 8, 2011)

© Copyright 2011 Aastra USA Inc. All rights reserved.

Information in this manual may change with product revisions. Aastra® may add features or enhancements to the product(s) and/or program(s) described in this manual at any time.

Technical Publications freezes the information in this manual based on the specified software and hardware releases. Publications writers incorporate such changes into newly released publication editions. Publications writers will incorporate any modifications provided to them **after the publication release date** into the next scheduled release of the publication.

Aastra furnishes the application described in this manual under a license agreement and customers may use or copy information in the manuals only in accordance with the terms of the agreement.

Contact Information

Address any reader comments to:

Aastra USA Inc.
Technical Publications Manager
2811 Internet Boulevard
Frisco, TX 75034-1851

You may also send email to techpubs@aastrausa.com

What to Expect when Contacting Company

Technical Publications will email responses to customers within seven business days of the contact. Note that product support is not available through this email address. For product support, contact Aastra Customer Technical Support (ACTS) at 1-800-729-1872. Aastra may use or distribute review comments and information without incurring obligation.

Trademarks and Acknowledgements

Product registered trademarks and copyrights of the products included in this publication include Clearspan® and OpEasy® as registered trademarks of Aastra Technologies Ltd.; Microsoft® and MSN® as registered trademarks of Microsoft Corporation.

This publication identifies all other products or services mentioned herein by the trademarks, service marks, or product names designated by the companies that market those products. The companies producing these trademarks and registered trademarks control ownership of them. Make all inquiries concerning such trademarks directly to those companies.

6753i Product

Product Liability

Aastra Telecom will not accept liability for any damages and/or long distance charges, which result from unauthorized and/or unlawful use.

While every effort has been made to ensure accuracy, Aastra Telecom will not be liable for technical or editorial errors or omissions contained within this documentation. The information contained in this documentation is subject to change without notice.

Copyright 2005 Aastra Telecom. www.aastra.com

All Rights Reserved.

Software License Agreement

Aastra Telecom Inc., hereinafter known as "Seller", grants to Customer a personal, worldwide, non-transferable, non-sublicenseable and non-exclusive, restricted use license to use Software in object form solely with the Equipment for which the Software was intended. This Product may integrate programs, licensed to Aastra by third party Suppliers, for distribution under the terms of this agreement. These programs are confidential and proprietary, and are protected as such by copyright law as unpublished works and by international treaties to the fullest extent under the applicable law of the jurisdiction of the Customer. In addition, these confidential and proprietary programs are works conforming to the requirements of Section 401 of title 17 of the United States Code. Customer shall not disclose to any third party such confidential and proprietary programs and information and shall not export licensed Software to any country except in accordance with United States Export laws and restrictions.

Customer agrees to not reverse engineer, decompile, disassemble or display Software furnished in object code form. Customer shall not modify, copy, reproduce, distribute, transcribe, translate or reduce to electronic medium or machine readable form or language, derive source code without the express written consent of the Seller and its Suppliers, or disseminate or otherwise disclose the Software to third parties. All Software furnished here under (whether or not part of firmware), including all copies thereof, is and shall remain the property of Seller and its Suppliers and is subject to the terms and conditions of this agreement. All rights reserved.

Customer's use of this software shall be deemed to reflect Customer's agreement to abide by the terms and conditions contained herein. Removal or modification of trademarks, copyright notices, logos, etc., or the use of Software on any Equipment other than that for which it is intended, or any other material breach of this Agreement, shall automatically terminate this license. If this Agreement is terminated for breach, Customer shall immediately discontinue use and destroy or return to Seller all licensed software and other confidential or proprietary information of Seller. In no event shall Seller or its suppliers or licensors be liable for any damages whatsoever (including without limitation, damages for loss of business profits, business interruption, loss of business information, other pecuniary loss, or consequential damages) arising out of the use of or inability to use the software, even if Seller has been advised of the possibility of such damages.

Limited Warranty

Aastra Telecom warrants this product against defects and malfunctions during a one (1) year period from the date of original purchase. If there is a defect or malfunction, Aastra Telecom shall, at its option, and as the exclusive remedy, either repair or replace the telephone set at no charge, if returned within the warranty period.

If replacement parts are used in making repairs, these parts may be refurbished, or may contain refurbished materials. If it is necessary to replace the telephone set, it may be replaced with a refurbished telephone of the same design and color. If it should become necessary to repair or replace a defective or malfunctioning telephone set under this warranty, the provisions of this warranty shall apply to the repaired or replaced telephone set until the expiration of ninety (90) days from the date of pick up, or the date of shipment to you, of the repaired or replacement set, or until the end of the original warranty period, whichever is later. Proof of the original purchase date is to be provided with all telephone sets returned for warranty repairs.

Exclusions

Aastra Telecom does not warrant its telephone sets to be compatible with the equipment of any particular telephone company. This warranty does not extend to damage to products resulting from improper installation or operation, alteration, accident, neglect, abuse, misuse, fire or natural causes such as storms or floods, after the telephone is in your possession.

Aastra Telecom shall not be liable for any incidental or consequential damages, including, but not limited to, loss, damage or expense directly or indirectly arising from the customer's use of or inability to use this telephone, either separately or in combination with other equipment. This paragraph, however, shall not apply to consequential damages for injury to the person in the case of telephones used or bought for use primarily for personal, family or household purposes. This warranty sets forth the entire liability and obligations of Aastra Telecom with respect to breach of warranty, and the warranties set forth or limited herein are the sole warranties and are in lieu of all other warranties, expressed or implied, including warranties or fitness for particular purpose and merchantability.

Warranty Repair Service

Should the set fail during the warranty period, contact the Aastra Customer Service Center (CSC) at 1-800-729-1872.

Revision History

The following represents the revision history of this publication:

Revision Number	Date Completed	Point of Contact	Description
003	09/08/11	Bev Marsh	Firmware 3.2.2.1035.
002	02/23/09	Bev Marsh	Additions and Corrections.
001	11/05/08	Bev Marsh	Initial release of this publication.



Table of Contents

3rd Edition (September 8, 2011).....	3
Contact Information.....	3
What to Expect when Contacting Company.....	3
Trademarks and Acknowledgements	3
6753i Product	3
Product Liability.....	3
Software License Agreement.....	4
Limited Warranty.....	4
Exclusions	4
Warranty Repair Service	5
Revision History	5
Table of Contents.....	7
Table of Figures	11
1 About this Publication	13
1.1 Overview	13
1.2 Audience	13
1.3 Terms and Definitions.....	13
1.4 References.....	13
2 Introduction.....	15
2.1 Overview	15
2.2 The 6753i IP Phone.....	15
2.2.1 Phone Features.....	15
2.2.2 General Requirements.....	16
2.3 Headset/Handset Connection	16
2.3.1 Handset	16
2.3.2 Headset (Optional)	16
3 Getting Started	19
3.1 Installation and Setup	19
3.2 Startup Sequence	19
3.2.1 Configuration and Updates.....	19
3.2.2 Language Packs	20
3.2.3 Configuration Complete	20
3.2.4 Idle State Display	20
3.2.5 Incomplete Configuration.....	20
3.2.6 No Service Message.....	21
3.2.7 Network Disconnected.....	21
3.3 6753i Keys and Functions.....	21
3.4 Key Description.....	22

3.5	Features	23
3.6	Clearspan Feature Access Codes	26
3.7	Line and Call Appearance Keys	26
3.7.1	Top Hard Keys as Line/Call Appearances.....	26
3.8	Status Lamps for all Line/Call Appearances	26
3.9	Speaker and MWI Status Lamps.....	26
3.9.1	Speaker Lamp	26
3.9.2	Message Waiting Indicator Lamp.....	27
3.10	Volume Keys	27
3.11	Call Timer	27
3.12	Mute.....	28
4	Customize your Phone	29
4.1	Options List	29
4.1.1	Access the Options List	30
4.1.2	Call Forward	30
4.1.3	Turn All Call Forward Features On or Off	32
4.1.4	Preferences	33
4.1.5	Speed Dial Edit.....	34
4.1.6	Live Dialpad.....	35
4.1.7	Set Audio	35
4.1.8	Time and Date	37
4.1.9	Language.....	40
4.1.10	Phone Status.....	40
4.1.11	Password.....	42
4.1.12	Admin Menu	43
4.1.13	Restart Phone	43
4.1.14	Phone Lock using the Phone UI	44
5	Call Handling.....	45
5.1	Place a Call	45
5.2	Receive a Call	45
5.2.1	Answer an Incoming Call	46
5.3	Connected Call	46
5.4	Handle Calls Using the Speaker.....	46
5.5	Handle Calls Using a Headset.....	47
5.6	End a Call.....	47
6	Phone Features	49
6.1	Overview	49
6.2	Hold	49
6.2.1	Place a Call on Hold.....	49
6.2.2	Retrieve a Held Call	49
6.2.3	Automatic Hold	50
6.2.4	Manage Multiple Calls on Hold.....	50

6.3	Do Not Disturb.....	50
6.4	Transfer	51
6.5	Conference.....	52
6.5.1	Establish the Conference.....	52
6.6	Park and Pickup.....	53
6.6.1	Default Display	54
6.6.2	Use Park and Pickup	54
6.7	Call Forwarding Always, Busy, No Answer	54
6.8	Call Return	55
6.9	Call Waiting	56
6.10	Directed Call Pickup	56
6.10.1	Directed Call Pickup Feature Interactions	56
6.11	Directed Call Pickup with Barge-In	57
6.12	Autodial (Hotline and Warmline)	57
6.13	Intercom.....	58
6.13.1	Outgoing Intercom	58
6.13.2	Incoming Intercom	58
6.13.3	Use the Intercom Softkey	58
6.14	Stuttered Dial Tone	58
6.15	Speeddial	58
6.15.1	Edit a Speeddial Key using the Options List.....	59
6.15.2	Add a new Speeddial Key (Press and Hold)	59
6.16	Speed Dial/Xfer.....	60
6.17	Speed Dial/Conf.....	60
6.18	Shared Call Appearance Call Retrieve.....	61
6.18.1	Keys States and LED Behavior.....	61
6.18.2	Line Keys and Idle Screens.....	62
6.18.3	Softkey Line Keys	62
6.18.4	Line Key Phone Behavior.....	63
6.18.5	SCA Call Location and SCA Call Retrieve	63
6.19	XML Keys.....	63
6.19.1	Access XML Applications	63
7	Callers List and Redial List.....	65
7.1	Callers List.....	65
7.1.1	Callers List Display.....	65
7.1.2	Callers List Functions.....	65
7.1.3	Missed Calls Indicator	67
7.1.4	Delete Entries in the Callers List	67
7.2	Redial.....	68
7.2.1	Last Number Redial	68
	Appendix A – M670i Expansion Module	71
	Use the M670i Expansion Module	71



Appendix B – Clearspan Feature Access Codes	73
Appendix C - Troubleshooting	81
Index	83



Table of Figures

Figure 1 The 6753i IP Phone.....	15
Figure 2 6753i Headset and Handset Diagram	17
Figure 3 6753i Keys and Functions.....	21
Figure 4 SCA Call Bridging.....	61
Figure 5 M670i Expansion Module.....	71
Figure 6 M670i Expansion Module with Labels.....	71



1 About this Publication

1.1 Overview

This guide explains how to use the features of your new 6753i IP phone. The features assigned to your phone were chosen by your system administrator according to the requirements of your organization; therefore, you may not have access to all the features presented in this document.

1.2 Audience

This publication is intended for any user of the 6753i IP phone.

1.3 Terms and Definitions

Term	Definition
IP	Internet Protocol (IP) is a data-oriented protocol used for communicating data across a packet-switched network.
IP Address	An identifier for a computer or device on a TCP/IP network. Networks using the TCP/IP protocol route messages based on the IP address of the destination. The format of an IP address is a 32-bit numeric address written as four numbers separated by periods. Each number can be zero to 255. For example, 10.160.10.240 could be an IP address.
MAC Address – Media Access Control	A number located on the white sticker on the bottom of the phone that serves as a name for each phone.
SIP – Session Initiation Protocol	The protocol for VOIP and other text and multimedia sessions, such as instant messaging, video, online games and other services.
VoIP – Voice Over IP	A technology that allows you to make telephone calls using a broadband Internet connection instead of a regular (or analog) phone line.

1.4 References

The following publications provide additional information for the 6753i IP phone.

Title	Description
Aastra Model 6753i Installation Guide	Installation and set-up instructions, general features and functions, and basic options list customization. This publication is included with the telephone.



2 Introduction

2.1 Overview

The 6753i IP telephone provides communications over an IP Network using the SIP IP telephony protocol. The 6753i has all the features of a regular business phone, allowing you to place and receive calls, transfer, conference and more.

2.2 The 6753i IP Phone



Figure 1 The 6753i IP Phone

2.2.1 Phone Features

- 3-line LCD screen.
- 3 line/call appearance keys (L1 – L3) with corresponding status lamps.
- 6 top programmable hard keys with status lamps (up to 6 programmable functions). Only 4 hard keys are available for programmable features.
- Supports up to 7 lines.
- Full-duplex speaker for hands-free calls.
- Headset modular connector.

- Built-in-two-port, 10/100 Ethernet switch allowing you to share a connection with your computer.


2.2.2 General Requirements

The 6753i requires the following environment:


- A SIP-based IP PBX system or network installed and running with a SIP account created for the 6753i.
- Access to a Trivial File Transfer Protocol (TFTP) server.
- Ethernet/Fast Ethernet LAN (10/100mb).
- Category 5/5e straight through cabling.
- Power Options:
 - Power over Ethernet (PoE) 802.3af.
 - Inline power injector – An optional accessory necessary only if your network provides no inline power.
 - AC power adapter, included with the phone.

2.3 Headset/Handset Connection

2.3.1 Handset

Turn the phone over and locate the handset jack marked . Insert one end of handset cord into the jack until it clicks into place. Then route the handset cord through the groove as shown in the illustration below. Attach the handset to the other end of the handset cord.

2.3.2 Headset (Optional)

Turn the phone over and locate the headset jack marked . Insert the headset cord into the jack until it clicks into place. Then route the headset cord through the groove as shown in the above illustration.

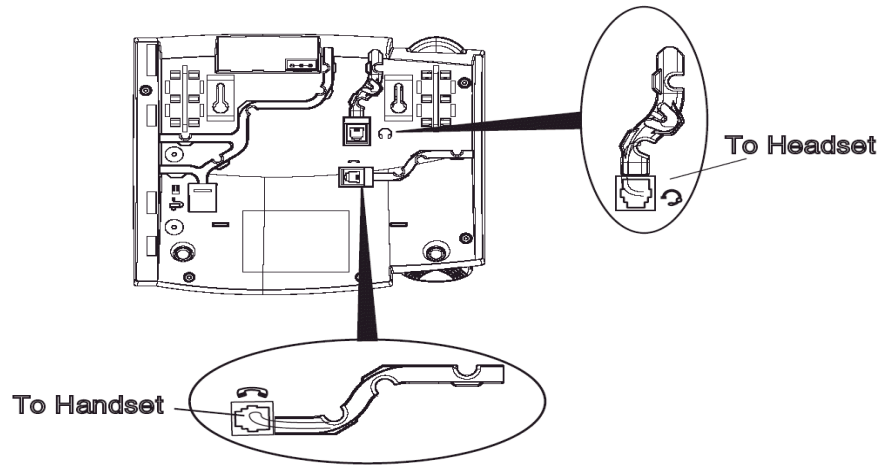


Figure 2 6753i Headset and Handset Diagram



3 Getting Started

3.1 Installation and Setup

If your system administrator has not already setup your 6753i, please refer to the Aastra Model 6753i Installation Guide for basic installation and physical setup of the 6753i.

Note

- Your system or network administrator manages the configuration and updates for the IP phones on the configuration server.
- New updates to your phone can be automatically scheduled from the server by your system administrator. Automatic updates are scheduled during non-business hours or slow call periods.

3.2 Startup Sequence

The 6753i automatically begins the startup sequence as soon as it is connected. The phone goes through this process the first time you plug in your phone and every time you restart your phone. The following screens display:

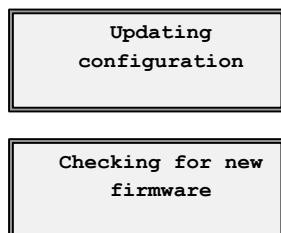


Note

Other startup screens only appear the first time you connect your phone, or if your phone has been set back to factory defaults.

3.2.1 Configuration and Updates

The 6753i then checks settings and looks for new configuration and firmware updates on the configuration server. If a new update is found, the phone displays the update it is installing (either "Updating Config" or "New Firmware"). This process could take a few moments while the configuration server downloads the latest updates.

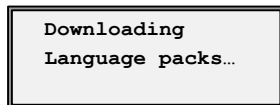




Do not unplug or remove power from the phone while it is restarting.

3.2.2 Language Packs

If language packs were loaded to your phone by your System Administrator, the following screen displays during startup.



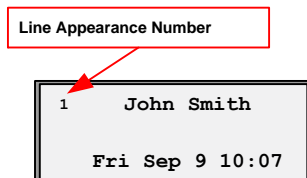
3.2.3 Configuration Complete

When the configuration update is complete, the phone displays the following screens:



3.2.4 Idle State Display

The idle state screen displays when your 6753i startup process is completed.



3.2.5 Incomplete Configuration

If your phone displays an "Incomplete Config" message without any extension or user name at the end of the start-up sequence instead of an Idle state screen, this indicates the phone configuration that was downloaded from the configuration server is not complete or correct. Contact your System Administrator for assistance.

3.2.6 No Service Message

See [Appendix C, No Service](#) for information.

3.2.7 Network Disconnected


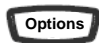



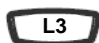

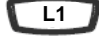



See [Appendix C, Network Disconnected](#) for information.


3.3 6753i Keys and Functions



Figure 3 6753i Keys and Functions

3.4 Key Description

Key	Description
	<ul style="list-style-type: none"> Ends an active call Exits an open list, such as the Options List, without saving changes.
	Accesses options to customize your phone.
	Controls the Hold feature.
	<ul style="list-style-type: none"> Accesses the Redial list of to 100 previously dialed numbers. Controls the Last Number Redial feature.
	Adjusts the volume for the handset, headset, ringer, and speaker.
  	3 line/call appearance hard keys that connect you to a line or call.
	Activates the Speaker or Headset depending upon audio mode.
	Mutes the microphone so that your caller cannot hear you. The lamp indicator flashes when the microphone is on mute.
	<p>Navigation keys:</p> <p>Up and Down arrows (▲ or ▼):</p> <ul style="list-style-type: none"> Allow you to view status and text messages on the display if the message consists of more than one line. Allow you to scroll through menu selections, such as the Options List. <p>Right and Left arrows (◀ and ▶):</p> <ul style="list-style-type: none"> Allow you to view line/call appearances. Allow you to exit and enter a specific option in the Options list. <p>If editing entries on the display, the LEFT arrow key erases the character on the left and the RIGHT arrow key sets (saves) the option.</p>

Key	Description		
	The 53i has 6 programmable hard keys that are all programmable. The following are the default functions for the programmable keys on the 53i IP phone:		
	Key	Function	Description
	1	SAVE	Allows you to save numbers and/or names to the Directory. Using this key, you enter the number, name, and line (or Speed Dial key) to record in the Directory List.
	2	DELETE	Allows you to delete entries from the Directory List, Callers List, and Redial List.
	3	DIRECTORY	Displays up to 200 names and phone numbers (stored in alphabetical order)
	4	CALLERS LIST	Accesses the last 200 calls received.
	5	TRANSFER	Transfers the active call to another number
	6	CONFERENCE	Begins a conference call with the active call.
<div>Note</div> <ul style="list-style-type: none">Other functions can be assigned to the programmable hard keys.There is a key card provided with the phone that provides label identification for these keys.			
Optional Expansion Module	If an M670i Expansion Module is attached to the phone, you can configure 36 additional keys. For more information, see M670i Expansion Module .		

3.5 Features

Feature	Description
Commonly used features:	
Hold	Handles held calls.
Do Not Disturb	Places the phone in the Do Not Disturb state. Incoming calls go directly to your pre-defined call forward/busy destination, usually your voicemail.
Transfer	Transfers a call to another party.

Feature	Description
Call Forwarding Call Forward in Phone UI	Forwards all incoming calls to another number. Includes: <ul style="list-style-type: none"> • Call Forward All Activation/Deactivation • Call Forward Busy Activation/Deactivation • Call Forward No Answer Activation/Deactivation • Call Forward Always to Voice Mail Activation/Deactivation • Call Forward Busy to Voice Mail Activation/Deactivation • Call Forward No Answer to Voice Mail Activation/Deactivation
Conference	Establishes a 3-way conference.
Call Return	Enables you to call the last party that called you, whether or not that call was answered.
Call Waiting	Allows you to answer a call while already engaged in another call.
Park	Used park a connected call.
Pickup	Used to pick up a parked call.
Directed Call Pickup	Allows you to pick up a call ringing at another extension in the same group.
Directed Call Pickup with Barge-In	Allows you to do Directed Call Pickup, and also allows you to barge in on the call if the call was already answered.
Stuttered Dial Tone	Allows you to hear stuttered dial tone when there is a message waiting on your phone.
Last Number Redial	Allows you to automatically redial the last number dialed.
Callers List	Accesses the Callers List.
Speedial	Dials a user-defined number automatically.
Shared Call Appearance Call Retrieve	Allows incoming calls to ring on up to 35 additional phones simultaneously and connecting to the first phone to be answered. A call on a shared line can be held on one phone and retrieved from any other phone.
Additional Features:	
Automatic Callback Deactivation	Allows you to monitor a busy party and automatically establish a call when that party becomes idle. You can deactivate all callbacks that you have left on other parties by dialing the appropriate feature access code.
Calling Line ID Delivery Blocking Persistent Activation or Deactivation	Enables you to “persistently” block delivery of your calling line ID to the called party.
Calling Line ID Delivery Blocking per Call	Overrides the blocking of the calling line ID (CLID) so you can block the delivery of your identity for the next call. At the end of the call, the presentation of your identity is restored to its “persistent” status.
Calling Line ID Delivery per Call	Overrides the persistent presentation of the calling line ID (CLID) so you can allow the delivery of your identity for the next call. At the end of the call, the presentation of your identity to the “persistent” status.

Feature	Description
Call Waiting Persistent Activation/Deactivation	Enables you to answer a call while already engaged in another call. Call Waiting is "On" by default, but can be deactivated.
Cancel Call Waiting per Call	Allows you to disable Call Waiting for the next or current call.
Clear Voice Message Waiting Indicator	Clears the voice message indicator lamp.
Customer Originated Trace	Allows you to start a trace after an obscene, harassing, or threatening call.
Diversion Inhibitor	Prevents redirected calls from being redirected again by the called party.
Music on Hold Per-Call Deactivation	Allows you to enable/disable Music On Hold on either a per-call or persistent basis. This feature is especially useful when participating in a conference call.
No Answer Timer	Allows you to set the number of rings before a call is forwarded by setting the no-answer timer.
Per Call Account Code	Allows you to enter an account code before making a call. You are prompted for an account code, you dial the code, receive confirmation, and then proceed with the call as usual. The sequence is as follows: [Off-hook] [FAC] [prompt] [code] [confirmation] [dial tone] [call]
Push to Talk (Intercom)	Allows you to call another station, where the system requests that the destination station automatically answer, providing intercom-like functionality. A user or administrator can specify an accept list and a reject list. These are used to screen incoming Push-To-Talk sessions. <ul style="list-style-type: none"> The accept list indicates which users are allowed to call a station. The reject list indicates which users are not allowed to call a station. In both lists, a wildcard can be used, which indicates all stations.
Shared Call Appearance Location Control Activation and Deactivation	Allows you to activate or deactivate the shared call appearance at a particular station.
Sustained Auth Code Activation and Deactivation	Allows you to unlock calls by having the Calling Plan service use a sustained authorization code for all calls instead of prompting for the code on a per-call basis. You can also disable the sustained authorization codes feature, which restores the collection of authorization codes for all calls.
Voice Portal Access	Provides an interactive voice response (IVR) application that can be called by members of the group from any phone, to manage their services and voice mailbox, or to change their passcode.

3.6 Clearspan Feature Access Codes

The main call handling and extension management features for the Clearspan system have feature access codes that can be set up as speed dial keys on your phone using the Aastra Phone User Interface. You can also manually dial the feature access codes.

See [Appendix B - Clearspan Feature Access Codes](#) for the default codes. If the codes have been customized, your system administrator must provide the code information.

3.7 Line and Call Appearance Keys

There can be up to 6 line/call appearances configured on the 6753i (if no features are configured on the available programmable keys). Usually you will have only one extension on your phone. L1 is usually your preferred line, with your main extension assigned to L1.

An available line is automatically selected when the phone goes off-hook.

3.7.1 Top Hard Keys as Line/Call Appearances

The 6 hard keys on the top of the phone can be programmed as line/call appearances. Line/call appearance assignments for these keys are **L4 – L7**.

3.8 Status Lamps for all Line/Call Appearances

Line/Call appearance hard keys L1 – L3 have green lamps. Line/call appearances assigned to the programmable keys have red lamps.

Activity	Lamp	Description
Idle	Off	There is no call activity on this line/call appearance.
Connected	Solid	A call is connected to the phone on this line/call appearance.
Ringing	Fast Flash	A call is ringing in on this line/call appearance.
On Hold	Slow Flash	A call is on hold on this line/call appearance.

3.9 Speaker and MWI Status Lamps

The Speaker lamp and the Message Waiting Indicator (MWI) lamp provide visual status indications.

3.9.1 Speaker Lamp

The speaker lamp is located beside the **Speaker** key.

Speaker LED Status	Description
On Solid	You are in Speaker mode.
Slow Flash	You are in Headset mode.





3.9.2 Message Waiting Indicator Lamp

The **Message Waiting Indicator** (MWI) lamp is located at the top right of the phone.

MWI LED Status	Description
Slow Flash	You have a new message (s).
Rapid Flash	You have an incoming call.
Even Flash	One or more calls are on hold.

3.10 Volume Keys

You can adjust the volume on the receiver, headset, speaker, and ringer using the Volume keys.



Step	Action	Result
Set Ringer Volume:		
1.	Leave the handset in the cradle.	
2.	Press the Volume keys  .	The Ringer displays on the screen and you hear the current ringer volume. You can also set the volume to OFF.
Set Handset Volume:		
1.	Lift the handset	You hear dial tone at the current sound level.
2.	Press the Volume keys  .	The Handset volume indicator displays on the screen. The handset remains at this volume until it is adjusted again.
Set Headset Volume:		
1.	Press the Volume keys  while on a call.	The Headset volume indicator displays on the screen. The headset remains at this volume until it is adjusted again.
Set Speaker Volume:		
1.	Press the Volume keys  while on a call and talking on the Speaker.	The Speaker volume indicator displays on the screen. The speaker remains at this volume until it is adjusted again.

3.11 Call Timer

This timer displays the elapsed time of a call.

3.12 Mute

You can use the **Mute** key in any audio mode.

Step	Action	Result
Activate the Mute feature:		
2.	<p>During a call: Press the Mute key.</p> <p> Caution!</p> <p>If you place a muted call on hold, the phone automatically takes the call off mute when you reconnect to the call.</p>	<ul style="list-style-type: none"> • The red Mute lamp flashes slowly. • The microphone icon  displays on the screen. • You can hear the caller. • The caller cannot hear you.
Deactivate the Mute feature:		
3.	Press the Mute key again.	Mute is deactivated.

4 Customize your Phone

You can customize your phone using the Phone User Interface (UI) and the Options List.

4.1 Options List

The Options List is a list of configuration options for your phone. The **Options** key allows you to access the list.

The following table shows the phone options you can access with the Phone UI. Options requiring an administrator password are indicated.


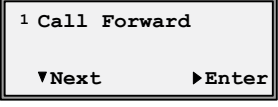


Any changes from the default settings are permanent until you change them again.

Menu Item Number	Main Menu Options	Sub-menu Options	Description
1.	Call Forward	All Busy No Answer All Off All On	Sets the Call Forward All, Busy, and No Answer destinations.
2.	Preferences	Tones Display Speed Dial Edit Live Dialpad Set Audio Time and Date Language	Sets ring tone and tone set preferences. Sets the contrast level for the phone display. Allows the user to configure a Speeddial key. Controls the Live Dialpad feature. This feature is set to ON by default. Sets the audio type used to handle calls your calls. The audio mode is set to Speaker by default. It also set the headset microphone volume. Sets the time and date on the phone. The language option has been pre-defined as English.
3.	Phone Status	IP and MAC Addresses LAN Port PC Port Firmware Info Error Messages Copyright	Displays the IP and MAC addresses. Displays LAN Port information. Displays PC port information. Displays the current firmware used by the phone. Displays any phone-related error messages Displays the Copyright information for the phone.
4.	Password		Sets the user password on the phone.
5.	Admin Menu		Administrator functions requiring an administrator password.

Menu Item Number	Main Menu Options	Sub-menu Options	Description
6.	Restart Phone		Restarts the phone.
7.	Phone Lock		Locks and unlocks the phone.

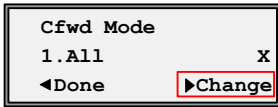
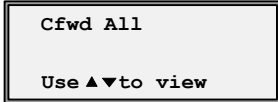


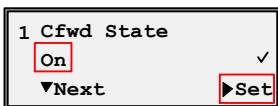

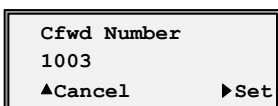

4.1.1 Access the Options List

Step	Action	Result
1.	Press the Options key.	The Options screen displays. 
2.	<ul style="list-style-type: none"> Press ▼ or ▲ to scroll through the list of 7 options. Press ►Enter. Or <ul style="list-style-type: none"> Press the <i>menu item number</i> to go directly into the option. 	
Exit and save changes:		
1.	Press ►Set.	The change is saved, but with no confirmation message.
Cancel changes:		
1.	<ul style="list-style-type: none"> Press ◀ to return to the previous screen without making changes. Or <ul style="list-style-type: none"> Press ▲Cancel when the key is available. 	
Exit the Options list:		
1.	Press the Goodbye key or the Options key from any menu.	The idle screen displays.

4.1.2 Call Forward


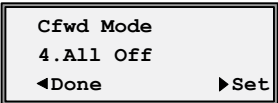
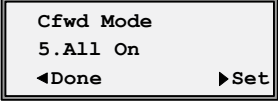
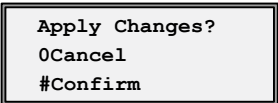
4.1.2.1 Call Forward All, Busy, and No Answer

Step	Action	Result
1.	The following procedure applies to Call Forward All, Busy, and No Answer on the 6753i.	
2.	Press the Options key.	
3.	Press ▼.	The Call Forward screen displays.

Step	Action	Result
4.	Press ►Enter .	The Call Forward mode screen displays with Call Forward All as the first option. 
5.	Note Press ▼ to scroll to the desired Call Forward option.	
6.	Press ►Change to change the state of the selected Call Forward Mode.	The selected Call Forward Mode screen displays 
7.	Press ▼ .	The Call Forward state displays. 
8.	Press ►Change . The check mark appears.	
9.	Press ▼Next .	The "On" state displays. 
10.	Press ►Set .	
11.	Press ▼Next .	
12.	Press ►Change	The Call Forward number displays.
13.	Enter the phone number.	
14.	Press ►Set .	
15.	Press ◀Done .	





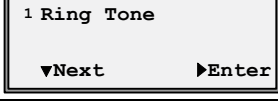
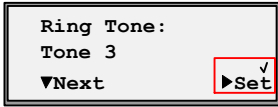
Step	Action	Result
16.	<ul style="list-style-type: none"> Press 0 to Cancel. <p>Or</p> <ul style="list-style-type: none"> Press # to confirm the changes. 	


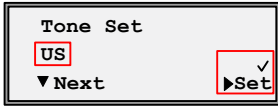
4.1.3 Turn All Call Forward Features On or Off

Step	Action	Result
1.	Press the Options key.	
2.	Press ▼.	The Call Forward screen displays.
3.	Press ►Enter.	<p>The Call Forward mode screen displays with Call Forward All as the first option.</p> 
4.	Press ▼ to scroll to Option 4 or 5.	 
5.	Press ►Set.	
6.	Press ◀Done.	
7.	<ul style="list-style-type: none"> Press 0 to Cancel. <p>Or</p> <ul style="list-style-type: none"> Press # to confirm the changes. 	

4.1.4 Preferences

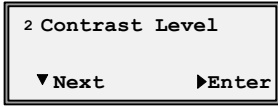

4.1.4.1 Tones

Step	Action	Result
Ring Tone: Sets ring tone. Select from 5 different ring tones or choose silent ring tone. (Ring tone 1 is the default.)		
1.	Go to Options > Preferences .	
2.	Press Enter .	A Preferences screen displays. 
3.	Press Down .	The Tones screen displays. 
4.	Press Enter .	A Tones screen displays. 
5.	Press Down .	The Ring Tone screen displays. 
6.	Press Enter .	The Ring Tone setting screen displays. The check mark indicates the current ring tone selection 
7.	Press Next until you hear the desired ring tone or to select the silent ring tone.	As you navigate through the list, each tone plays.
8.	Press Set .	The change is saved.

Tone Sets:		
Provides country-specific tone set options for call progress tones. (The US tone set is the default.)		
1.	Go to Options > Preferences > Tones.	
2.	Press ▼ .	The Tone Set screen displays. 
3.	Press ►Enter .	The Tones Set screen displays. US is the default. The checkmark indicates the current setting. 
4.	Press ▼Next to scroll to the desired tone set.	
5.	Press ►Set .	The change is saved.

4.1.4.2 Contrast Level

The Contrast Level option lightens or darkens the display.

Step	Action	Result
Contrast Level:		
1.	Go to Options > Preferences.	
2.	Press ▼ or Press 2 .	The Contrast Level screen displays. 
3.	Press ►Enter .	The Contrast Level settings screen displays. 
4.	Press ◀ or ▶ until you reach the desired contrast level.	
5.	Press ▼Select to save the option.	


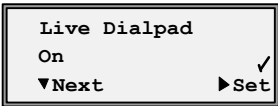
4.1.5 Speed Dial Edit

See [Speedial](#).

4.1.6 Live Dialpad

This option controls the Live Dialpad feature.

- Live Dialpad feature ON (Default) - The phone automatically selects a line/call appearance and turns the speaker on as soon as a dial pad key is pressed. If the number is not completed, the phone will time out, go to the busy state, and play busy tone until you disconnect by using the **Goodbye** key or hang up.
- Live Dialpad feature OFF – The digits are entered first, displayed on the screen, and can be edited using the ◀ key. When the handset is lifted or the speaker key pressed, the number automatically dials.

Step	Action	Result
1.	Go to Options > Preferences .	
2.	Press ▼ until you reach Live Dialpad or Press 4.	The Live Dialpad screen displays. 
3.	Press ►Enter.	The status displays. 
4.	Press ▼Next to change the status.	
5.	Press ►Set.	The change is saved.



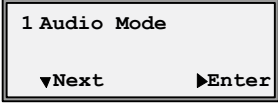


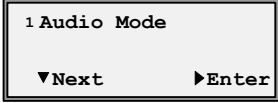
4.1.7 Set Audio



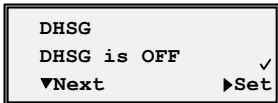
The Set Audio option provides 4 audio combinations for maximum flexibility for handling calls. Incoming audio can be set to one of the following options:

Option	Description
Speaker (Default)	The default setting. Calls are placed or received using the handset or speaker. Use the Speaker key to switch between handset and speaker.
Headset	Place or receive calls using a headset. Use the Speaker key to switch between the headset and handset. Lift the handset to switch from the headset to the handset.
Speaker/Headset	Incoming calls go directly to the speaker. Use the Speaker key to switch between the speaker, headset, and handset. Lift the handset at any time to switch back to the handset from either the speaker or the headset.

Option	Description
Headset/Speaker	<p>Incoming calls go directly to the headset.</p> <p>Use the Speaker key to switch between the speaker, headset, and handset.</p> <p>Lift the handset at any time to switch back to the handset from either the headset or the speaker.</p>

4.1.7.1 Set the Audio Option and Headset Volume

Step	Action	Result
1.	Go to Options > Preferences and press ►Enter .	
2.	Press ▼ to scroll to Set Audio or Press 5 .	<p>The Set Audio screen displays.</p> 
3.	Press ►Enter .	<p>Another Set Audio screen displays.</p> 
4.	Press ▼ or press 1 .	<p>The first Audio Mode screen display.</p> 
5.	Press ►Enter	<p>The current status displays.</p> 
6.	Press ▼Next to reset the audio option.	
7.	Press ►Set .	The change is saved.
Headset Microphone Volume:		
1.	Go to Options > Preferences and press ►Enter .	
2.	Press ▼ to scroll to Set Audio.	The Set Audio screen displays
3.	Press ►Enter .	<p>The Set Audio option screen displays.</p> 
4.	Press ▼ .	<p>The Audio Mode screen displays.</p> 

Step	Action	Result
5.	Press ▼Next	The Headset Mic Volume screen displays. 
6.	Press ►Enter.	The Headset Mic Volume settings screen displays. The checkmark indicates the current setting. 
7.	Press ▼Next to select the volume.	
8.	Press ►Set.	The change is saved.
DHSG – Electronic Hookswitch Support (EHS):		
1.	Go to Options > Preferences > Set Audio.	
2.	Press ▼ to select DHSG.	
3.	Press ▼ to select DHSG is ON.	
4.	Press Done.	

4.1.8 Time and Date

This option sets the date and time on the phone, but can be overwritten by the time server when the phone is restarted.

4.1.8.1 Time Server

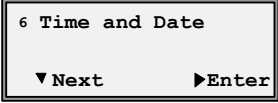

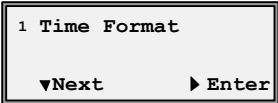
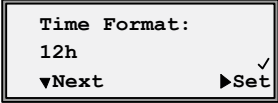
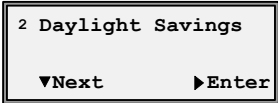
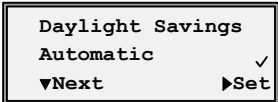
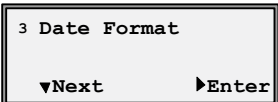
The phone acquires the time and date from the time server. The time server is already assigned, and this option requires an administrator password. Talk to your administrator if your phone has any difficulty with the date and time.

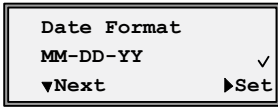
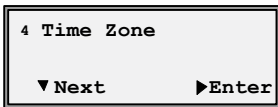
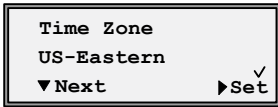
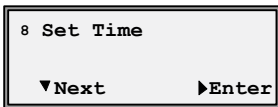
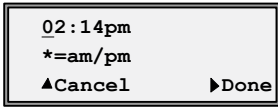
4.1.8.2 Set Time and Date Manually

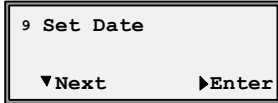
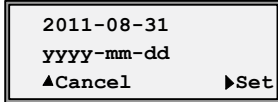
Note

If you set the time manually, the phone will not try to synchronize the time with the time server until the next time the phone is restarted.

Step	Action	Result
1.	Go to Options > Preferences and press ►Enter.	

Step	Action	Result
2.	Press ▼Next to scroll to Time and Date.	The Time and Date screen displays. 
3.	Press ►Enter.	
4.	Press ▼ to go to the first option.	
Time Format: Sets the time format display (12h or 24h clock).		
1.	Go to the Time Format option.	The Time Format screen displays. 
2.	Press ►Enter.	The current status displays. 
3.	Press ►Next to toggle between 12-hour and 24-hour format.	
4.	Press ►Set.	The change is saved.
Daylight Savings Time: Sets daylight savings time. Automatic is the default.		
1.	Go to the Daylight Savings option	The Daylight Savings screen displays: 
2.	Press ►Enter.	
3.	Press ▼Next to scroll to the another daylight savings option.	
4.	Press ►Set. Note Press ◀ to exit without change.	The change is saved.
Date Format:		
1.	Go to the Date Format option.	The Date Format screen displays. 



Step	Action	Result
2.	Press ►Enter.	The Date Format settings screen displays. The checkmark indicates the current format setting. 
3.	Press ▼Next to scroll to a different date format.	
4.	Press ►Set.	The change is saved.
Time Zone:		
1.	Go to the Time Zone option.	
2.	Press ►Enter.	The Time Zone screen displays. 
3.	Press ▼Next to scroll to a different time zone.	
4.	Press ►Set.	The change is saved.
Time Server 1, 2, and 3: Requires an Administrator Password.		
Set Time: Displays the network time if the Time Server option is enabled and also allows you to set the time manually. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> Note If you set the time manually, the phone will not try to synchronize the time with the Time Server until the next time the phone is restarted. </div>		
1.	Go to the Set Time option.	The Set Time screen displays. 
2.	Press ►Enter.	The time setting screen displays. 
3.	Use the keypad to enter the time.	
4.	Press the * key to toggle between AM and PM.	

Step	Action	Result
5.	Press ► Done . Note Press ▲ Cancel to exit without change.	The change is saved.
Set Date: Displays the network date if the Time Server option is enabled and also allows you to set the date manually. Note If you do set the date manually, the phone will not try to synchronize with the Time Server until the next time the phone is restarted.		
1.	Go to the Set Date option.	The Set Date screen displays. 
2.	Press ► Enter .	The date setting screen displays. 
3.	Use the keypad to enter the date.	
4.	Press ► Done . Note Press ▲ Cancel to exit without change.	The change is saved.





4.1.9 Language

This option sets the language for all of the phone display screens. The phone is permanently set to the English language.

4.1.10 Phone Status

Step	Action	Result
1.	Go to Options > Phone Status .	The Phone Status option displays. 
2.	Press ► Enter .	The phone status screen displays. 

IP & MAC Addresses:		
1.	Press ▼ to go to IP&MAC addresses.	<div>1 IP&MAC Addresses</div> <div>▼Next ▶Enter</div>
2.	Press ▶Enter.	The IP Address displays. <div>IP Address: 10.20.107.28</div> <div>▼Next ◀Enter</div>
3.	Press ▼Next.	The MAC address displays. <div>MAC Address: 00085D1931D8</div> <div>▼Next ◀Enter</div>
4.	Press ◀Options to exit.	
LAN Port:		
1.	Go to LAN Port.	<div>2 LAN Port</div> <div>▼Next ▶Enter</div>
2.	Press ▶Enter.	The LAN Port information displays. <div>100/Full (Auto)</div> <div>◀Back</div>
3.	Press ◀Back to go back to the LAN Port menu item.	
PC Port:		
1.	Press ▼Next to go to PC Port.	<div>3 PC Port</div> <div>▼Next ▶Enter</div>
2.	Press ▶Enter.	The PC Port information displays.
3.	Press ◀Back to go back to the PC Port menu item.	
Firmware Info:		
1.	Press ▼Next to go to Firmware Info.	<div>4 Firmware Info</div> <div>▼Next ▶Enter</div>
2.	Press ▶Enter.	The Firmware information displays. <div>Firmware: 3.2.2.1035 BootROM:2.4.0.80</div>

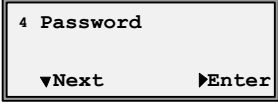
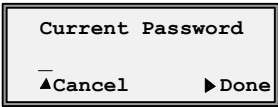
3.	Press ▼ to display all the information.	
Error Messages:		
1.	Press ▼Next to go to Error Messages .	
2.	Press ►Enter.	Any error messages display. Normally your display will look like the following: 
3.	Press ▼ to display all the information.	
Copyright:		
1.	Press ▼Next to go to Error Messages .	
2.	Press ►Enter.	Any error messages display. Normally your display will look like the following: 
3.	Press ▼ to display all the information.	

4.1.11 Password

This option allows you to change the user password for your phone. The password protects your phone from changes made on the web.

Valid values for the password are 0 to 4294967295 (integers only; symbols and alpha characters are not allowed).

The default password is an empty string "" (field is blank.)

Step	Action	Result
1.	Go to Options > Password .	The Password screen displays. 
2.	Press ►Enter.	The Current Password screen displays. 

Step	Action	Result
3.	Enter the current user password. Note If the password <i>has never been set up</i> , press ▼ and continue with the new password setup.	
4.	Press ►Done.	
5.	Enter the new user password.	
6.	Press ►Done.	
7.	Re-enter the new user password.	
8.	Press ►Done.	

4.1.12 Admin Menu

The options in this menu are configured by a system administrator and require an administrator password.

4.1.13 Restart Phone


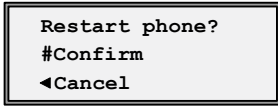
Occasionally you may be instructed to restart your phone to check for updates from the configuration server. This option allows you to restart the phone.

Note

Your phone is temporarily out-of-service during the restart and download processes.

Caution!

Do not unplug or remove power to the phone while it is checking or installing firmware.

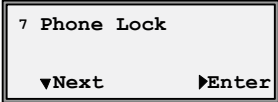

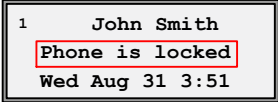
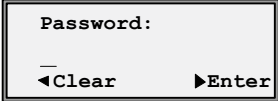
Step	Action	Result
1.	Go to Options > Restart Phone .	
2.	Press ►Enter.	The restart screen displays. 
3.	Press #. Note Press ◀Cancel to cancel without restarting the phone.	The phone restarts.

4.1.14 Phone Lock using the Phone UI

You can lock the phone to prevent it from being used or configured.



While the phone is locked, only emergency 911 dialing is permitted.

Step	Action	Result
Lock the Phone:		
1.	Go to Options > Phone Lock .	The Phone Lock screen displays. 
2.	Press Enter .	The phone lock message displays. 
3.	Press Lock .	The following message displays:  The red status lamp (MWI) at the top right of the phone turns on.
Unlock the Phone:		
1.	Press the Options key.	The password screen displays. 
2.	Enter your user password. Note If the user password has never been set up, press the Enter key without a password.	The phone is unlocked. The red status lamp at the top right of the phone turns off.

5 Call Handling

5.1 Place a Call

You can place a call using one of the following methods.

Note

If you are unable to make calls within certain area codes, check with your system administrator for any toll restrictions placed on your extension that may restrict your access to long distance area codes or dialing prefixes.

Step	Action	
1.	Dial the number.	Note Live Dialpad is set to ON by default.
Note Speaker mode is the default audio mode . The Speaker turns on automatically when you dial the number, and the call is placed.		
Handset:		
1.	Lift the handset.	The Dial screen displays. <div data-bbox="948 968 1263 1152"> <div>Line/Call Appearance Number</div> <div>1 1002</div> <div>► Dial</div> </div>
	Note The phone automatically selects the next available line/call appearance.	
2.	Dial the number.	
Speaker Key:		
1.	Press the Speaker key.	
2.	Dial the number.	
Line/Call Appearance Key:		
1.	Press a line/call appearance key.	
2.	Dial the number.	

5.2 Receive a Call

When a call rings in at your phone, the inbound call screen displays, the line/call appearance lamp flashes, and the MWI lamp flashes.



5.2.1 Answer an Incoming Call

If the phone is already connected to a call, pressing the line/call appearance key for the new incoming call automatically places the connected call on hold and answers the new call.

If you cannot answer, the call is redirected to a pre-defined destination such as your voice mailbox.

Step	Action
Hands-free Operation:	
1.	<ul style="list-style-type: none"> Press the line/call appearance key. Or <ul style="list-style-type: none"> Press the Speaker key.
Headset:	
1.	Press the Speaker key.
Handset:	
1.	Lift the handset.

5.3 Connected Call

The connected state screen displays when you are talking to someone on the phone.

1 Mary Jones
1003
02:23

5.4 Handle Calls Using the Speaker

The Speaker allows you to speak to someone without using the handset or headset. The Audio Mode for your phone is set to "Speaker" by default. See the [Set Audio](#) options.

Step	Action
Dial using the speaker:	
1.	Press the Speaker key and enter a number from dial tone.
Answer a call using the speaker:	
1.	Press the Speaker key or the line/call appearance key.
Switch between the speaker and handset in speaker audio mode:	
1.	<ul style="list-style-type: none"> Lift the handset to go back to the handset. Press the Speaker key to switch back to the speaker.
Switch between the speaker and the headset in speaker/headset audio mode:	
1.	Press the Speaker key.

5.5 Handle Calls Using a Headset

Ensure that you have selected a headset audio mode by accessing the Options list. For more information on how to set this audio option in your phone, see the [Set Audio](#) options.

Step	Action
1.	Plug the headset into the jack.
2.	<p>Press the Speaker key or the line/call appearance key to get dial tone or to answer an incoming call.</p> <p>Depending on the audio mode selected from the Options list, a dial tone or an incoming call will be received on either the headset or the speaker.</p> <p>Also see Headset Volume.</p>

5.6 End a Call

Step	Action
1.	<p>From a connected call:</p> <ul style="list-style-type: none">• Press the Goodbye key. <p>Or</p> <ul style="list-style-type: none">• Place the handset back on hook if connected through the handset.



6 Phone Features

6.1 Overview

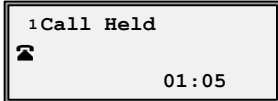
Features are configured on your phone according to the needs of your organization. The features are configured on the 4 available programmable keys at the top of the phone.

6.2 Hold

6.2.1 Place a Call on Hold

Note

- You cannot place a call on hold or retrieve a call on hold if you are viewing the [Redial List](#) or [Callers List](#).
- If you have left a call on hold for a pre-defined period of time (if the option is configured on your system), the system will ring your phone until you answer the call. When you answer, you are re-connected to the held party.
- With multiple calls on hold, or if your held call information is not on the screen, you can press ◀ or ▶ to view the screen that shows information about the calls on hold.

Step	Action	Result
1.	From a connected call: Press the Hold key.	<ul style="list-style-type: none"> • The line lamp flashes slowly. • The MWI lamp on the top of the phone flashes. 

6.2.2 Retrieve a Held Call

Only the phone that placed the call on hold can retrieve the call on hold, unless the held call is on a directory number that appears on more than one phone.

Step	Action	Result
1.	Press the Line key where the call is on hold. Note <ul style="list-style-type: none"> • The Goodbye key will not retrieve a held call. • The Hold key will not retrieve a held call. 	You are reconnected to the call.

6.2.3 Automatic Hold

The 6753i will automatically put your current call on hold when you press a new line key.

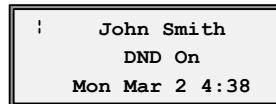
6.2.4 Manage Multiple Calls on Hold

Step	Action	Result
1.	Press ◀ or ▶ to scroll through the call list information.	
Connect to an incoming call or re-connect to a call you placed on hold:		
1.	Press the line key.	
If the phone is already connected to a call:		
1.	Press the line key for the new incoming call.	The current call is automatically placed on hold, and the new call is answered.

6.3 Do Not Disturb

The Do Not Disturb (DND) feature on the 6753i allows you to block incoming calls. The DND key toggles this feature on and off.


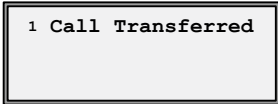

When DND is activated, an incoming call does not ring at the phone. The call will forward directly to your pre-defined call forward busy destination, usually your voicemail. If the phone shares a line with other phones, only the phone where DND was set is affected.

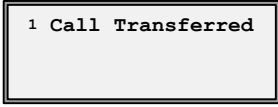
Step	Action	Result
Activate Do Not Disturb:		
1.	Press the DND key.	The Do Not Disturb message displays. <div data-bbox="937 1192 1211 1295" data-label="Image">  </div>
Deactivate Do Not Disturb:		
1.	Press DND .	The feature is deactivated.

6.4 Transfer

Note

The Xfer key is Key 5 by default.

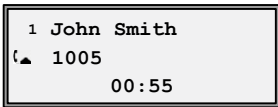
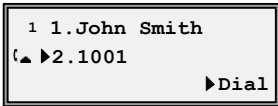
Step	Action	Result
Unannounced transfer: When you transfer a call directly to another party and complete the transfer without consulting with the receiving party, it is called an unannounced transfer.		
1.	You are already connected to the call to transfer.	
2.	Press the Transfer key.	<ul style="list-style-type: none"> The calling party is placed on hold. You hear dial tone.
3.	Enter the number of the destination party.	The number is automatically dialed.  Note You can use the Dial softkey for numbers that are not in your dial plan.
4.	Before the destination party answers: <ul style="list-style-type: none"> Press Transfer again. Or <ul style="list-style-type: none"> Press the Goodbye key. Or <ul style="list-style-type: none"> Hang up. 	The transfer completes. 
Announced Transfer: Transfer a call to another party and remain on the line to talk to the other party before you complete the transfer. After consultation, you can either complete the transfer or go back to the original caller.		
1.	Press Transfer .	<ul style="list-style-type: none"> The calling party is placed on hold. You hear dial tone.
2.	Enter the number of the destination party.	The number is automatically dialed. 
3.	When the destination party answers the call: Consult with the destination party.	

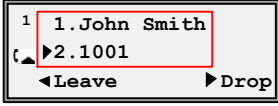
Step	Action	Result
4.	<ul style="list-style-type: none"> Press Transfer again. Or <ul style="list-style-type: none"> Press the Goodbye key. Or <ul style="list-style-type: none"> Hang up. 	<p>You are dropped from the call, and the transfer completes.</p> 
Cancel a transfer:		
1.	Press Cancel while the destination is ringing.	You are reconnected to the originating party.
Drop the destination party without completing the transfer:		
1.	After consulting with the destination party: Press Drop .	The originating party is still on hold.
2.	<ul style="list-style-type: none"> Press the Line key. Or <ul style="list-style-type: none"> Press the Hold key. 	You are reconnected to the originating party.

6.5 Conference

The 6753i supports up to three parties in a conference call.

6.5.1 Establish the Conference

Step	Action	Result
1.	Connect to the first party to include in the conference.	
2.	Press the Conf key.	<ul style="list-style-type: none"> The first party is placed on hold and the line lamp flashes slowly. You hear dial tone.
3.	Enter the number of the second party to add to the conference.	<p>The number is dialed automatically.</p> 
4.	<p>Wait for the second party to answer and consult with the second party.</p> <p>Note</p> <p>You should always consult with a new party before adding them to the conference.</p>	The original party is still on hold and the lamp is flashing.

Step	Action	Result
5.	Press the Conf key again.	<ul style="list-style-type: none"> The conference is established. A list of the other two parties in the conference displays on the originator's screen. 
If you do not wish to add the second party to the conference:		
1.	Press Cancel while the second party's phone is ringing.	You are reconnected to the first party.
Drop the second party after consultation without establishing a conference:		
1.	After consulting with the second party: Press Drop .	The first party remains on hold.
2.	<ul style="list-style-type: none"> Press the Line key. Or <ul style="list-style-type: none"> Press the Hold key. 	You are reconnected to the first party.
Drop a party from an active conference:		
1.	Use ▲ or ▼ to point to the party to drop.	You remain connected to the other party.
2.	Press Drop .	
Conference two separate calls already on hold:		
1.	Press Conf .	Both calls are on hold.
2.	Press the Line key of the first held call.	The first line is connected.
3.	Press Conf again.	
4.	Press the Line key of the second held call.	The conference is established.

6.6 Park and Pickup

The Call Park feature allows you to park a call so that any member of the group can retrieve it.

A call can be parked against any number in the group, including your own number.

You can only have one call parked at a time.

A 45-second timer is started when you park a call. If the timer expires and your line is idle, the system rings your line. If your line is not idle, the timer is restarted for 10 seconds and the call remains parked. This procedure is repeated until your line is idle, or the parked call is retrieved or released.

6.6.1 Default Display

- The Park key is visible only when a call is connected.
- The Pickup key is visible only the phone is idle or when the phone is off hook.

6.6.2 Use Park and Pickup

Step	Action	Result
Park a Call:		
1.	From a connected call: Press the Park key.	The feature access code for Park is dialed and you hear instructions given by the system.
2.	<ul style="list-style-type: none"> Dial the number where you want to park the call plus the # key. Or <ul style="list-style-type: none"> Dial # to park the call on your number. 	If the call is parked successfully, you hear the message "Your call has been Parked. Thank you."
3.	<ul style="list-style-type: none"> Hang up the handset. Or <ul style="list-style-type: none"> Press the Goodbye key. 	
Pick up a Parked Call:		
1.	Lift the handset.	The Pickup key appears.
2.	Press the Pickup key.	You hear the instructions given by the system.
3.	<ul style="list-style-type: none"> Dial the number where the call was parked plus the # key. Or <ul style="list-style-type: none"> Dial # to pick up a call parked on your own number. 	You are connected to the parked call.

6.7 Call Forwarding Always, Busy, No Answer

The following procedures apply to all Call Forwarding modes using keys assigned as Call Forwarding activation/deactivation keys:

- Call Forwarding Always
- Call Forwarding Busy
- Call Forwarding No Answer
- Call Forwarding Always to Voicemail

- Call Forwarding Busy to Voicemail
- Call Forwarding No Answer to Voicemail

Note

You can also set up Call Forwarding using the [Phone UI](#).

Step	Action	Result
Activate:		
1.	<ul style="list-style-type: none"> Press the appropriate Call Forwarding activation key. <p>Or</p> <ul style="list-style-type: none"> Dial the appropriate activation feature access code. 	The system prompts you for the destination number.
2.	Enter the destination number + the pound key (#). Note If no phone number is entered, calls are forwarded to the number that was previously configured.	The system plays the confirmation announcement.
3.	Hang up.	
Deactivate:		
1.	<ul style="list-style-type: none"> Press the Call Forwarding deactivation key. <p>Or</p> <ul style="list-style-type: none"> Dial the appropriate deactivation code. 	The system plays the confirmation announcement.
2.	Hang up.	

6.8 Call Return

The Call Return feature enables you to call the last party that called, whether or not the call was answered.

Step	Action	Result
1.	<ul style="list-style-type: none"> Press the Call Return key. <p>Or</p> <ul style="list-style-type: none"> Dial the Call Return feature access code. 	The number of the last party that called you is automatically dialed.

6.9 Call Waiting

The Call Waiting feature allows you to answer a call while already on another call. Call Waiting is “On” by default, but can be deactivated. It can also be canceled per call.

Step	Action	Result
You are on an active call and hear the Call Waiting tone.		
1.	Press the flashing Line/Call Appearance key of the waiting call.	You are connected with the waiting party and the original party is placed on hold.
2.	Press the Line/Call Appearance key of the original call to return to the first party.	The second party is now on hold.
If one party hangs up while the other party is held or waiting, your phone rings.		
1.	Answer the call.	You are reconnected to the held party.

6.10 Directed Call Pickup

Directed Call Pickup allows you to pick up a call ringing at another extension in the same group.

Step	Action	Result
1.	<ul style="list-style-type: none"> Press the Directed Call Pickup key. <p>Or</p> <ul style="list-style-type: none"> Dial the Directed Call Pickup feature access code. 	You hear dial tone. There are no system voice prompts.
2.	Dial the extension of the ringing party.	<p>You are connected to the call.</p> <p>Note</p> <p>If the ringing party has already answered the call, or if it has no alerting call, or if the dialed extension is invalid, you will receive reorder.</p>

6.10.1 Directed Call Pickup Feature Interactions

The main feature interactions introduced by this feature are described in the following table.

Feature	Interaction Description
Call Waiting	It is not possible to pick up a waiting call. A call must be ringing to be picked up.
Call Forwarding No-Answer	You can pick up a ringing call before the call is forwarded by Call Forward No-Answer (CFNA). Picked up calls are not forwarded by the user picking up the call.
Call Hold and Retrieve	You can place a call on hold and do a Directed Call Pickup of another call.
Call Notify	Directed Call Pickup does not send a call notify message for picked-up calls.

Feature	Interaction Description
Call Transfer (Unannounced)	You can pick up an unannounced (blind) transferred call, and you can also transfer a picked-up call.
Do Not Disturb	You can pick up calls regardless of whether the answering party is accepting calls.
Three-Way Call	It is not possible for the conference controller to pick up another call. However, a participant in a 3-way call can pick up another call by putting the original call on hold and dialing the Directed Call Pickup access code or pressing the Directed Call Pickup key.

6.11 Directed Call Pickup with Barge-In

Directed Call Pickup with Barge-in functions the same as Directed Call Pickup and allows you to pick up a call ringing at another extension in the same group. However, it also allows you to barge in on the call if the call was already answered. When the barge-in occurs, a 3-way conference call is established between the parties. You, as the Barge-in user, have control of the conference.

Step	Action	Result
1.	<ul style="list-style-type: none"> Press the Directed Call Pickup Barge-In key. Or Dial the Directed Call Pickup Barge-In feature access code. 	You hear dial tone.
2.	Dial the extension of the ringing party.	You are connected to the call.

6.12 Autodial (Hotline and Warmline)

Your System Administrator can configure an autodial feature on your phone. If autodial is enabled, the phone automatically dials a preconfigured number whenever it is off-hook. Depending on the configuration specified by your Administrator, the Autodial functions as either a “hotline”, or as a “warmline,” as follows:

- Hotline: The IP phone immediately dials a preconfigured number when you lift the handset.
- Warmline: The IP phone waits for a specified amount of time after you lift the handset before dialing a preconfigured number. If you do not dial a number within the time allotted, then the IP phone begins to dial the number.

Note

- Any speed dial numbers that you configure on your IP phone are not affected by autodial settings.
- If Autodial is configured on your phone, any lines that function as hotlines do not accept conference calls, transferred calls, and/or intercom calls.

6.13 Intercom


6.13.1 Outgoing Intercom

You can use the **Intercom** key to automatically connect to a remote extension. This feature is enabled by the system administrator. You must have an Intercom softkey to use the Intercom feature.

6.13.2 Incoming Intercom

By default, the IP phone allows incoming intercom calls to be automatically answered without having to set up an **lcom** key on your phone. The phone automatically plays a warning tone and mutes the microphone when it receives an incoming intercom call. If the intercom call comes to the phone while an active call is already present, the phone puts the active call on hold and answers the intercom call.

6.13.3 Use the Intercom Softkey

Step	Action	Result
Place an Intercom Call:		
1.	Press the INCM key.	
2.	Enter the extension number of the person you wish to call on the intercom or the BLF key for that extension.	<ul style="list-style-type: none"> You hear a beep tone. Your phone automatically connects with the remote extension. You can speak through the remote phone speaker.
End an Intercom Call:		
1.	<ul style="list-style-type: none"> Hang up the phone. Or Press  . Or Press the line appearance key. 	When you hang up, the remote phone also hangs up.

6.14 Stuttered Dial Tone

If this feature is enabled on your phone, you hear stuttered dial tone when there is a message waiting on your phone.

6.15 Speeddial

The Speeddial feature allows you to configure a Speeddial key on your phone. You can assign and label Speeddial keys using the [Press and Hold](#) method.

The Speed Dial Edit feature allows you to edit a previously assigned Speeddial key using the Phone UI Options List.

6.15.1 Edit a Speeddial Key using the Options List

You can edit a pre-assigned Speeddial key using the Options List.

Step	Action	Result
1.	Go to Options > Preferences .	
2.	Press ►Enter .	
3.	Press ▼ to go to the Speed Dial Edit option.	
4.	Press ►Enter .	<ul style="list-style-type: none"> The Speed Dial Edit screen displays. All programmable Speeddial lamps flash. <div>Speed Dial Edit: Press SD button</div>
5.	Press the Speeddial key to edit.	The edit screen displays. <div>2398 ▲Cancel ►Save</div>
6.	Use the ◀ key to erase the number.	
7.	Enter the new number including any access numbers.	
8.	Press ►Save .	The Line screen displays. Line 1 is the default. <div>Line: 1 ▲▼Change ◀Cancel ►Save</div>
9.	Choose another line if desired.	
10.	Press ►Save .	The change is saved. <div>Saved Memory Key 2398</div>

6.15.2 Add a new Speeddial Key (Press and Hold)

You can press and hold a programmable key that has no pre-assigned function to create a new Speeddial key.

Step	Action	Result
1.	Press on an available programmable key for 3 seconds.	The edit screen displays. <div>Speeddial Enter Number ></div>

Step	Action	Result
2.	In the Enter Number field: Enter a number (up to 16 numbers).	
3.	Press ► Save .	The change is saved. <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p>Saved Memory Key</p> <p>2398</p> </div>

6.16 Speed Dial/Xfer

A Speeddial key allows you to use one key to dial a frequently dialed number. An Xfer key allows you to transfer a call. The Speeddial/Xfer key combines the Speeddial and Xfer key's functionality together allowing you to transfer calls or use Speeddial with one key.

The Speeddial/Xfer key has the following capabilities:

Function	Description
Speeddial/Xfer and Speeddial	Pressing the Speeddial/Xfer key while the phone is idle causes the phone to go off-hook and dial the predefined extension.
Speeddial/Xfer and Blind Transfer	When the phone is connected to a call, pressing the Speeddial/Xfer key blind-transfers the call to the predefined destination. If the transfer fails, the message "Transfer Failed" displays, and you can retry the call by pressing the line key again.
Speeddial/Xfer and Call Forward	Pressing the Speeddial/Xfer key while the phone is ringing forwards the call to the predefined number.

6.17 Speed Dial/Conf

The **Speeddial/Conf** key allows you to conference another party at a pre-defined number while on an active call. The line focus changes to the dialing line. A cancel softkey displays on the phone allowing you to abort the conference speeddial if required.

The following messages display:

- **Ringing...** - Displays when the far end is ringing.
- **Conf. Unavailable** - Briefly displays when a conference is already in progress.

For example, while on a call, you can use the Speeddial/Conf softkey to dial a recording service and have the resulting conference recorded.

Note

If currently in a conference, the Speeddial/Conf softkey is disabled on the active call.

6.18 Shared Call Appearance Call Retrieve

Shared Call Appearance (SCA) is when incoming calls are presented to multiple phones simultaneously. For example, it is the ability to assign the boss' extension to a button on the secretary's phone. Calls can be transferred between two phones with the same extension button by simply putting the call on hold at one phone and picking it up on the other. Status LEDs flash in unison, allowing all people sharing the extension to see the status at a glance.

The phones include an enhanced SCA for the servers that support call bridging and allows two or more SCA users to be connected in a call with a third party. Refer to the following example.

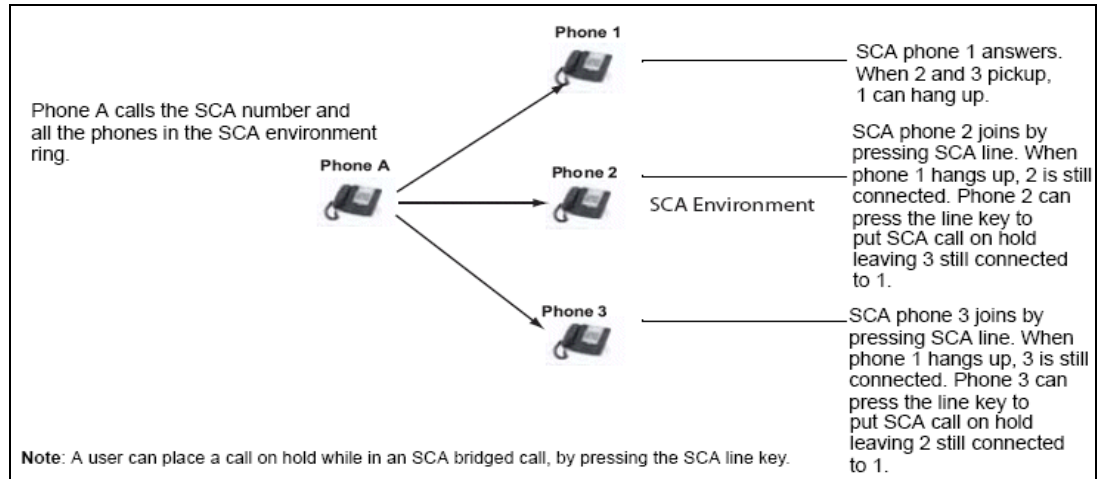


Figure 4 SCA Call Bridging

In the example above, when a call comes into Phone 1, Phone 2 and Phone 3 can pick up the same call by pressing the SCA line key. Phone 2 and 3 display the call they are bridging into on the phone display. Existing SCA parties in a bridge or one-to-one call hear an audible beep when another party has joined the call.

Note

Your Administrator must enable/disable the beep on the server-side.

If a phone is configured for SCA bridging and it attempts to join a call, but the account on the server does not have this functionality enabled, an error message displays to the LCD on the phone.

The SCA call bridging feature is disabled by default on all phones. Your Administrator can enable/disable this feature if required. Contact your System Administrator for more information.

6.18.1 Keys States and LED Behavior

There are two call states on the phones that support SCA bridging:

- **Bridge-active** - A bridged call is in progress
- **Bridge-held** - The 3rd-party (i.e., non-SCA party) in the bridge is on hold.

The following tables provide the key states and LED behavior in an SCA bridge call for users involved in an SCA call and users not involved in the SCA call.

6.18.2 Line Keys and Idle Screens

State	Call LED	Call Caller ID	Non-Call LED	Non-Call Caller ID
Idle	N/A	N/A	Off	N/A
Seized	Solid Green	None	Solid Red	None
Progressing (Outgoing Call)	Green	Called Party	Solid Red	None
Alerting (Incoming Call)	Blinking Unselected Red	N/A	N/A	N/A
Active	Solid Green	Far-end	Solid red	Far-end
Held	Slow Flashing Green	Far-end	Slow Flashing Red	Far-end
Hold Private	Slow Flashing Green	Far-end	Solid Red	Far-end
Bridge-active	Solid Green	Far-end	Solid Red	Far-end
Bridge-held	Slow Flashing Green	Far-end	Solid Red	Far-end

6.18.3 Softkey Line Keys

State	Call Icon	Call LED	Non-Call Icon	Non-Call Caller LED
Idle	Small circle	None	Small circle	None
Seized	N/A	N/A	Solid circle	Solid Red
Progressing (Outgoing Call)	Empty circle	Solid Red	Solid circle	Solid Red
Alerting (Incoming Call)	Empty blinking circle	Flashing Red	N/A	N/A
Active	Empty circle	Solid Red	Solid circle	Solid Red
Held	Reverse empty blinking circle	Slow Flashing Red	Solid circle	Solid Red
Hold Private	Reverse empty blinking circle	Slow Flashing Red	Solid Circle	Solid Red
Bridge-active	Empty circle	Solid red	Solid circle	Solid Red
Bridge-held	Reverse empty blinking circle	Slow Flashing Red	Solid Circle	Solid Red

6.18.4 Line Key Phone Behavior

State	Call Line Key Pressed	Non-Call Line Key Pressed
Idle	N/A	Attempt to seize the line
Seized	Hang up	Ignore
Progressing	Hang up	Ignore
Alerting	Answer	N/A
Active	Hold	Bridge
Held	Retrieve	Bridge
Hold Private	Retrieve	Ignore
Bridge-active	Hold	Bridge
Bridge-held	Retrieve	Bridge

6.18.5 SCA Call Location and SCA Call Retrieve

Allows for retrieval of an active call from one Shared Call Appearance (SCA) location (for example, a mobile) to another (for example, landline).

*11	Shared Call Appearance Call Retrieve
*12	Shared Call Appearance Location Control Activation
*13	Shared Call Appearance Location Control Deactivation

6.19 XML Keys

The 6753i IP phone supports **XML** (Extensible Markup Language). Your System Administrator can create customized XML menu services to access on your phone. These services include things like weather and traffic reports, contact information, company info, stock quotes, or custom call scripts

6.19.1 Access XML Applications

Use the following procedures to access XML applications.

Step	Action	Result
1.	Press the key assigned to an XML application.	A screen displays with a menu of available features.
2.	Use the up and down arrows (▲ or ▼) to scroll through the features offered.	
3.	Select the item you want to view.	



7 Callers List and Redial List

7.1 Callers List

The Callers list is a stored log of your incoming calls. The 6731i IP Phone stores information for up to 200 incoming calls in the Callers list. By default, the Callers List key is key 4 on the top left of your phone.



You can view, scroll through, and delete entries in the Callers List and dial directly from a displayed entry.

If the phone number of an incoming or outgoing call matches a number that you have programmed with a name in a programmable key, the Callers List displays the name and number.

When the Callers List is full, the oldest call records are deleted to accommodate new caller information.

The display shows you how many callers have been added to the list since you last checked it.

7.1.1 Callers List Display

Display	Description
N	The "N" at the left of the screen indicates a new call you have not reviewed.
XX New Callers	The display shows you how many new callers were added to the list since you last checked.
	Indicates an unanswered call.
	Indicates an answered call.


7.1.2 Callers List Functions

Step	Action	Result
Access the Callers List		
1.	Press the Callers key.	The latest entry displays. <div data-bbox="943 1461 1219 1566" style="border: 1px solid black; padding: 5px; margin: 5px 0;"> 001Mary Jones ▲ 1001 Sep 1 10:45am L1 </div>
2.	Use ▲ or ▼ to scroll through the entries in the list. <div data-bbox="456 1667 532 1703" style="background-color: #cccccc; padding: 2px 5px; margin: 5px 0;"> Note </div> <ul style="list-style-type: none"> Press ▼ to see the most recent call. Press ▲ to see the oldest call. 	The entries display.

Step	Action	Result
Dial from the Callers List:		
1.	<p>From the selected entry:</p> <ul style="list-style-type: none"> Lift the handset. <p>Or</p> <ul style="list-style-type: none"> Press the Speaker key. <p>Or</p> <ul style="list-style-type: none"> Press a line appearance key. 	The number is automatically dialed.
<p>Edit a number before you dial:</p> <p>The Callers List does not save changes. Editing in the Callers List is generally used if you plan to call the number and need to add a prefix.</p> <p>In the Callers List, if a dial pad key is pressed when a number and/or a name is displayed, the cursor automatically adds the digit at the left side of the number to enable the entry of the prefix.</p>		
1.	Press the Callers List key.	
2.	<p>Use ▲ or ▼ to scroll through the entries in the list.</p> <p>Note</p> <ul style="list-style-type: none"> Press ▼ to see the most recent call. Press ▲ to see the oldest call. 	
3.	<p>Press any key on the dial pad to begin editing.</p> <p>Note</p> <ul style="list-style-type: none"> Press ► to move the cursor one digit to the right. Press ◀ to erase one digit to the left. 	
4.	<ul style="list-style-type: none"> Lift the handset. <p>Or</p> <ul style="list-style-type: none"> Press the Speaker key. <p>Or</p> <ul style="list-style-type: none"> Press a line appearance key. 	The number is dialed.

7.1.3 Missed Calls Indicator


The 6731i displays the "<Number of> Missed Calls" in the idle state screen display.



As the number of missed calls increments, the phone numbers associated with the calls are stored in the Callers List

When you review the calls in the Callers List, the number of missed calls is cleared from the idle screen display.

7.1.3.1 View Missed Calls

Step	Action	Result
1.	Go into the Callers List.	The Callers List menu displays.
2.	Use ▲ or ▼ to scroll through the entries.	Missed calls are those marked with the telephone icon with the handset ON  .

7.1.4 Delete Entries in the Callers List

Step	Action	Result
Delete one entry:		
1.	Press the Callers List key.	
2.	Use ▲ or ▼ to find the entry to delete.	
3.	Press the Delete key.	The Delete confirmation displays: <div style="border: 1px solid black; padding: 5px; text-align: center;">DELETE again to erase this item</div>
4.	Press the Delete key again.	The entry is deleted with no confirmation message.

7.2 Redial

7.2.1 Last Number Redial

You can redial the last number you dialed using the Redial key.

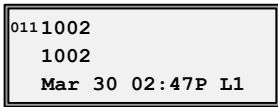
Step	Action	Result
1.	Lift the handset.	
2.	<ul style="list-style-type: none"> Press the Redial key 2 times. Or Press the Redial key 1 time. Press the Dial key 1 time. Or Dial the Last Number Redial feature access code. 	The last number you dialed displays on the screen and is automatically dialed.

7.2.1.1 Redial List

There are 100 entries in the Redial List. The list contains the name (if known), the number you dialed, the time and date the number was dialed, and the line used.

Note

You cannot edit an entry in the Redial List.

Step	Action	Result
Redial from the Redial List (On-hook)		
1.	While on-hook: Press the Redial key one time.	The Redial List displays the first entry. 
2.	Use ▲ or ▼ to find the entry to call.	
3.	<ul style="list-style-type: none"> Press an available line key. Or Press the Speaker key. Or Lift the handset. 	The number automatically dials.

Delete an Entry in the Redial List:		
1.	Find the entry to delete.	
2.	Press the Delete key.	<div>DELETE again to erase this item</div>
3.	Press the Delete key again.	The entry is deleted with no confirmation message.



Appendix A – M670i Expansion Module

The 6753i IP Phone offers the optional M670i Module that attaches to the right side of the phone to provide 36 additional keys. The keys support a variety of features including:

- Busy Lamp Fields (BLFs) (maximum of 50)
- Speeddial
- Shared Call Appearance
- Phone Lock

The M670i provides 18 keys in each column (totaling 36 keys) on the keypad. Each key provides an LED for indicating call status. The M670i provides a paper label for convenient key labeling.

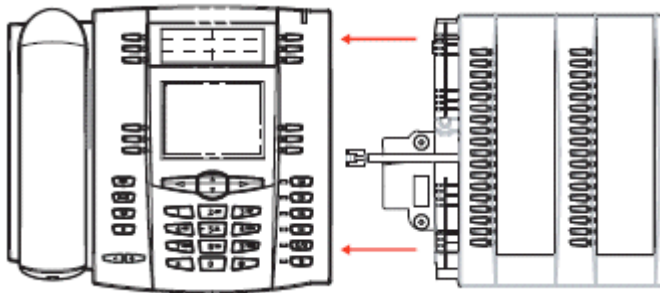


Figure 5 M670i Expansion Module

Use the M670i Expansion Module

After configuring the keys on the M670i Expansion Module, you can record the name of the key on the paper labels provided with the Expansion Module. Press the key you want to use when applicable.

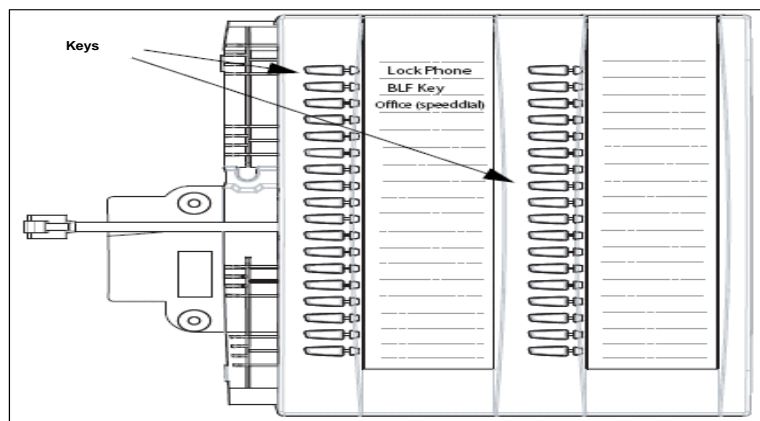


Figure 6 M670i Expansion Module with Labels



Appendix B – Clearspan Feature Access Codes

Feature Access Codes (FACs) can be set up as Speed Dial numbers and assigned to keys, or dialed directly from the keypad.

Note

The following are the default feature access codes. If the codes are customized for your site, contact your system administrator for information. Because Clearspan features are available by license only, you may not have access to all of them.

Code	Name	Definition
*34	Advice Of Charge Activation	Activates the Advice of Charge service for the next call when the service is not enabled for all calls.
*77	Anonymous Call Rejection Activation	Activates the Anonymous Call Rejection service. After the user dials the feature access code, the system plays an announcement to inform the user that the service has been successfully activated. If the service was already active, the user still receives the announcement.
*87	Anonymous Call Rejection Deactivation	Deactivates the Anonymous Call Rejection service. After the user dials the feature access code, the system plays an announcement to inform the user that the service has been successfully deactivated, even if the service was never activated.
#8	Automatic Callback Deactivation	Cancels all current pending callbacks.
#9	Automatic Callback Menu Access	Provides access to an Interactive Voice Response (IVR) menu that lists the current pending callbacks and allows the user to cancel individual callbacks.
*14	Clearspan Anywhere E.164 Dialing	Allows users to dial E.164 numbers. The user dials the feature access code as an alias to the "+" sign. The system replaces the feature access code digits with the "+" sign and resumes the call with an E.164 number.

Code	Name	Definition
*15	Call Bridge	<p>Allows a Shared Call Appearance (SCA) location to initiate or join an SCA-Bridge, upon which the Application Server automatically selects an appropriate call appearance to bridge on.</p> <p>The Call Bridge FAC becomes visible when one or more of the following services are authorized (service provider or group) or assigned (user):</p> <ul style="list-style-type: none"> Clearspan Anywhere Shared Call Appearance Shared Call Appearance 5 Shared Call Appearance 10 Shared Call Appearance 15 Shared Call Appearance 20 Shared Call Appearance 25 Shared Call Appearance 30 Shared Call Appearance 35
*72	Call Forwarding Always Activation	Redirects incoming phone calls to another number, such as a mobile phone or administrative assistant. After dialing the feature access code, the user dials the phone number where they want their calls to be redirected.
*73	Call Forwarding Always Deactivation	Deactivates the Call Forwarding Always service. Upon deactivation, calls ring on the user's phone unless the user has another service set up, such as Call Forwarding Busy, Call Forwarding No Answer, or Do Not Disturb.
21	Call Forwarding Always Interrogation	Allows the user to get the current status and destination of the Call Forwarding Always service. The status is active or inactive and the destination is voice mail or the current forwarding number.
*21	Call Forwarding Always to Voice Mail Activation	Redirects incoming phone calls to the user's voice mail.
#21	Call Forwarding Always to Voice Mail Deactivation	Deactivates the Call Forwarding Always To Voice Mail service. Upon deactivation, calls ring on the user's phone unless the user has another service set up, such as Call Forwarding Busy, Call Forwarding Busy To Voice Mail, Call Forwarding No Answer, or Do Not Disturb.
*90	Call Forwarding Busy Activation	Redirects incoming phone calls to another number, such as a mobile phone or administrative assistant, when the user is on the phone. After dialing the feature access code, the user dials the phone number where they want their calls to be redirected.
*91	Call Forwarding Busy Deactivation	Deactivates the Call Forwarding Busy service. Upon deactivation, calls ring on the user's phone unless the user has another service set up, such as Call Forwarding Always, Call Forwarding No Answer, or Do Not Disturb.

Code	Name	Definition
67	Call Forwarding Busy Interrogation	Allows the user to get the current status and destination of the Call Forwarding Busy service. The status is active or inactive and the destination is voice mail or the current forwarding number.
*40	Call Forwarding Busy To Voice Mail Activation	Redirects incoming phone calls to voice mail when his user is on the phone.
#40	Call Forwarding Busy To Voice Mail Deactivation	Deactivates the Call Forwarding Busy To Voice Mail service. Upon deactivation, calls ring on the user's phone unless they have set up another service such as Call Forwarding Always, Call Forwarding Always To Voice Mail, Call Forwarding No Answer, or Do Not Disturb.
*92	Call Forwarding No Answer Activation	Redirects incoming phone calls to another number, such as a mobile phone or administrative assistant, when the user does not answer the phone. After dialing the feature access code, the user dials the phone number where they want their calls to be redirected.
*93	Call Forwarding No Answer Deactivation	Deactivates the Call Forwarding No Answer service. Upon deactivation, calls ring on the user's phone unless they have set up another service such as Call Forwarding Busy, Call Forwarding Always, or Do Not Disturb.
61	Call Forwarding No Answer Interrogation	Allows the user to get the current status and destination of the Call Forwarding No Answer service. The status is active or inactive and the destination is voice mail or the current forwarding number.
*41	Call Forwarding No Answer To Voice Mail Activation	Redirects incoming phone calls to voice mail when the user does not answer the phone.
#41	Call Forwarding No Answer To Voice Mail Deactivation	Cancels the Call Forwarding Busy To Voice Mail service. Upon deactivation, calls ring on the user's phone unless they have set up another service such as Call Forwarding Busy, Call Forwarding Busy To Voice Mail, Call Forwarding Busy, or Do Not Disturb.
*94	Call Forwarding Not Reachable Activation	Redirects incoming phone calls to a different number when the user's device is not accessible by Clearspan. After dialing the feature access code, the user dials the phone number where they want their calls to be redirected.
*95	Call Forwarding Not Reachable Deactivation	Deactivates the Call Forwarding Not Reachable service. After deactivation, should the user's phone become unreachable, calls are no longer rerouted to an alternate device through the Call Forwarding Not Reachable service.
63	Call Forwarding Not Reachable Interrogation	Allows users to get the status of the Call Forwarding Not Reachable service.

Code	Name	Definition
#76	Call Forwarding Selective Activation	The Selective Call Forwarding service can be activated only if the service is configured with the following minimum requirements: The Default Call Forward to phone number/SIP URI is configured. At least one selective criterion is configured and active.
#77	Call Forwarding Selective Deactivation	Deactivates the Call Forwarding Selective service. After the service has been deactivated, no criteria are used when a call is being redirected.
*67	Calling Line ID Delivery Blocking per Call	Hides the user's calling line ID for the next call. Before placing a call, the user dials the feature access code; then places the call as usual.
*31	Calling Line ID Delivery Blocking Persistent Activation	Prevents display of the user's calling line ID for all calls.
#31	Calling Line ID Delivery Blocking Persistent Deactivation	Displays the user's calling line ID for all calls.
*65	Calling Line ID Delivery per Call	Displays the users calling line ID for the next call.
*68	Call Park	Places a call on hold with the intent of retrieving it from another extension. The call can be parked on the user's own extension or on another extension within the same group.
*88	Call Park Retrieve	Retrieves a call that has been parked.
*98	Call Pickup	Answers the ringing phone within the assigned call pickup group. If more than one phone in the assigned call pickup group is ringing, the phone that has been ringing the longest is answered. Pickup groups are defined by the group administrator.
*11	Call Retrieve	Retrieves an existing active call from another endpoint. The user dials the feature access code from the location where the call is to be retrieved. This feature can be used from the primary location, from a Shared Call Appearance alternate location, or from a Clearspan Anywhere location.
*69	Call Return	Call the phone number of the last received call. Calls can be returned only to numbers that are acceptable according to the user's Outgoing Calling Plan.
#92#	Call Return Number Deletion	Allows the user to delete the last incoming number for the Call Return service.
*43	Call Waiting Persistent Activation	Turns on the Call Waiting service for all calls.
#43	Call Waiting Persistent Deactivation	Turns off the Call Waiting service for all calls.
*70	Cancel Call Waiting	Turns off the Call Waiting service for the next call.

Code	Name	Definition
*99	Clear Voice Message Waiting Indicator	Clears the audible (and visible for some devices) message waiting indicator on the user's phone.
33	Communication Barring User-Control Activation	Activates the user's current communication barring profile.
#33*	Communication Barring User-Control Deactivation	Deactivates the user's current communication barring profile.
*#33#	Communication Barring User-Control Query	Provides information about the user's current communication barring profile.
*57	Customer Originated Trace	Places a trace on the last number that called the user.
*97	Directed Call Pickup	Answers a call at a specific extension within the assigned call pickup group. To answer the ringing call at an extension, the user dials the feature access code followed by that extension. Call pickup groups are defined by the group administrator.
*33	Directed Call Pick-up with Barge-in	Dials an allowed prefix, followed by the assigned code and an extension to either pick up a ringing call in the user's group or to join an ongoing call with someone in the group.
*55	Directed Voice Mail Transfer	Transfers a caller on hold to voice mail.
*80	Diversion Inhibitor	Prevents redirection services from being activated on the terminating side of an unanswered call.
*78	Do Not Disturb Activation	Activates the Do Not Disturb service. When the service is active, the user's phone does not ring and all calls receive busy treatment, such as a voice message.
*79	Do Not Disturb Deactivation	Turns off the Do Not Disturb service.
#83	Escalate Call Supervision	Call center agents can use this code to escalate calls to a supervisor. A supervisor who is not on a call and who does not have the Do Not Disturb service enabled is considered available and the call is routed to that supervisor. The caller is put on hold by the agent when the escalation to the supervisor is initiated. The feature access code is available to agents with Call Center – Standard or Call Center – Premium service assigned.
*22	Flash Call Hold	Places a call on hold with the flash hook to place another call. Users can toggle between the two calls by pressing the flash-hook.
#72	Forced Forwarding Activation	Activates forced forwarding for a call center queue.
#73	Forced Forwarding Deactivation	Deactivates forced forwarding for a call center queue.
#58	Group Call Park	Hunts for the first available user in the assigned call park group and parks the call there.


Code	Name	Definition
#82	Initiate Silent Monitoring	A supervisor can use this code to silently listen in on a call handled by an agent that they are monitoring. This feature access code is available to supervisors with the Call Center Monitoring service assigned.
*66	Last Number Redial	Dials the most recently dialed phone number called from the user's extension.
*96	Legacy Automatic Callback Invocation	Allows users to camp on a busy called party. When the user dials the feature access code after a call to a busy destination, a callback request is created and the user is automatically called back when the called party hangs up.
#96	Legacy Automatic Callback Cancelation	Cancels all active Legacy Automatic Callback requests.
*12	Location Control Activation	Allows users to activate a location. The feature access code has to be dialed from the location to activate. This feature can be used from a Shared Call Appearance alternate location or a Clearspan Anywhere location.
*13	Location Control Deactivation	Deactivates a location. The feature access code has to be dialed from the location to deactivate. This feature can be used from a Shared Call Appearance alternate location or a Clearspan Anywhere location.
#80	Make Outgoing Call as Call Center	Allows users working as call center agents to make calls using a call center phone number. Users can thus override the default setting configured by the administrator.
#81	Make Personal Outgoing Call	Allows users working as call center agents to make calls using their own phone number. Users can thus override the default setting configured by the administrator.
*60	Music On Hold Per-Call Deactivation	Deactivates the Music On Hold service for the current calls.
#70	Night Service Activation Manual Override	Activates Night Service for a specified call center at the time of activation. Calls incoming to the queue are provided with the Night Service Manual Override announcement and transferred to the queue configured for the regular Night Service. The queue remains in that state until the Night Service Manual Override service is deactivated.
#71	Night Service Deactivation Manual Override	Deactivates Night Service Manual Override and the call center returns to its configured behavior.
*610	No Answer Timer	Sets the numbers of rings before No-Answer handling is applied to the Voice Messaging, Third-Party Voice Mail Support, Call Forwarding No Answer, Call Forwarding No Answer To Voice Mail, and Sequential Ringing services.

Code	Name	Definition
*71	Per Call Account Code	Charges a call to an account code assigned to the user.
*50	Push to Talk	Provides an intercom-like functionality where the user can call another party and be instantly connected.
*75	Speed Dial 100	Calls the two-digit speed dial number.
*74	Speed Dial 8	Calls the two to nine-digit speed dial number.
*47	Sustained Authorization Code Activation (calls unlocking)	Unlocks user's calls. When the user is required to provide authorization codes for outgoing calls, this code allows them to "unlock" this requirement. Having unlocked code activation, the user is no longer prompted for an authorization code and their calls proceed without interruption.
*37	Sustained Authorization Code Deactivation (calls locking)	Locks user's calls. When the user dials this feature access code, the services that require authorization codes for outgoing calls return to their normal behavior and prompt the user for an authorization code.
*86	Voice Mail Retrieval	Allows users to retrieve Clearspan and third-party voice mail.
*62	Voice Portal Access	Allows users to access their Voice Portal.



Appendix C - Troubleshooting

The following are common problems associated with the phone and possible solutions.

Problem	Possible Solution(s)
Network Disconnected message	<p>The Network Disconnected prompt appears on the display and the telephone status lamp turns on if phone is not properly connected to the network. The phone also displays the default time and date of 12:00 am Jan 1st, 2005 or the equivalent. Check that the cables are tightly connected to the phone and to the wall jack. The phone should automatically detect when it is reconnected and will display the "Network Connected" prompt for a few seconds.</p> <p>However, if changes have been made to your phone's network settings, you may need to restart your phone.</p> <p>Contact your system or network administrator for assistance.</p>
Why is my display blank?	<p>Ensure that power is being provided to your phone. If your network does not provide inline power over Ethernet, you can obtain an additional accessory, the Aastra PoE (Power over Ethernet) inline power supply, to provide power over Ethernet locally to your phone.</p> <p>See the section "Connecting to the Network and to Power" in the <i>Aastra Model 6753i Installation Guide</i> for details.</p>
Why is my speaker not working?	<p>If you press the Speaker key and the speaker lamp flashes and you do not hear dial tone through the speaker, the Set Audio option in the phone's Options list has been set up for headset use.</p> <p>Press the Speaker key a second time and if the lamp goes out, the phone has been set up to be used only with a headset or handset. If the lamp stays on steady and you hear dial tone, the phone has been set up so that you can alternate between the speaker and the headset by pressing the Speaker key.</p>
Why can't I get dial tone?	<p>Check for any loose connections and that the phone has been installed properly. For installation instructions, refer to the "Installation and Setup" section in the <i>Aastra Model 6753i Installation Guide</i> provided with your phone.</p>
Why doesn't my phone ring?	<p>Check the ring volume on your phone. It may be turned down or turned off. To adjust the ringer volume setting, press the volume key when the phone is on-hook and idle. For more information, see Volume Key.</p>
Why is the lamp not coming on when I have a new Voicemail Message?	<p>Your phone system or service provider must provide a Visual Message Waiting service for this function to work. Contact your system administrator.</p>
Why is my handset not working?	<p>Check to ensure that the handset cord is fully connected to both the phone and handset. The handset connection on the bottom of the phone is marked with the handset symbol .</p>
How do I find the IP address of my phone?	<p>This setting is in the Options list. See IP and MAC Addresses in Appendix A.</p>

Problem	Possible Solution(s)
How do I change my User Password?	This setting is in the Options list. See Password in Appendix A.
Why does my phone display the “No Service” message?	The phone displays the “ No Service ” message if the SIP settings have not been set up correctly. You can still use the phone but it is not registered with the Registrar. For more information about registering your phone, see your system administrator.
How do I restart the IP phone?	This setting is in the Options list. See Restart Phone in Appendix A.

Index

6		Delete key.....	23
6753i IP phone.....	15	directed call pickup.....	56
features.....	15	barge-in.....	57
		feature interactions.....	56
A		Directory key.....	23
administrator menu.....	29, 43	display.....	29
automatic callback.....	24		
automatic hold.....	50	F	
		feature access codes.....	26
B		features.....	23
barge-in.....	57	firmware info.....	29, 41
blank display.....	81		
BLF.....	71	G	
		Goodbye key.....	22
C			
call		H	
end.....	47	handset.....	16
receive.....	45	handset not working.....	81
call appearance.....	26	handset volume.....	27
call forward.....	30	headset.....	16, 35
Call Forward.....	29	place and receive calls.....	47
call forwarding.....	54	volume.....	36
call park.....	53	headset volume.....	27
call pickup.....	53	headset/speaker.....	36
directed.....	56	hold.....	49
call return.....	55	retrieve.....	49
call timer.....	27	Hold key.....	22
call waiting.....	56		
Callers key.....	23	I	
callers list.....	65	idle state display.....	20
delete entry.....	67	installation.....	19
dial from.....	66	IP address.....	29, 41, 81
display.....	65		
functions.....	65	K	
missed calls.....	67	key description.....	22
calls			
place.....	45	L	
transfer.....	51	lamp	
conference.....	52	hard keys.....	26
Conference key.....	23	message waiting indicator.....	27
configuration update.....	19	speaker.....	26
connected call.....	46	LAN port.....	29, 41
connection		language.....	29, 40
handset and headset.....	16	last number redial.....	68
contrast level.....	34	line appearance.....	26
		Line appearance keys.....	22
D		line/call appearance	
date.....	37	status lamp.....	26
daylight savings time.....	38	top keys.....	26

live dialpad.....	29, 35
lock phone.....	44

M

M670i Expansion Module.....	23
M760i.....	71
MAC address.....	29, 41
message waiting.....	81
message waiting indicator.....	27
missed calls indicator.....	67
multiple calls.....	50
mute.....	28
Mute key.....	22, 28
MWI.....	27

N

Navigation keys.....	22
network disconnect message.....	81
network disconnected.....	21
no dial tone.....	81
no service.....	21, 82
no voicemail lamp.....	81

O

Options key.....	22
options list.....	29
access.....	30
administrator menu.....	43
call forward.....	30
phone lock.....	44
phone status.....	40
preferences menu.....	33
restart phone.....	43
user password.....	42

P

park.....	53
Park softkey.....	54
password.....	42
PC port.....	29, 41
phone lock.....	30, 44, 71
phone status.....	29, 40
firmware info.....	29
IP and MAC address.....	29
LAN port.....	29
PC port.....	29
PhoneFeatures.....	49
pickup.....	53
place call.....	45
power.....	81
power supply.....	81
preferences.....	29
display.....	29
language.....	29, 40
live dialpad.....	29, 35
set audio.....	29, 35

speed dial edit.....	29, 34
time and date.....	29, 37
tones.....	29

R

receive call.....	45
Redial key.....	22, 68
redial list.....	68
delete entry.....	69
restart phone.....	30, 43
retrieve held call.....	49
ring tone.....	33
ring volume.....	81
ringer volume.....	27

S

Save key.....	23
SCA.....	61
set audio.....	29, 35
set date.....	40
set time option.....	39
setup.....	19
shared call appearance.....	61, 71
speaker.....	35, 81
place and receive calls.....	46
Speaker Key.....	22
speaker lamp.....	26
speaker volume.....	27
speaker/headset.....	35
speed dial edit.....	29, 34
speeddial.....	58, 71
speeddial key.....	
edit.....	59
on unassigned key.....	59
speeddial/conf.....	60
speeddial/xfer.....	60
startup sequence.....	19
status lamp.....	26
stuttered dial tone.....	58

T

time.....	37
time and date.....	29
time server.....	37
timer.....	27
tone sets.....	34
tones.....	29
transfer.....	51
Transfer key.....	23

U

unlock phone.....	44
user password.....	29, 42, 82



V

visual message waiting.....	81
volume	
handset	27
headset	27
ringer	27

speaker.....	27
Volume key.....	22, 27

X

XML applications	63
XMI keys	63

